

PowerDash

User Guide



CDCW-PDME
Hoover.ae
Hoover.sa

MACHINE OVERVIEW

- 1 Upper handle
- 2 Lower handle
- 3 Clean water/solution tank
- 4 Dirty water tank
- 5 Nozzle
- 6 Brushbar
- 7 Trigger
- 8 Cord clips
- 9 Dirty water tank release clip
- 10 Quick pour spout
- 11 Handle release pedal
- 12 On/Off pedal
- 13 Trial size solution

Accessories

13



Unit



1. This machine is intended for household use only and NOT for commercial or industrial use.
2. Only use the machine indoors and keep the area you're cleaning well lit.
3. Keep fingers, hair and loose clothing away from moving parts and openings whilst using the machine.
4. The clean water/solution tank should be filled with warm water (max 40°C) only. Filling the clean water/solution tank with hot or boiling water will damage the machine and invalidate the guarantee.
5. This machine is not intended to be used or cleaned by persons with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given instructions concerning the safe use of the machine by a person legally responsible for their safety. They should be supervised whilst using the machine. Children shall not use, clean or play with this machine, which when not in use should be secured out of their reach.
6. Only HOOVER recommended solution should be used with this machine. Using other solutions may invalidate the guarantee.
7. Don't leave the machine plugged in when unattended.
8. Don't use the machine if it has been dropped, damaged, immersed in water or left outdoors.
9. Don't run over the cord or use the machine if the cord or plug is damaged. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
10. Don't handle the plug or use the machine with wet hands.
11. Don't leave the machine in one spot for an extended period of time when it is switched on. This machine is fitted with a rotating brushbar which, if left in one place, may cause damage to the floor surface.
12. Don't use the machine to pick up any flammable or combustible materials (lighter fluid, petrol, kerosene etc) or use the machine in an area with explosive vapours or liquid.
13. Don't use the machine to pick up hot coals, cigarette butts, matches or smoking hot burning items or use in an area that is wet or where there may be harmful fluids (chlorine, bleach and ammonia drain cleaner).
14. Don't use the power cord as a handle, pull the power cord around corners or sharp edges, or close a door over the power cord. Don't unplug the machine by pulling on the cord. Don't pull or carry the machine by the power cord.
15. Don't carry the machine whilst it's switched on.
16. Don't attempt to remove blockages with sharp objects as this may cause damage to your machine.
17. Don't use the machine with incorrect voltage as this may result in damage or injury to the user. The correct voltage is listed on the ratings label.
18. Don't use on a surface that is damaged, uneven or incorrectly fitted.
19. Always vacuum your carpets thoroughly before using the machine.
20. Check with the manufacturer of your flooring prior to using the machine. Test all carpets and rugs for colourfastness and pile distortion before full usage. Run the machine over a small hidden area. If no damage or pile distortion occurs continue cleaning.
21. Always turn off or unplug the machine from the mains before carrying out any maintenance.
22. Turn off all controls on the machine before disconnecting or connecting the power cord. After use always wrap the power cord around the cord clips provided.
23. Always keep the power cord away from the brushes whilst using the machine.
24. Always protect the power cable from heated surfaces and open flames.
25. Use only CE approved 13amp extension cords, non-approved extension cords may overheat. Care should be taken to arrange the extension cord as it can be a trip hazard.
26. Always use the machine with all water/solution tanks and filters in place.
27. Keep all openings clear and free from debris as this may affect the airflow/suction.
28. Always use the machine in an upright position. To prevent motor damage from dirty water, never hold the machine upside down or on its side.
29. Store the machine in a cool, dry area. Before storing the machine ensure all water/solutions tanks and filters are thoroughly clean and dry.

PLEASE KEEP INSTRUCTIONS FOR FUTURE USE.

PLEASE READ 'GENERAL SAFETY INFORMATION' AT THE BEGINNING BEFORE USE

IMPORTANT: Carpets should be dry vacuumed thoroughly before washing.

Test for colourfastness - Wet a white absorbent cloth with the solution. In a small hidden area of your carpet/rugs/upholstery, gently rub with the dampened cloth. Wait ten minutes and check for colour removal or bleed with a white paper towel or cloth. Check all carpets/rugs/upholstery material before first use and if your carpet has more than one colour, check all colours.

Test all flooring/carpets/rugs before first usage. Run the machine over a small hidden area. If no damage or pile distortion occurs continue cleaning.

When using the machine, basic safety precautions should always be observed. Do not over saturate your carpets and continue using dry strokes until little water is visibly passing through the nozzle.

When cleaning an entire room, move furniture out of the area to be cleaned. If the furniture cannot be moved, place aluminium foil or wax paper under the legs. This will prevent wood finishes from staining your carpet. Pin up furniture skirts and curtains.

Only use HOOVER carpet solution. Using other solutions may cause excess foaming and will invalidate the guarantee.

For heavily soiled areas, it may be necessary to repeat the cleaning process. Make criss-crossing strokes across the original pattern and overlap with each pass.

The clean water tank should only be filled with warm water (max 40 °C). Filling the clean water tank with hot/boiling water will damage your machine and invalidate the guarantee.

Empty and rinse out clean and dirty water tanks and leave to air dry before storage. Do not leave solution stored in the tanks between uses.

This is a powerful machine, before plugging in make sure all controls are turned off and hold the machine firmly when starting and during use.

WARNING: The machine has a constantly rotating brushbar. Never leave the machine in one spot for an extended period of time as this may damage the floor surface. To prevent any damage being sustained test on an inconspicuous area of the flooring.

Assembly

Attach the upper handle to the lower handle. Then push the handle into the top of the machine.



Remove the cap from the side of the clean water/solution tank and screw onto the tank to attach.



Place the tank onto the machine and push into place.

Filling the clean water/solution tank



Lift and pull to remove the clean water/solution tank.




Twist the clean water/solution tank cap anti-clockwise to remove.



Fill the clean water/solution tank with warm water (max 40°C) to the water fill line.



Pour the required amount of solution to the solution fill line.

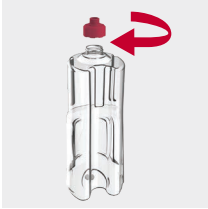

Replace the clean water/solution tank cap and twist clockwise to tighten.



Place the tank onto the machine and push into place.

Operation



Plug into the mains. Press the On/Off pedal to switch the machine on.



Press the handle release pedal and pull the handle backwards.



Squeeze the trigger to release the solution and water mix.



For best results apply water/solution on the forward stroke and release the trigger on the backward stroke to pick up water/solution. Follow with an additional dry stroke with no trigger pressed.

MAINTENANCE

WARNING: Always switch off the machine and unplug from the mains before carrying out any maintenance or troubleshooting.

Emptying and cleaning the dirty water tank

IMPORTANT: Empty and rinse out clean and dirty water tanks and leave to air dry before replacing. Do not leave solution stored in the tanks between uses.



Depress the dirty water tank release latch and lift to remove the dirty water tank from the machine.



Hold the dirty water tank over a sink and pull to open the quick pour spout.



Empty the dirty water over the sink. Rinse the dirty water tank under water (max 40°C) to remove dirt/debris.



To re-fit, tilt the dirty water tank and line the back of the tank up onto the machine. Drop the front of the tank forward until the dirty water tank release clip clicks into place.

Cleaning the filter



Depress the dirty water tank release latch and lift to remove the dirty water tank from the machine.



Wipe the filter located on the machine underneath the dirty water tank to clear any dirt/debris.



To re-fit, tilt the dirty water tank and line the back of the tank up onto the machine. Drop the front of the tank forward until the dirty water tank release clip clicks into place.

Removing and cleaning the nozzle

IMPORTANT: Carpets should be dry vacuumed thoroughly before washing. This will help prevent excessive build up of dirt/debris in the nozzle.

If the nozzle is fitted incorrectly, this will cause poor dirty water pick up.



Remove both tanks and tilt the machine back. Lift the nozzle from the top and pull forward to remove.



Rinse the nozzle under water to remove dirt/debris.




To replace the nozzle, line up the tabs on the nozzle with the tabs underneath the front of the machine. Push the nozzle down until it clicks into place.




Removing and cleaning the brushbar




Remove the tanks and lie the machine on its back exposing the brushbar.

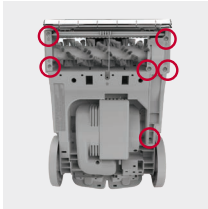

Using a crosshead screwdriver remove the 6 screws.

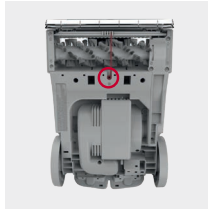


Using a crosshead screwdriver remove the screw at the bottom of the rug guard and lift upwards.

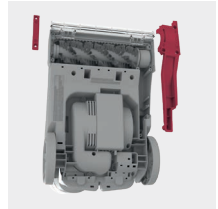

Pull to remove the brushbar end cover on the left and the belt cover on the right.



Lift the brushbar out from the left hand side first and unloop the brushbar from the belt. Pull the brushbar to remove from the machine.

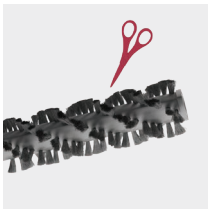

Using a pair of scissors, remove any threads or hair caught around the brushes. Rinse under warm water (max 40°C) to remove dirt/debris.

CAUTION: Always unplug the machine before performing any maintenance/troubleshooting checks.

Is there an accessory missing?

- Check the contents on the box to make sure the part is definitely included with your machine.

Why won't the machine turn on?

- The plug may not be fully pushed into the electrical socket.
- The fuse in the plug may need replacing. Always replace with a British 13amp fuse.

Why won't the machine pick up?

- The float in the dirty water tank may have been activated. Empty the dirty water tank and wait for the float to settle before re-starting your machine. Go to 'Emptying and cleaning the dirty water tank'.
- Check the brushbar for blockages and clear. Go to 'Removing and cleaning the brushbar'.
- The dirty water tank may not be fitted correctly. Go to 'Emptying and cleaning the dirty water tank'.
- Check the nozzle for blockages and clear. Go to 'Removing and cleaning the nozzle'.
- Check the filter screen located underneath the dirty water tank. Go to 'Cleaning the filter'.

Why won't the brushes spin?

- Check the brushbar is correctly fitted. Go to 'Removing and cleaning the brushbar'.
- Check the brushbar for blockages and clear. Go to 'Removing and cleaning the brushbar'.
- Check for damage to the brushbar.

Why won't the solution/clean water dispense?

- Make sure the clean water/solution tank is fitted securely. Go to 'Filling the clean water/solution tank'.
- The clean water/solution tank valve may be stuck, hold the clean water/solution tank over the sink and press the valve underneath to release.
- Squeeze the trigger on the handle to release solution and water mix.
- The water/solution tank is empty. Refill the tank. Go to 'Filling the clean water/solution tank'

Service and Help

If you have any queries or concerns about using your HOOVER, please visit [hoover.ae](https://www.hoover.ae) or [hoover.sa](https://www.hoover.sa)

Consumables

To purchase spares and accessories, please visit [hoover.ae](https://www.hoover.ae) or [hoover.sa](https://www.hoover.sa)

The use of genuine HOOVER spare parts helps to maintain optimised performance and validates your guarantee.

Technical Specifications

CDCW-PDME

Voltage:	220-240v~50/60Hz
Wattage:	800w
Cord length:	6m
Weight:	5.47kg

Subject to technical change without notice.

HOOVER is a trademark of Techtronic Cordless GP © 2024 Techtronic Cordless GP. All rights reserved.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

This marking on the product(s) and/or accompanying documents means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point.



10 NOTES

الخدمة والمساعدة

إذا كانت لديك أي تساؤلات أو مخاوف متعلقة باستخدام غسالة سجاد هوفر، فتفضل بزيارة الموقع الإلكتروني **hoover.sa** أو **hoover.ae**

المستلزمات الاستهلاكية

لشراء قطع الغيار والملحقات، تفضل بزيارة موقعنا الإلكتروني: **hoover.ae** أو **hoover.sa**. إن استخدام قطع غيار هوفر الأصلية يساعد في الحفاظ على الأداء الأمثل وعلى سلامة ضمانك.

CDCW-PDME

المواصفات الفنية

240-220 فولت ~ 60/50 هرتز

الجهد الكهربائي

800 وات

القوة الكهربائية بالواط

1.6متر

طول السلك

5.47 كجم

الوزن

خاضع للتغيير الفني بدون إشعار.

HOOVER is a trademark of Techtronic Cordless GP © 2024 Techtronic Cordless GP. All rights reserved

ينبغي ألا يتم التخلص من نفايات المنتجات الكهربائية عن طريق طرحها مع النفايات المنزلية. الرجاء إعادة تدويرها إن وجدت مراكز إعادة التدوير. راجع الأمر مع السلطة المحلية أو بائع التجزئة للحصول على النصائح المتعلقة بإعادة التدوير.

إن وجود هذه العلامة على المنتج (المنتجات) وأو المستندات المصاحبة له يعني أن المعدات الكهربائية والإلكترونية المستعملة لا يجب الخلط بينها وبين النفايات المنزلية العامة. لإجراء أعمال الإصلاح والاسترداد وإعادة التدوير بشكل صحيح، من فضلك اصطحب هذا المنتج (هذه المنتجات) إلى نقاط التجميع المخصصة حيث سيتم قبولها دون أي تكلفة. إن التخلص من هذا المنتج بشكل صحيح سيساعد في توفير الموارد الثمينة ومنع أي تأثيرات سلبية محتملة على صحة الإنسان والبيئة، والتي قد تنشأ نتيجة التعامل الخاطئ مع النفايات. الرجاء الاتصال بالسلطة المحلية للحصول على مزيد من التفاصيل حول أقرب نقطة تجميع مخصصة لك.



تنبيه: أفضل الجهاز من الكهرياء دائماً قبل إجراء أي أعمال صيانة/فحوص استكشاف الأعطال وإصلاحها

هل هناك أي ملحقات مفقودة؟

- تحقق من المحتويات المدونة على للتأكد من أن هذه القطعة بالتحديد مرفقة مع الجهاز.

ما الذي يجعل الجهاز لا يعمل؟

- ربما لا يكون القابس مدخلاً بالكامل في مقبس الكهرباء.
- ربما يكون المصهر الموجود في القابس بحاجة إلى استبدال. استبدل المصهر دائماً باستخدام مصهر 13 أمبير مطابق للمواصفات البريطانية.

ما الذي يجعل الجهاز غير قادر على الشطف؟

- قد تكون العوامة الموجودة في خزان المياه المتسخة مفعلة، أفرغ خزان المياه المتسخة، وانتظر بُتات العوامة قبل إعادة تشغيل الجهاز. يُرجى الرجوع إلى قسم "تفريغ خزان المياه المتسخة وتنظيفه".
- افحص عمود الفراشي لاكتشاف أي انسدادات، وأزلها. يُرجى الرجوع إلى قسم "خلع عمود الفراشي وتنظيفه".
- قد لا يكون خزان المياه المتسخة مركباً بالشكل الصحيح. يُرجى الرجوع إلى قسم "تفريغ خزان المياه المتسخة وتنظيفه".
- افحص الفوهة لاكتشاف أي انسدادات، وأزلها. يُرجى الرجوع إلى قسم "الفوهة وتنظيفها".
- افحص شبكة المرشّح الموجودة تحت خزان المياه المتسخة. يُرجى الرجوع إلى قسم "تنظيف المرشّح".

لماذا لا تدور الفراشي؟

- تحقق من تركيب عمود الفراشي بالشكل الصحيح. يُرجى الرجوع إلى قسم "خلع عمود الفراشي وتنظيفه".
- افحص عمود الفراشي لاكتشاف أي انسدادات، وأزلها. يُرجى الرجوع إلى قسم "خلع عمود الفراشي وتنظيفه".
- افحص عمود الفراشي للتحقق من أي تلف.

لماذا لا يخرج محلول التنظيف/المياه النظيفة؟

- تأكد من تركيب خزان المياه النظيفة/محلول التنظيف بالشكل الصحيح. يُرجى الرجوع إلى قسم "ملء خزان محلول التنظيف/المياه النظيفة".
- قد يكون صمام خزان المياه النظيفة/محلول التنظيف عالقاً، أمسك خزان المياه النظيفة/محلول التنظيف فوق الحوض، واضغط على الصمام الموجود في الأسفل لتحريره.
- اضغط على الزر الموجود في المقبض لإطلاق خليط محلول التنظيف والماء.
- قد يكون خزان المياه/محلول التنظيف فارغاً. أعد ملئ الخزان. يُرجى الرجوع إلى قسم "ملء خزان محلول التنظيف/المياه النظيفة".

7: الصيانة

خلع الفوهة وتنظيفها

تنبيه مهم: يجب أن يكون السجاد نظيفاً وأن يتم تنظيفه بالمكنسة الكهربائية في وضع جاف قبل الغسل. سيساعد ذلك على منع تراكم الأوساخ/الشوائب في الفوهة.

في حال تركيب الفوهة بشكل غير صحيح، سيؤدي ذلك إلى ضعف شطف المياه المتسخة.



لإعادة تركيب الفوهة، حاذ الألسنة الموجودة في الفوهة مع الألسنة الموجودة في أسفل مقدمة الجهاز.
ادفع الفوهة إلى أن تصدر صوت نقرة عند ثباتها في مكانها.



اشطف الفوهة تحت الماء لإزالة الأوساخ/الشوائب.




انزع الخزائين وأمل الجهاز إلى الخلف.
ارفع الفوهة من أعلى واسحب إلى الأمام لخلعها.


خلع عمود الفرشاة وتنظيفه




للخلع، اسحب الغطاء الموجود في طرف عمود الفرشاة على اليسار وغطاء السير على اليمين.

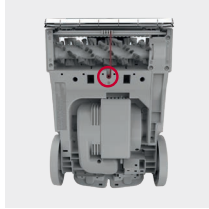

فك البراغي الموجودة في أسفل واقي السجاد باستخدام مفك برأس متصالب، وارفعه لأعلى.

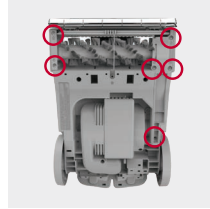


فك البراغي الستة باستخدام مفك برأس متصالب.

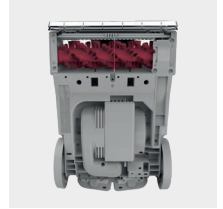

اخلع الخزائين وأمل الجهاز على ظهره لكشف عمود الفرشاة.



باستخدام مقص، أزل أي خيوط أو شعر عالق حول الفرشاة. واشطف العمود تحت ماء دافئ (لا تتجاوز درجة حرارته 40 درجة مئوية) لإزالة الأوساخ/الشوائب.

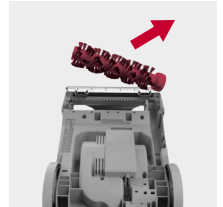

ارفع عمود الفرشاة من الجانب الأيسر ثم اخلعه من السير. اسحب عمود الفرشاة لإخراجه من الجهاز.

تحذير: يجب دائماً إيقاف تشغيل الجهاز وفصله من مصدر الكهرباء قبل إجراء أي أعمال صيانة أو استكشاف للأعطال وإصلاحها.

تفريغ خزان المياه المتسخة وتنظيفه


تنبيه مهم: أفرغ خزاني المياه النظيفة والمتسخة واشطهما وتركهما ليجمًا في الهواء قبل إعادة تركيبهما. لا تترك محلول التنظيف مخزناً في الخزان بين كل مرة استخدام والتي تليها.



لإعادة التركيب، أمل خزان المياه المتسخة، واجعل ظهر الخزان محاذياً لموضعه في الجهاز. ادفع مقدمة الخزان إلى الأمام إلى أن تصدر مشابك تحرير خزان المياه المتسخة صوت نقرة عند تثبيتها في موضعه.



أفرغ المياه المتسخة في الحوض. اشطف خزان المياه المتسخة تحت ماء دافئ (لا تتجاوز درجة حرارته 40 درجة مئوية) لإزالة الأوساخ/الشوائب.

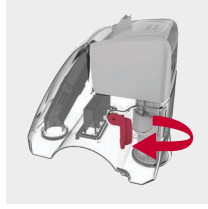

أمسك خزان المياه المتسخة فوق حوض، واسحب صنبور الإخراج السريع لفتحه.



اضغط على قفل تحرير خزان المياه المتسخة، وارفع الخزان لخلعه من الجهاز.

تنظيف المرشح



لإعادة التركيب، أمل خزان المياه المتسخة، واجعل ظهر الخزان محاذياً لموضعه في الجهاز. ادفع مقدمة الخزان إلى الأمام إلى أن تصدر مشابك تحرير خزان المياه المتسخة صوت نقرة عند تثبيتها في موضعه.



امسح المرشح الموجود في الجهاز أسفل خزان المياه المتسخة لإزالة أي أوساخ/شوائب.



اضغط على قفل تحرير خزان المياه المتسخة، وارفع الخزان لخلعه من الجهاز.



صَبِّ الكمية المطلوبة من محلول التنظيف في أنبوب ملء محلول التنظيف.



املأ خزان محلول التنظيف/المياه النظيفة بماء دافئ (لا تتجاوز درجة حرارته 40 درجة مئوية) من أنبوب ملء المياه.



لُفِّ غطاء خزان المياه النظيفة/محلول التنظيف في عكس اتجاه عقارب الساعة لخلعه.



ارفع خزان المياه النظيفة/محلول التنظيف لخلعه.




ضع الخزان على الجهاز، وادفعه عائداً إلى موضعه.



أعد وضع غطاء خزان المياه النظيفة/محلول التنظيف بلطف في اتجاه عقارب الساعة لإحكام ربطه.



للحصول على أفضل النتائج، ضع المياه/محلول التنظيف في الشوط المتجه للأمام، وحرر الزر في الشوط المتجه للخلف لشطف المياه/محلول التنظيف. وبعد ذلك نظف بشوط جاف دون الضغط على الزر.

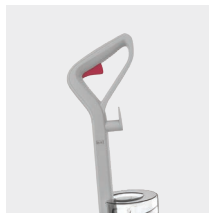

اضغط على الزر لإطلاق خليط محلول التنظيف والماء.



اضغط على دواسة فك المقبض واسحب المقبض للخلف.



صل الجهاز بمصدر الكهرباء. اضغط على دواسة تشغيل/إيقاف لتشغيل الجهاز.

تُرجى قراءة قسم "معلومات السلامة العامة" في البداية قبل الاستخدام

تنبيه مهم: يجب أن يكون السجاد نظيفًا وأن يتم تنظيفه بالمكنسة الكهربائية في وضع جاف قبل الغسل.

أجر اختبارًا لثبات اللون - بلِّق قطعة قماش ماصة محلول التنظيف. ودلِّق منطقة صغيرة مخفية من السجاد/الدواسة/التنجيد برفق بقطعة القماش المبللة. انتظر لمدة عشر دقائق وافحص المنطقة لاكتشاف زوال اللون أو خروجه باستخدام منشفة ورقية أو قماشية بيضاء. افحص مادة جميع السجاد/الدواسة/التنجيد قبل أول استخدام، وإذا كانت السجادة بأكثر من لون واحد، افحص جميع الألوان.

اختر جميع مفرش الأرضية/السجاد/الدواسة قبل أول استخدام. وسعّل الجهاز فوق قطعة صغيرة مخفية. وفي حال عدم ظهور أي تلف أو تشوه في الوبر، استمر في التنظيف.

عند استخدام الجهاز، يجب دائمًا الالتزام باحتياطات السلامة الأساسية. تجنب الإفراط في تشبيح السجاد بالسوائل، واستمر في التنظيف بأشواط جافة حتى تصحح كمية بسيطة من المياه تمر عبر الفوهة.

عند تنظيف غرفة كاملة، حرِّك قطع الأثاث خارج المنطقة المطلوب تنظيفها، إذا تعذر تحريك قطع الأثاث، ضع ورق أومينوم أو ورق مشمع تحت أرجل قطع الأثاث لحماية طلاء الأثاث الخشبي من إصابة السجاد بالبقع. اطوِ أغطية قطع الأثاث والستائر.

لا تستخدم سوى محلول تنظيف سجاد Hoover. فقد يُنتج استخدام أنواع محلول أخرى رغوّة زائدة ويؤدي إلى إبطال الضمان.

بالنسبة للمناطق كثيفة الاتساخ، قد يكون من الضروري تكرار عملية التنظيف. نظِّف بأشواط متقاطعة مع النقش الأصلي واجعل كل شوط متداخل مع الآخر.

لا يجوز ملء خزان المياه النظيفة إلا بماء دافئ (لا تتجاوز درجة حرارته 40 درجة مئوية). فقد يؤدي ملء خزان المياه النظيفة بماء ساخن/مغلي إلى إتلاف الجهاز وإبطال الضمان.

أفرغ خزاني المياه النظيفة والممتسخة واشطفهما واتركهما ليحفا في الهواء قبل تخزينهما. لا تترك محلول التنظيف مخزنًا في الخزان بين كل مرة استخدام والتي تليها.

يُرجى العلم أن هذا الجهاز قوي، لذلك تأكد قبل توصيله بالكهرباء من إيقاف تشغيل جميع أزرار التحكم، وتثبيت الجهاز بإحكام عند بدء التشغيل وأثناء التشغيل.

تحذير: يحتوي الجهاز على عمود فرائشٍ يدور باستمرار. لذلك تجنب ترك الجهاز في نقطة واحدة لفترة طويلة إذ قد يسبب ذلك إتلاف سطح مفرش الأرضية. لمنع أي تلف، أجر اختبارًا على منطقة غير واضحة من مفرش الأرضية.

التجميع



اخلع الغطاء من جانب خزان المياه النظيفة/محلول التنظيف، واربط البراغي في الخزان لتزكيبه.



ركِّب المقبض العلوي في المقبض السفلي. بعد ذلك ادفع المقبض في أعلى الجهاز.



ضع الخزان على الجهاز، وادفعه عائدًا إلى موضعه.

1. هذا الجهاز مخصص للاستخدام المنزلي فقط وغير مخصص للاستخدام التجاري أو الصناعي.
2. لا تستخدم الجهاز في مناطق داخلية مغلقة، وحافظ على الإضاءة الجيدة للمنطقة التي تنظفها.
3. أبقِ الأصابع والشعر والملابس الفضفاضة بعيداً عن الأجزاء المتحركة في الجهاز وفتحاته أثناء الاستخدام.
4. لا يجوز ملء خزان المياه النظيفة/محلول التنظيف إلا بماء دافئ (لا تتجاوز درجة حرارته 40 درجة مئوية). فقد يؤدي ملء خزان المياه النظيفة/محلول التنظيف بماء ساخن أو مغلي إلى إتلاف الجهاز وإبطال الضمان.
5. هذا الجهاز غير مناسب للاستخدام أو التنظيف بمعرفة الأشخاص ذوي القدرات البدنية أو الحسية أو العقلية المنخفضة، أو من يفتقدون إلى الخبرة أو المعرفة، ما لم يلقوا بتعليمات استخدام الجهاز بأمان من شخص مسؤول قانونياً عن سلامتهم. ويجب كذلك أن يكونوا خاضعين للإشراف أثناء استخدام الجهاز. لا يجوز للأطفال استخدام هذا الجهاز أو تنظيفه أو اللعب به، أي أنه يجب تخزينه بعيداً عن متناولهم في حال عدم استخدامه.
6. لا يجوز استخدام سوى محلول التنظيف الموصى به من Hoover في هذا الجهاز. وقد يؤدي استخدام محلول تنظيف آخر إلى إبطال الضمان.
7. لا تترك الجهاز متصلاً بالكهرباء دون إشراف.
8. لا تستخدم الجهاز إذا تعرض للسقوط أو التلف أو الغمر أو الماء أو إذا تُرك في الهواء الطلق.
9. لا يجوز تشغيل الجهاز فوق سلك الكهرباء ولا يجوز استخدامه في حال تلف السلك أو القابس. في حال تلف سلك الإمداد بالطاقة، يجب استبداله بمعرفة الشركة المصنعة أو وكيل صيانتها أو الأشخاص المؤهلين تجنياً للمخاطر.
10. لا تُمسك القابس أو تستخدم الجهاز ويديك مبللتين.
11. لا تترك الجهاز في نقطة واحدة لفترة طويلة أثناء تشغيله. يحتوي هذا الجهاز على عمود فراشٍ دوار، وقد يؤدي في حال تركه في مكان واحد إلى تلف سطح مفرش الأرضية.
12. لا يجوز استخدام الجهاز لشفط أي مواد ملتهبة أو قابلة للاحتراق (سائل اللوالات أو النفط أو الكيروسين أو ما إلى ذلك)، أو استخدامه في منطقة تحتوي على أبخرة أو سوائل قابلة للانفجار.
13. لا يجوز استخدام الجهاز لشفط الفحم الساخن أو أعقاب السجائر أو الثقاب أو الأغراض المحترقة الساخنة، ولا استخدامه في منطقة مبللة قد تكون فيها سوائل ضارة (مثل الكلور والمبيض ومنظف أنابيب الصرف المحتوي على الأمونيا).
14. لا يجوز استخدام سلك الكهرباء كمقضب لتحريك الجهاز، ولا جذب السلك حول الأركان أو الحواف الحادة، ولا إغلاق الأبواب عليه. لا تفصل الجهاز من الكهرباء بجذب السلك. ولا تسحب الجهاز أو تحمله من سلك الكهرباء.
15. لا تحمل الجهاز وهو في حالة تشغيل.
16. لا تحاول إزالة الانسدادات باستخدام أدوات حادة، إذ قد يؤدي ذلك إلى إتلاف الجهاز.
17. لا تستخدم الجهاز بجهد كهربائي غير مناسب، فقد يؤدي ذلك إلى تلف الجهاز أو تعرض المستخدم للإصابة. وستجد الجهد الكهربائي المناسب مدموًاً على ملصق التصنيف.
18. لا يجوز استخدام الجهاز على سطح تالف أو غير مستوٍ أو مجهز بشكل غير صحيح.
19. نظف السجاد دائماً بالمكنسة الكهربائية جيداً قبل استخدام الجهاز.
20. راجع الشركة المصنعة لمفرش الأرضية قبل استخدام الجهاز. اختر جميع السجاد والدواسات للتحقق من ثبات الألوان وتشوه الوبر قبل الاستخدام عليها بالكامل. وشغل الجهاز فوق قطعة صغيرة مخفية. وفي حال عدم ظهور أي تلف أو تشوه في الوبر، استمر في التنظيف.
21. يجب دائماً إيقاف تشغيل الجهاز وفصله من مصدر الكهرباء قبل إجراء أي أعمال صيانة.
22. يجب إيقاف تشغيل جميع أزرار التحكم في الجهاز قبل فصل سلك الكهرباء أو توصيله. بعد الاستخدام، لُف سلك الكهرباء دائماً حول مشابك السلك المزود بها الجهاز.
23. أبقِ سلك الكهرباء دائماً بعيداً عن الفراشي أثناء استخدام الجهاز.
24. تجب حماية سلك الكهرباء دائماً من الأسطح الساخنة واللهب المكشوف.
25. لا يجوز استخدام سوى أسلاك تمديد بقوة 13 أمبير معتمدة من المفوضية الأوروبية، فقد تؤدي الأسلاك غير المعتمدة إلى فرط السخونة. يجب توخي الحذر عند ترتيب سلك التمديد لأن ذلك قد يسبب التعتثر.
26. لا تستخدم الجهاز إلا بعدما تكون جميع خزانات المياه/محلول التنظيف والمرشحات في موضعها الصحيح.
27. أبقِ جميع الفحات خالية ونظيفة من الركام إذ قد يؤثر ذلك على تدفق الهواء/الشفط.
28. استخدم الجهاز دائماً في وضعية قائمة. لحماية المحرك من التلف بفعل المياه المتسخة، لا تُمسك الجهاز مقلوباً أبداً أو مُلقى على جانبه.
29. يجب تخزين الجهاز في مكان بارد وجاف. قبل تخزين الجهاز، تأكد من تنظيف جميع خزانات المياه/محلول التنظيف والمرشحات جيداً وجفافها.

يُرجى الاحتفاظ بالتعليمات للرجوع إليها مستقبلاً.

نظرة عامة على الجهاز

2

- 1 المقبض العلوي
- 2 المقبض السفلي
- 3 خزان المياه النظيفة/محلول التنظيف
- 4 خزان المياه المتسخة
- 5 الفوهة
- 6 عمود الفراشيّ
- 7 الزر
- 8 مشابك السلك
- 9 مشبك تحرير خزان المياه المتسخة
- 10 فوهة الصب السريع
- 11 دواسة فك المقبض
- 12 دواسة التشغيل/الإيقاف
- 13 عبوة تجرية محلول التنظيف

الوحدة



الملحقات





PowerDash

دليل المستخدم

CDCW-PDME
Hoover.ae
Hoover.sa