



Wet & Dry

User Guide




CDCW- WDME
Hoover.ae

1 MACHINE OVERVIEW

- 1 Carry handle
- 2 On/Off button
- 3 Blower function
- 4 Bin Lid
- 5 Bin lid clips
- 6 Hose connector
- 7 Dirt container
- 8 Base
- 9 Wheels
- 10 Tool storage (hidden)
- 11 Foam filter
- 12 Filter cover
- 13 Hose
- 14 Telescopic extension tube
- 15 Combi floorhead
- 16 Dusting brush
- 17 Crevice tool
- 18 Squeegee tool
- 19 Basket



Accessories

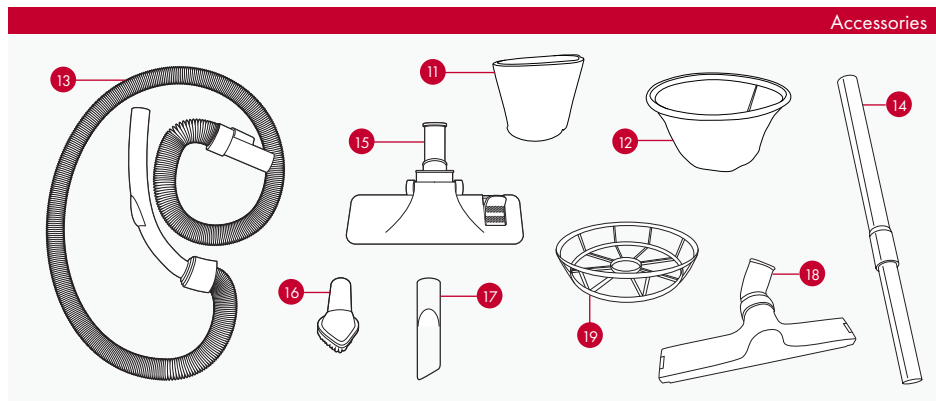

FOR HOUSEHOLD USE ONLY.

When using the vacuum cleaner, basic safety precautions should always be observed, including the following:

1. Only use the vacuum cleaner indoors.
2. Turn off the on/off switch on the vacuum cleaner controls before disconnecting or connecting the power cord.
3. Always unplug the vacuum cleaner before connecting or disconnecting the vacuum hose and accessories.
4. Children should be supervised to ensure that they do not play with the appliance.
5. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
6. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
7. Cleaning and maintenance shall not be made by children without supervision.
8. The appliance should only be used as described in the quick start guide or in the full online user guide.
9. Only Hoover recommended attachments should be used with this appliance.
10. Do not use this vacuum cleaner if it has been dropped, damaged, left outdoors or dropped into water.
Do not use this vacuum cleaner with a damaged cord or plug.
11. Do not pull or carry this appliance by the cord. Do not use the cord as a handle, close a door on the cord or pull the cord around sharp edges or corners. Do not run the vacuum cleaner over the cord. Keep the cord away from heated surfaces.
12. Do not handle the plug or the vacuum cleaner with wet hands.
13. Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.
14. Do not pick up any hot coals, cigarette butts, matches or any hot, smoking or burning objects.
15. Do not pick up any flammable or combustible materials (lighter fluid, petrol, kerosene etc.) or use in the presence of explosive liquids or vapours.
16. Do not vacuum up harmful or toxic material (chlorine, bleach, ammonia, drain cleaner etc.).
17. Do not vacuum up hard or sharp objects such as glass, nails, screws, coins etc.
18. Store the vacuum cleaner in a cool, dry area.
19. Use only CE approved 13 amp extension cords. Non-approved cords may overheat. Care should be taken to arrange the cord so that the cord cannot be tripped over.
20. Do not put any objects into openings. Do not use with any openings blocked and do not restrict airflow.
Keep all openings free of dust, lint, hair or anything that might reduce airflow.
21. Do not use without all of the filters in place.
22. Take extra care when positioning the vacuum cleaner on the stairs.
23. Keep vacuuming area well lit.

This vacuum cleaner is intended for household use only and NOT for commercial or industrial use.

PLEASE KEEP INSTRUCTIONS FOR FURTHER USE.

3 OPERATION

Assembling your vacuum cleaner

Insert end of hose into vacuum cleaner inlet on main body.

Connect the metal extension tube and the hose handle together. All accessories can be fitted onto extension tube. Connect the extension tube into the combination floor head. Ensure all parts are firmly attached before use.

Turn the machine on and off

Insert power plug into mains socket. Turn on.


Turn vacuum cleaner on/off by pressing power switch on top of lid.

Important: Never use this vacuum cleaner with any of the filters removed as this could cause damage to the internal components and void your warranty.


How to use in dry mode



Insert the hose to the hose connector and turn anti-clockwise until fixed.

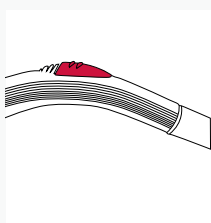


Control the suction by adjusting the air flow button on the handgrip.

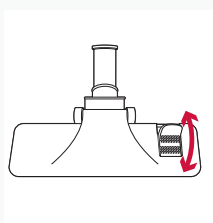


For use on carpet click rocker switch forward.
For use on hard floor click rocker switch back.

How to use the blower function

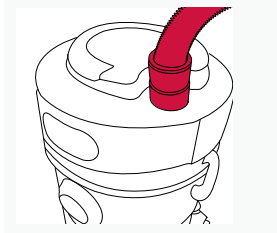

To use the blower function, insert end of hose into blower function on top of bin lid and press 'On' button.

How to use in wet mode

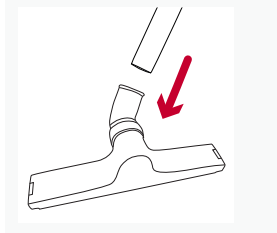

Attach squeegee tool and turn the machine on.

Important: The vacuum is equipped with an automatic suction shut-off that operates when picking up liquids. As the level of the liquid rises in the tank, an internal float rises until it seats itself against a seal at the intake of the motor, shutting off suction. When this happens, the motor will develop a higher than normal pitch noise and the suction is drastically reduced. If this occurs, turn unit off immediately. Failure to turn unit off after float rises and shuts off suction will result in extensive damage to the motor. To continue use, empty the liquid waste from the tank as outlined in this user guide.

Important: Ensure the air flow control button is closed when using in wet mode.

Important: Empty the dust bin of any liquids after use and leave it to dry before storage.

Storage

Hose, tubes and floor head can be stored in an assembled condition to the cleaner. The combination allows neat and tidy storage.

Coil the hose around the tube to make it compact and stable. Rest the tube on the tube rest located at the back of the base.

Warning: Always switch off and unplug the vacuum cleaner from the electrical socket before assembling, opening or emptying the bin, or before connecting/disconnecting the attachments.


Important: Filters need to be cleaned every time you empty the dirt container for best cleaning results. Do not use your vacuum cleaner without filters in place. If the filter is damaged, it must be replaced.

Important: The motor is equipped with a thermal cut-out. If for any reason the unit should overheat, the thermostat will automatically turn the unit off.

Emptying and cleaning the dirt container




Unclip and remove the bin lid.

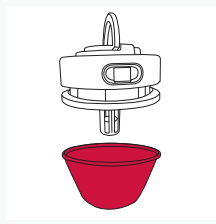

Remove the foam filter and the filter cover if present.



Detach the hose from the hose inlet.

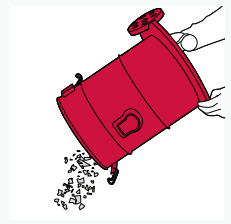


Pour dirt or water out of the bin.

7

MAINTENANCE

Filters - To ensure best suction power, please clean the filter after each use.

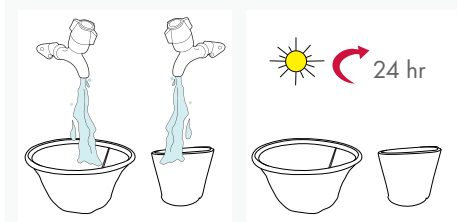

Wash filter and its cover under warm water and leave to dry for 24 hours.

Important: Do not wash the filters in the washing machine as it may damage the filter. If excess dust and fluff remains on the filter or its cover remove by using a brush. Do not shake up and down. Wash filter and its cover under warm water and leave to dry for 24 hours.

Is there an accessory missing?

- Check the 'Machine Overview' page in this guide or the box that the machine came in to make sure that the part is definitely included in your unit. If it's missing, please contact your local Hoover service agent.

Why won't the vacuum cleaner pick up?

- The filters may need cleaning, please refer to page 7 of this user guide.
- There may be a blockage in the hose, please check the hose and remove blockage.
- The dirt container may be full or blocked, please refer to page 6 of this user guide.
- The dirt container may be incorrectly installed, please ensure the dirt container is locked into place.

What do I do if an accessory/the unit becomes damaged or broken?

- Please check if the damage is with the accessory or the unit. To do this, first remove the accessory from the unit and check if there is suction from the hose. If there is suction from the hose this confirms the damage is with the accessory. Please visit www.hoover.ae or contact your local Hoover service agent.
- If having done the above checks, checked the hose for blockages and cleaned the filter there is still no suction/limited suction from the hose, please contact your local Hoover service agent.

Why is dust escaping from the vacuum cleaner?

- The dirt container may be full or blocked, please refer to page 6 page of this user guide.
- The filter may need cleaning, please refer to page 7 of this user guide.
- There may be a blockage in the hose, please check the hose and remove blockage.

Why does my vacuum cleaner have no power?

- It may not be plugged into the electrical socket correctly. Ensure that the plug is pushed into the electrical socket securely.
- The electrical socket may not be working. Check the fuse or breaker and consult an electrician.
- The motor thermostat may have tripped. Switch off and unplug the vacuum cleaner. Check the unit for blockages and clean the filters. Leave the vacuum cleaner for 24 hours before switching the vacuum cleaner back on.

Why does the vacuum cleaner cut out?

- The motor is equipped with a thermal cut out. If for any reason the unit should overheat, the thermostat will automatically turn the unit off. Should this occur, unplug the vacuum cleaner from the electrical socket and turn off the switch. Remove and empty dirt container. Check the hose for blockages. Clean the filters. Allow the unit to cool for approximately 1 hour (if you have cleaned the filter you will need to wait 24 hours for the filters to dry before putting them back in the machine).

What do I do if the unit becomes damaged or broken?

- Contact your local Hoover service agent.

Service and Help

If you have any queries or concerns about using your Hoover, simply visit **hoover.ae**

Consumables

To purchase spares and accessories, please visit your local retailer selling Hoover products. The use of genuine Hoover spare parts helps to maintain optimised performance and validates your guarantee.

Technical Specification

Voltage: 220-240V ~ 50/60Hz

Wattage: 1500W

Capacity: 20L

Cord length: 8m

Subject to technical change without notice.

© 2023 Techtronic Cordless GP

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

This marking on the product(s) and/or accompanying documents means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling.

Please contact your local authority for further details of your nearest designated collection point.



الخدمة والمساعدة

إذا كانت لديك أي تساؤلات أو مخاوف متعلقة باستخدام مكينة هوفر، فتفضل بزيارة الموقع الإلكتروني hoover.ae

المستلزمات الاستهلاكية

لشراء قطع الغيار والملحقات، الرجاء زيارة التاجر المحلي الذي يبيع منتجات هوفر.
إن استخدام قطع غيار هوفر الأصلية يساعد في الحفاظ على الأداء الأمثل ويحافظ على سريان الضمان.

المواصفات الفنية

القولية:	٢٢٠-٢٤٠ فولت ~ ٦٠/٥٠ هرتز
شدة التيار:	١٥٠٠ وات
السعة:	٢٠ لترًا
طول السلك:	٨ أمتار
عرضة للتغيير الفني بدون إشعار.	

© 2023 Techtronic Cordless GP

ينبغي ألا يتم التخلص من نفايات المنتجات الكهربائية عن طريق طرحها مع النفايات المنزلية. الرجاء إعادة التدوير إن وجدت مراكز إعادة التدوير. راجع الأمر مع السلطة المحلية أو بائع التجزئة للحصول على النصائح المتعلقة بإعادة التدوير.

إن وجود هذه العلامة على المنتج (المنتجات) و/أو المستندات المصاحبة له يعني أن المعدات الكهربائية والإلكترونية المستعملة يجب الخلط بينها وبين النفايات المنزلية العامة. للحصول على المعالجة والاسترداد وإعادة التدوير بشكل صحيح، من فضلك خذ هذا المنتج (هذه المنتجات) إلى نقاط التجميع المخصصة حيث سيتم قبولها دون أي تكلفة. إن التخلص من هذا المنتج بشكل صحيح سيساعد في توفير الموارد الثمينة ويمنع أي تأثيرات سلبية محتملة على صحة الإنسان والبيئة والتي قد تنشأ نتيجة التعامل الخاطيء مع النفايات. الرجاء الاتصال بالسلطة المحلية للحصول على مزيد من التفاصيل حول أقرب نقطة تجميع مخصصة لك.



الفلاتر - لضمان الحصول على أفضل قوة شفط، الرجاء تنظيف الفلتر بعد كل مرة استخدام.



اغسل الفلتر وغطاءه تحت الماء الدافئ واتركه يجف لمدة ٢٤ ساعة.

هام: لا تغسل الفلاتر في الغسالة لأن ذلك قد يؤدي إلى إتلاف الفلتر. في حالة بقاء كمية زائدة من الأتربة والزغب في الفلتر أو في غطاءه، تخلص منها باستخدام الفرشاة. لا تهز إلى أعلى وأسفل.

اغسل الفلتر وغطاءه تحت الماء الدافئ واتركه يجف لمدة ٢٤ ساعة.

هل هناك قطعة ملحقة مفقودة؟

- ارجع إلى صفحة "نظرة عامة على الجهاز" في هذا الدليل أو الصندوق الوارد مع الجهاز للتأكد من أن تلك القطعة مدرجة بالفعل في الوحدة. إذا كانت تلك القطعة مفقودة، فالرجاء الاتصال بوكيل خدمة هوڤر (Hoover) المحلي.

لماذا لا تلتقط المكنسة الكهربائية الأوساخ؟

- قد تكون الفلاتر في حاجة إلى التنظيف، الرجاء الرجوع إلى صفحة ٧ من دليل المستخدم الذي بين يديك.
- قد يكون هناك انسداد في الخرطوم، الرجاء فحص الخرطوم وإزالة الانسداد.
- قد تكون حاوية الأتربة ممتلئة أو مسدودة، الرجاء الرجوع إلى صفحة ٦ من دليل المستخدم الذي بين يديك.
- ربما يكون قد تم تركيب حاوية الأتربة بشكل خاطيء، الرجاء التحقق من قفل حاوية الأتربة وتثبيتها في مكانها.

ما الذي يمكنني القيام به في حالة تلف أو تعطل قطعة ملحقة/الوحدة؟

- الرجاء التحقق لمعرفة إذا كان التلف موجوداً في القطعة الملحقة أو الوحدة. للقيام بذلك، قم أولاً بخلع القطعة الملحقة من الوحدة وتحقق إذا كان هناك شفت من الخرطوم. إذا كان هناك شفت من الخرطوم فإن ذلك يؤكد أن التلف في القطعة الملحقة. الرجاء زيارة الموقع الإلكتروني www.hoover.ae أو الاتصال بوكيل خدمة هوڤر (Hoover) المحلي.
- إذا كان قد تم تنفيذ الفحوصات المذكورة أعلاه، وتم فحص الخرطوم للبحث عن الانسدادات وتم تنظيف الفلتر مع استمرار انعدام /محدودية الشفط من الخرطوم، فالرجاء الاتصال بوكيل خدمة هوڤر (Hoover) المحلي.

لماذا يخرج التراب من المكنسة الكهربائية؟

- قد تكون حاوية الأتربة ممتلئة أو مسدودة، الرجاء الرجوع إلى صفحة ٦ من دليل المستخدم الذي بين يديك.
- قد يكون الفلتر في حاجة إلى التنظيف، الرجاء الرجوع إلى صفحة ٧ من دليل المستخدم الذي بين يديك.
- قد يكون هناك انسداد في الخرطوم، الرجاء فحص الخرطوم وإزالة الانسداد.

ما سبب عدم وصول التيار الكهربائي إلى المكنسة الكهربائية؟

- ربما لم يتم قبسها في المقبس الكهربائي بشكل صحيح. تأكد من ضغط القابس في المقبس الكهربائي بشكل محكم.
- قد يكون المقبس الكهربائي لا يعمل. افحص المصهر أو القاطع واستشر فنيًا كهربائيًا.
- ربما يكون قد تم إعتاق ثرموستات الموتور. أوقف تشغيل المكنسة الكهربائية وانزع القابس. افحص الوحدة للكشف عن أي انسدادات وقم بتنظيف الفلاتر. اترك المكنسة الكهربائية ٢٤ ساعة قبل تشغيلها مجددًا.

لماذا يتعذر فصل المكنسة الكهربائية؟

- الموتور مزود بألية فصل حرارية. سيقوم الثرموستات تلقائيًا بإيقاف تشغيل الوحدة في حالة زيادة سخونة الوحدة لأي سبب من الأسباب. في حالة حدوث هذا، انزع قابس المكنسة الكهربائية من المقبس الكهربائي وأدر مفتاح التشغيل إلى وضع الإيقاف. قم بخلع وتنظيف حاوية الأتربة. افحص الخرطوم للكشف عن أي انسدادات. قم بتنظيف الفلاتر. اترك الوحدة تبرد لمدة ساعة كاملة تقريبًا (إذا كنت قد قمت بتنظيف الفلتر فإنك ستحتاج إلى الانتظار ٢٤ ساعة حتى تجف الفلاتر قبل إعادة تركيبها في الجهاز).

ما الذي يمكنني القيام به في حالة تلف أو تعطل الوحدة؟

- اتصل بوكيل خدمة هوڤر (Hoover).

هام: يتم تجهيز هذه المكنسة الكهربائية بصمام إيقاف الشفط تلقائيًا والذي يعمل عند التقاط السوائل. عندما يرتفع مستوى السائل في الخزان، يرتفع صمام طافي داخلي حتى يستقر قبالة سدادة موجودة في فتحة السحب بالموتور مما يؤدي إلى إيقاف الشفط. عندما يحدث ذلك، ستصدر من الموتور ضوضاء أعلى مما هو معتاد وينخفض الشفط انخفاضًا كبيرًا. أوقف تشغيل الجهاز فورًا في حالة حدوث ذلك. سيؤدي عدم تشغيل الوحدة بعد ارتفاع الصمام الطافي وإيقاف الشفط إلى إحداث تلف هائل في الموتور. لمتابعة الاستخدام، قم بتفريغ النفايات السائلة من الخزان كما هو محدد في دليل المستخدم الذي بين يديك.

هام: تأكد من غلق زر التحكم في تدفق الهواء عند استخدام الجهاز في وضع التنظيف المبلل.

هام: قم بتفريغ صندوق الأتربة من أي سوائل بعد الاستخدام واتركه ليجف قبل تخزينه.

التخزين

يمكن تخزين الخرطوم والأنابيب ورأس تنظيف الأرضيات في حالة مجمعة بالمكنسة.

تتيح حالة التجميع هذه الحصول على تخزين مرتب ومنمق.

قم بلف الخرطوم حول الأنبوب ليصبح ثابتًا ويشغل مساحة أقل. قم بإسناد الأنبوب على حمالة الأنبوب الموجودة في الجانب الخلفي من قاعدة.

تحذير: أوقف تشغيل المكينة الكهربائية وانزعها من المقبس الكهربائي قبل تركيب الصندوق أو فتحه أو تفريغه أو قبل توصيل/فصل الملحقات.

هام: ينبغي تنظيف الفلاتر في كل مرة تقوم فيها بتفريغ حاوية الأتربة من أجل الحصول على أفضل نتائج. لا تستخدم هذه المكينة الكهربائية إلا بعد تركيب الفلاتر في أماكنها. إذا تعرض الفلتر للتلف، فينبغي استبداله.

هام: يتم تزويد الموتور بآلية فصل حرارية. سيقوم الثرموستات تلقائيًا بإيقاف تشغيل الوحدة في حالة زيادة سخونة الوحدة لأي سبب من الأسباب.


تفريغ حاوية الأتربة وتنظيفها




صب الأتربة أو الماء خارج الصندوق.



افصل الخرطوم من منفذ الخرطوم.



اخلع فلتر القوم وغطاء الفلتر في حالة وجوده.

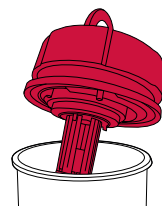

قم بفك مشابك تثبيت غطاء الصندوق واخلعه.

تجميع وتركيب أجزاء المكنسة الكهربائية


أدخل طرف الخرطوم في الفتحة الموجودة في المكنسة الكهربائية في الجسم الرئيسي.
صل أنبوب الإطالة المعدني ومقبض الخرطوم ببعضهما البعض. يمكن تركيب كل الملحقات في أنبوب الإطالة. صل أنبوب الإطالة في الرأس متعددة الأغراض لتنظيف الأرضيات. تأكد من ربط كل الأجزاء بإحكام قبل الاستخدام.

تشغيل الجهاز وإيقاف تشغيله

أدخل قابس الطاقة في المقبس الرئيسي للتيار الكهربائي. قم بتشغيل.
قم بتشغيل/إيقاف تشغيل المكنسة الكهربائية عن طريق الضغط على المفتاح الموجود في أعلى الغطاء.

هام: لا تستخدم هذه المكنسة الكهربائية عند خلع أي فلاتر لأن ذلك قد يتسبب في تلف المكونات الداخلية وإبطال الضمان.

كيفية الاستخدام في وضع التنظيف الجاف

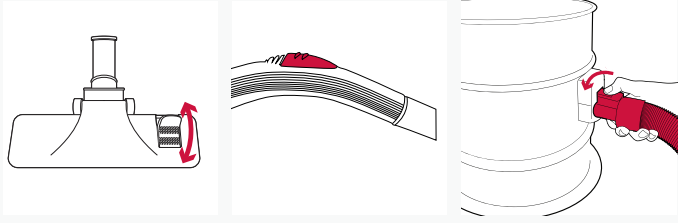


انقر المفتاح القلاب ناحية
الأمام للاستخدام فوق السجاد.
انقر المفتاح القلاب ناحية
الخلف للاستخدام فوق الأرضية
الصلبة.

تحكم في الشفط عن طريق ضبط
زر تدفق الهواء الموجود في
المقبض اليدوي.


أدخل الخرطوم في موصل
الخرطوم وأدره في عكس اتجاه
عقارب الساعة حتى يتم تثبيته.

كيفية استخدام وظيفة نافخة الهواء

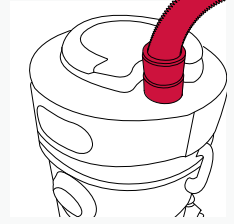

لإستخدام وظيفة نافخة الهواء،
أدخل طرف الخرطوم في نافخة
الهواء فوق الجزء العلوي من غطاء
الصندوق واضغط على زر التشغيل
'On'.

كيفية الاستخدام في وضع التنظيف المبلل

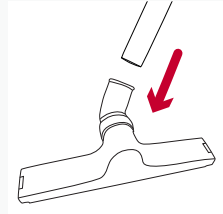


اربط أداة الممسحة المطاطية وقم
بتشغيل الجهاز.

الوحدة



- ١ مقبض حمل الجهاز
- ٢ زر التشغيل/إيقاف التشغيل
- ٣ وظيفة فاختة الهواء
- ٤ غطاء الصندوق
- ٥ مشابك تثبيت غطاء الصندوق
- ٦ موصل الخرطوم
- ٧ حاوية الأتربة
- ٨ قاعدة
- ٩ عجلات
- ١٠ مخزن الأدوات (مخفي)
- ١١ فلتر الفوم
- ١٢ غطاء الفلتر
- ١٣ خرطوم
- ١٤ أنبوب تمديد تلسكوبي
- ١٥ فرشاة متعددة الأغراض
- ١٦ فرشاة نفخ الأتربة
- ١٧ أداة تنظيف الشقوق
- ١٨ أداة المسححة المطاطية
- ١٩ سلة

الملحقات

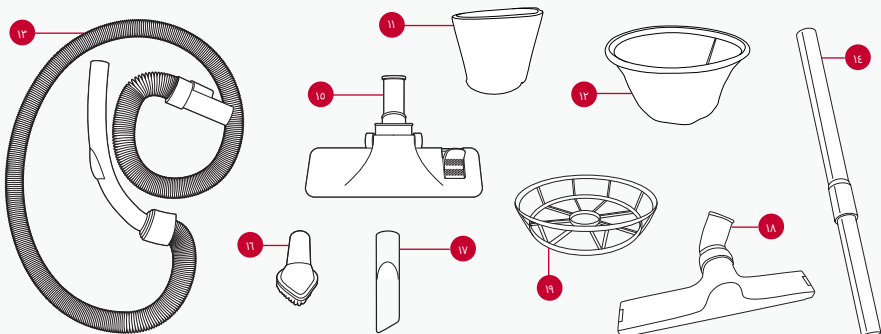

لقد تم تصميم هذا الجهاز للاستخدام المنزلي فقط.

ينبغي دائماً اتباع احتياطات الأمان الأساسية عند استخدام هذه المكنسة الكهربائية، وتشتمل هذه الاحتياطات على ما يلي:

١. لا تستخدم هذه المكنسة الكهربائية إلا في الأماكن الداخلية.
٢. **قمر بإيقاف تشغيل مفتاح التشغيل / الإيقاف الموجود في أدوات التحكم في المكنسة الكهربائية قبل فصل أو توصيل سلك الطاقة.**
٣. انزع دائماً قابس المكنسة الكهربائية واتركها تبرّد قبل توصيل أو فصل خرطوم المكنسة أو الملحقات.
٤. يجب الإشراف على الأطفال للتأكد من أنهم لا يعبثون بالجهاز.
٥. يمكن استخدام هذا الجهاز بواسطة الأطفال الذين يبلغون من العمر ٨ سنوات أو أكبر وكذلك بواسطة الأشخاص الذين يعانون من قصور جسدي أو حسي أو عقلي أو نقص الخبرة والمعرفة بشرط خضوعهم للإشراف وتوعيتهم بالإرشادات الخاصة باستخدام الجهاز بطريقة آمنة وأن يتفهموا المخاطر الكامنة. ينبغي ألا يعبث الأطفال بهذا الجهاز. ينبغي ألا يقوم الأطفال بالتنظيف أو بخطوات الصيانة التي يقوم بها المستخدم دون الإشراف عليهم.
٦. إذا تعرض سلك التيار الكهربائي للتلف، فيجب استبداله بواسطة شركة التصنيع أو وكيل الخدمة التابع لها أو أشخاص مؤهلين بدرجة مشابهة لتجنب وقوع أي مخاطر.
٧. ينبغي ألا يقوم الأطفال بالتنظيف أو الصيانة دون الإشراف عليهم.
٨. ينبغي ألا يتم استخدام هذا الجهاز إلا كما هو موضح في دليل المستخدم الذي بين يديك.
٩. ينبغي عدم استخدام سوى الملحقات التي توصي شركة هوڤر (Hoover) بها مع هذا الجهاز.
١٠. لا تستخدم هذه المكنسة الكهربائية في حالة سقوطها أرضاً أو تعرضها للتلف أو تركها في أماكن خارجية مفتوحة أو سقوطها في الماء.
- لا تستخدمها عندما يكون السلك أو القابس تالفاً.
١١. لا تسحب هذا الجهاز أو تنقله من سلك التيار الكهربائي. لا تستخدم سلك التيار الكهربائي كمقبض ولا تغلق الباب فوق السلك أو تسحب السلك فوق الحواف أو الزوايا الحادة. لا تشغل المكنسة الكهربائية وهي فوق السلك. أبعد السلك بعيداً عن الأسطح الساخنة.
١٢. لا تمسك القابس أو المكنسة الكهربائية بيدين مبلتين.
١٣. احتفظ بالشعر والملابس المفكوكة والأصابع وجميع أعضاء الجسم بعيداً عن الفتحات والأجزاء المتحركة.
١٤. لا تلتقط أي جمرات فحم ساخنة أو أعقاب السجائر أو عيدان الثقاب أو أي أجسام ساخنة أو محترقة أو ينبعث الدخان منها.
١٥. لا تلتقط أي مواد قابلة للاشتعال أو الاحتراق (سوائل الولاغات أو البنزين أو الكيروسين أو غيرها) ولا تستخدم هذا المنتج في وجود أي سائل أو أبخرة قابلة للانفجار.
١٦. لا تستخدم المكنسة الكهربائية في تنظيف أي مواد ضارة أو سامة (الكلور، مواد التبييض، أو الأمونيا، أو منظفات التصريف أو غيرها).
١٧. لا تستخدم المكنسة الكهربائية في تنظيف الأجسام الصلبة أو الحادة مثل الزجاج أو المسامير أو البراغي أو العملات أو غير ذلك.
١٨. قمر بتخزين المكنسة الكهربائية في منطقة جافة وباردة.
١٩. لا تستخدم سوى أسلاك إطالة حاصلة على اعتماد CE بمعايرة ١٣ أمبير. قد تزداد سخونة الأسلاك غير المعتمدة. ينبغي توخي الحذر عند وضع السلك بحيث يتعذر سحبه أو جره.
٢٠. لا تضع أي أجسام في الفتحات. لا تستخدم هذا الجهاز مع سد أي فتحات ولا تسد مسار تدفق الهواء. حافظ على خلو الفتحات كلها من الأتربة أو النسالة أو الشعر أو أي شيء قد يقلل من تدفق الهواء.
٢١. لا تستخدم هذا الجهاز إلا بعد تركيب كل الفلاتر في أماكنها.
٢٢. توخ مزيداً من الحذر عند وضع المكنسة الكهربائية فوق السلالم.
٢٣. حافظ على الإضاءة الجيدة في منطقة استخدام المكنسة الكهربائية.

يتم تصنيع هذه المكنسة الكهربائية للاستخدام المنزلي فقط وليس للاستخدام التجاري أو الصناعي.

الرجاء الاحتفاظ بهذه التعليمات بحيث يتم استخدامها في المستقبل.



مكنسة كهربائية للتنظيف الرطب و الجاف

دليل المستخدم

