

CleanSlate XL


User Guide



CDSW-MSME
Hoover.ae
Hoover.sa

2 MACHINE OVERVIEW

- 1 Carry handle
- 2 On/Off button (located under handle)
- 3 Clean water/solution tank
- 4 Dirty water tank
- 5 Wide path tool
- 6 Wash tool release button
- 7 Clean water/solution tank handle
- 8 Quick release cord hooks
- 9 Hose self clean port
- 10 Hose storage clip
- 11 Crevice tool storage
- 12 Hose
- 13 Wide path tool attachments:
 - A. multi-purpose attachment
 - B. hard floor scrub attachment
- 14 Small area tool
- 15 Crevice tool
- 16 SpinScrub hand tool
- 17 2x Trial size solution

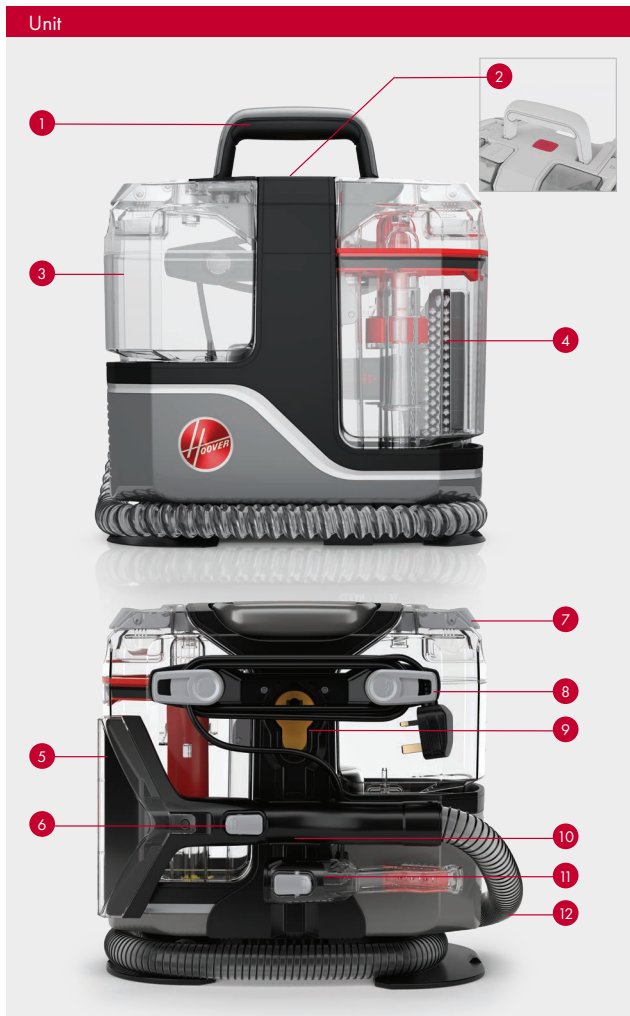

Accessories



1. This machine is intended for household use only, not for commercial or industrial use.
2. Don't leave the machine plugged in when unattended.
3. Don't use the machine if it has been dropped, damaged or left outdoors.
4. Don't use the machine if the power cord or plug is damaged. If the power cord is damaged, it must be replaced by a qualified person in order to avoid a hazard.
5. Don't vacuum up any flammable or combustible materials (lighter fluid, petrol, kerosene etc.) or use the machine in an area with explosive vapours or harmful fluids (chlorine, bleach, and ammonia drain cleaner).
6. Don't use the machine outside during wet weather conditions.
7. Don't handle the plug or use the machine with wet hands.
8. Don't pull or carry the machine by the power cord.
9. Don't use the power cord as a handle, pull the power cord around corners, sharp edges or close a door over the power cord.
10. Don't unplug the machine by pulling on the power cord.
11. Don't carry the machine while it's switched on.
12. Don't attempt to remove blockages with sharp objects as this may cause damage to the machine. Remove blockages only as instructed in the user guide.
13. Don't use the machine with incorrect voltage as this may result in damage or injury to the user. The correct voltage is listed on the ratings label.
14. Don't over saturate your flooring/surface. Always finish on a dry stroke.
15. Don't use on a surface that is damaged, uneven or incorrectly fitted.
16. Don't use on water sensitive flooring/surfaces.
17. Refer to the floor/surface manufacturer's care recommendations before use.
18. Test your flooring/surface before full usage - run the machine over a small hidden area, if no damage or discolouration occurs once dry continue cleaning.
19. The clean water tank should be filled with warm water (max 40°C) only. Filling the clean water tank with hot or boiling water will damage the machine and invalidate the guarantee. Always use the machine with all water tanks and filters in place.
20. Always keep the area you're cleaning well lit.
21. Only replace the fuse in the plug with a British 13amp fuse.
22. Always unplug the machine before carrying out any cleaning or maintaining and before connecting or disconnecting the accessories.
23. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
24. Children should be supervised to ensure that they do not play with the appliance.
25. Take extra care when cleaning on the stairs.
26. Turn off all controls on the machine before disconnecting or connecting the power cord. After use always wrap the power cord around the cord clips provided.
27. Always protect the power cord from heated surfaces and open flames.
28. Use only CE/UKCA approved 13amp extension cords, non-approved extension cords may overheat. Care should be taken to arrange the extension cord as it can be a trip hazard.
29. Keep all openings clear and free from debris as this may affect the airflow/suction/water pick up.
30. Always use the machine in an upright position. To prevent motor damage from dirty water, never hold the machine upside down or on its side.
31. Keep the machine away from direct sunlight and store in a cool, dry area that is above 5°C. Storing the machine at temperatures lower than freezing point may cause operational issues. Before storing the machine please ensure all water/solutions tanks are empty and filters are thoroughly clean and dry.
32. This machine is intended for indoor cleaning and vehicle interiors during dry weather conditions.
33. Keep fingers, hair and loose clothing away from moving parts and openings whilst using the machine.
34. Before using the machine test your carpets/rugs/upholstery for colourfastness and pile distortion.
35. Only HOOVER recommended tools and solution should be used with this machine. Using other solutions may invalidate the guarantee.

PLEASE KEEP INSTRUCTIONS FOR FUTURE USE.

4 OPERATION


IMPORTANT: Refer to the floor/surface manufacturer's care recommendations before use.

Test all carpets/rugs/upholstery/hard floors before use. Before using the machine to clean dried on stains and dirt, the surface should be vacuumed thoroughly.

Test for colourfastness - Wet a white absorbent cloth with the solution. In a small hidden area of the surfaces to be cleaned, gently rub with the dampened cloth. Wait ten minutes and check for colour removal or bleed with a white paper towel or cloth. Check all surfaces to be cleaned and if the surface has more than one colour, check all colours.

Test the spot cleaner on a small hidden area - If no damage or pile distortion occurs, once dry continue cleaning. When using the spot cleaner, basic safety precautions should always be observed and don't over saturate your carpets/rugs/upholstery/hard floors. Not suitable for use on water sensitive flooring/surfaces. Only use with HOOVER Spot Cleaning Solution. Using other solutions may cause excess foaming and will invalidate your guarantee. The clean water/solution tank should only be filled with warm water (max 40°C). Filling the clean water/solution tank with hot/boiling water will damage your spot cleaner and invalidate the guarantee.

Assembly

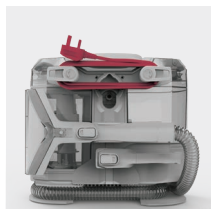

Wrap the cord around the quick release cord hooks.



Lift the carry handle to lock into the upright position for carrying.




Filling the clean water/solution tank


IMPORTANT: The tank cap will not open when the tank is fitted to the machine. Remove the tank from the machine to fill.




Lift the clean water/solution tank handle and pull to remove the tank.

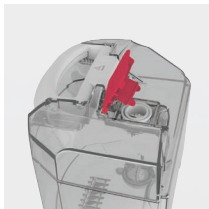

Lift to open the clean water/solution tank fill cap.

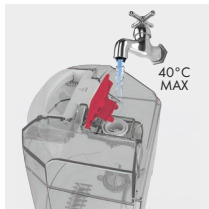

Fill the tank with warm water (max 40°C) and solution to the desired clean level, indicated by the lines on the tank.

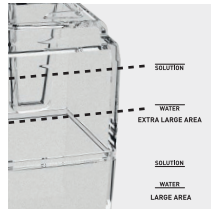


Close the clean water/solution tank fill cap.




Refit the clean water/solution tank onto the machine so it clicks into place.

6 OPERATION


Operation

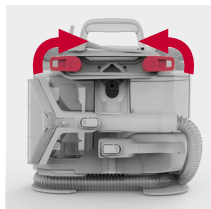

Turn the quick release hooks and remove the cord from the clips.


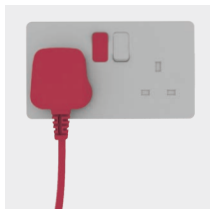


Plug the machine into the mains and switch on.

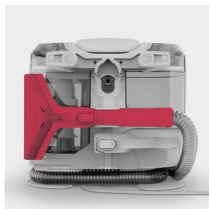

Pull to remove the wash tool and hose from the storage clip.

Using the tools

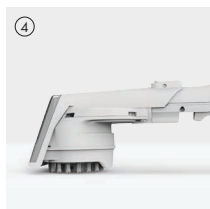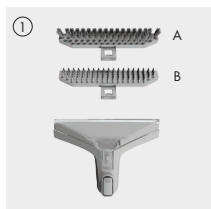

Select a tool/attachment.

1. Wide path tool for cleaning carpets, rugs, sofas and upholstery

A) multi purpose brush for cleaning carpets, rugs, sofas and upholstery.

B) hard floor scrub attachment for cleaning tiles and sealed wooden floors.

2. Small area tool

A smaller, spare cleaning tool to keep messy clean ups separate from every day cleaning.

3. Crevice tool

For edge and tight spot/crevice cleaning.

4. SpinScrub hand tool

For targeting stains and stubborn marks.



Press the tool lock button and slide the tool onto the end of the hose, over the nib. Release the button when in place.



To fit an attachment to the wash tool, fit the front of the selected attachment into the front of the wash tool and push the clip down to click into place.



Press the on/off button to switch the machine on.


Using the Wide path tool / Small area tool




For spills, always pick up the excess liquid before using water/solution. Tilt the tool forward onto the spill and pull back.



Press the trigger on the hose to release water and solution.

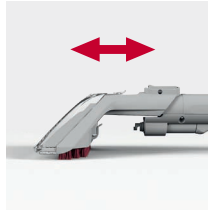

Use the brush to agitate any stubborn stains, scrubbing back and forth.

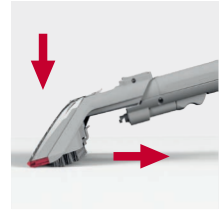

Tilt the nozzle forward so the nozzle is in contact with the surface. Pull back to recover the water and solution.



IMPORTANT: Over or under tilting the hand tool may result in poor water pick up.


Using the crevice tool



Press the trigger on the hose to release water and solution.



Use the brush to agitate any stubborn stains, scrubbing back and forth.

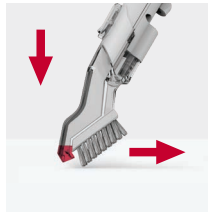

Tilt the nozzle forwards so the nozzle is in contact with the surface. Pull back to recover the water and solution.


Using the SpinScrub hand tool




Press the tool lock button and slide the tool onto the end of the hose, over the nib.



Press the trigger on the hose to release water and solution.

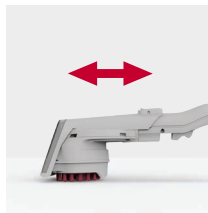

Use the brush in a forwards/ backwards motion to agitate any stubborn stains.

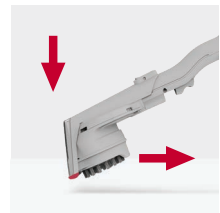

Tilt the nozzle forward so the nozzle is in contact with the surface. Pull back to recover the water and solution.

Emptying and cleaning the dirty water tank

IMPORTANT: Unplug and switch off the machine before performing maintenance or troubleshooting checks.

The dirty water tank is fitted with a float. When the dirty water tank is full, the float will shut off the suction on the machine. You will be able to hear if this has happened as the motor noise on the machine will increase. Once the float is activated, empty the dirty water tank if full.

If the dirty water tank is not full then turn off your machine at the power switch and wait for the float to settle.

Empty and rinse out the clean water/solution tank and dirty water tank and leave to air dry before refitting to store.



Lift the dirty water tank handle and pull to remove the tank.



Lift the dirty water tank clip and unhook to release the lid.



Lift the lid to remove from the dirty water tank.



Empty the dirty water into the sink or toilet.



Rinse the dirty water tank and lid under water (max 40°C) to remove dirt/debris.



Hook the clip on to the lid and push down to lock into place.




Refit the dirty water tank onto the machine so it clicks into place.

Hose self clean function

IMPORTANT: Use the hose self clean function after each use to remove any debris or water left in the hose. Make sure the dirty water tank is empty before using the self clean function.



Lift the clean water/solution tank handle and pull to remove the tank.

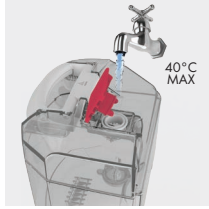

Lift to open the tank fill cap and fill the clean water/solution tank with approximately 1 inch of warm water (max 40°C). **DO NOT ADD SOLUTION.**



Close the tank fill cap and refit the clean water/solution tank onto the machine so it clicks into place.



Press the tool release button and pull to remove the tool from the hose.



Push the hose end into the hose self clean port.



Switch the machine on and hold the hose in place until the clean water tank has emptied. Do not squeeze the trigger. Repeat as necessary.



After cleaning the hose, switch the machine off. Lift the dirty water tank handle and pull to remove the tank.



Lift the dirty water tank clip and unhook to release the lid.



Lift the lid to remove from the dirty water tank.



Empty the dirty water into the sink or toilet.



Rinse the dirty water tank and lid under water (max 40°C) to remove dirt/debris.

10 MAINTENANCE

Removing and cleaning the wash tool and attachments



Press the tool lock button and pull to remove the tool from the hose.



Pull and lift the clip to remove the attachment from the wash tool.



To remove the nozzle on the wash tool, push and lift the clear plastic clip up over the button on the end of the hose.



Rinse the tools, attachments and the nozzle under warm water (max 40°C) to remove dirt/debris.



To refit the nozzle, slide the nozzle into the wash tool until it clicks into place.



To refit, fit the front of the attachment into the front of the wash tool and push the clip down to click into place.

Cleaning the filter grill




Lift the dirty water tank handle and pull to remove the tank.



Remove any dirt and debris from the filter grill located underneath the dirty water tank.

IMPORTANT: Before storing away, always empty and rinse out the clean water/solution tank and dirty water tank and leave to air dry before refitting.


Storage

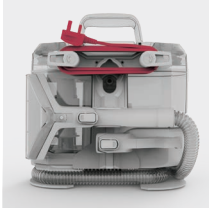

Wrap the cord around the quick release cord hooks.



Push the carry handle into the downward position for storage and when not in use.

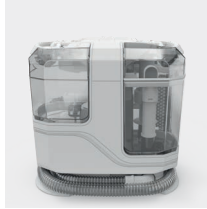

12 FAQs

CAUTION: Always switch off and unplug the machine before performing any checks or maintenance.

Is there an accessory missing?

- Check the contents on the box to make sure the part is definitely included with your machine.

Why does the machine have no power?

- The plug may not be fully pushed into the electrical socket.
- The fuse in the plug may need replacing. Always replace with a British 13amp fuse.
- The motor thermostat may have tripped. If this has happened, unplug the machine. Check the machine for blockages and clean the filter grill.

Why won't the water/solution dispense?

- Squeeze the trigger on the hose to release solution and water mix. Go to 'Using the tools'.
- Make sure the clean water/solution tank is fitted securely. Go to 'Filling the clean water/solution tank'.
- The clean water/solution tank is empty. Refill the tank. Go to 'Filling the clean water/solution tank'.
- The clean water/solution tank valve may be stuck, hold the tank over the sink and press the valve underneath to release.
- Air is trapped in the pump and hose. Switch on the machine, prime the pump by lowering the hose down to the floor and hold the trigger for up to 1 minute.

Why won't the machine pick up?

- Check the hose for blockages and clear. Go to 'Hose self clean function'.
- The float in the dirty water tank may have been activated. Empty the dirty water tank and wait for the float to settle before restarting your machine.
- The tool nozzle may not be in contact with the surface, tilt the nozzle forwards. Go to 'Using the tools'.
- Check the wash tool for blockages and clear. Go to 'Removing and cleaning the wash tool and attachments'.
- The dirty water tank may not be assembled correctly or the lid may not be fitted securely. Go to 'Emptying and cleaning the dirty water tank'.
- Check the wash tool nozzle is correctly fitted. Go to 'Using the tools'.
- Check the filter grill located under the dirty water tank for dirt and debris. Go to 'Cleaning the filter grill'.

Service and Help

If you have any queries or concerns about using your HOOVER, please visit [hoover.ae](https://www.hoover.ae) or [hoover.sa](https://www.hoover.sa)

Consumables

To purchase spares and accessories, please visit [hoover.ae](https://www.hoover.ae) or [hoover.sa](https://www.hoover.sa)

The use of genuine HOOVER spare parts helps to maintain optimised performance and validates your guarantee.

Technical Specifications

CDSW-MSME

Weight:	5.5kg
Dirty water tank capacity:	2L
Clean water/solution tank capacity:	2.5L
Cord length:	6.5m

Subject to technical change without notice.

HOOVER is a trademark of Techtronic Cordless GP © 2024 Techtronic Cordless GP. All rights reserved.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

This marking on the product(s) and/or accompanying documents means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point.



الخدمة والمساعدة

إذا كانت لديك أي تساؤلات أو مخاوف متعلقة باستخدام غسالة سجاد هوفر، فتفضل بزيارة الموقع الإلكتروني **hoover.sa** أو **hoover.ae**

المستلزمات الاستهلاكية

لشراء قطع الغيار والملحقات، تفضل بزيارة موقعنا الإلكتروني: **hoover.sa** أو **hoover.ae**
إن استخدام قطع غيار هوفر الأصلية يساعد في الحفاظ على الأداء الأمثل وعلى سلامة ضمانك.

CDSW-MSME

المواصفات الفنية

الوزن: 5.5 كجم

سعة خزان المياه المتسخة: 2 لتر

سعة خزان المياه النظيفة/محلول التنظيف: 2.5 لتر

طول الكابل: 6.5 م

خاضع للتغيير الفني بدون إشعار.

HOOVER is a trademark of Techtronic Cordless GP © 2024 Techtronic Cordless GP. All rights reserved

ينبغي ألا يتم التخلص من نفايات المنتجات الكهربائية عن طريق طرحها مع النفايات المنزلية.
الرجاء إعادة تدويرها إن وجدت مراكز إعادة التدوير. راجع الأمر مع السلطة المحلية أو بائع التجزئة للحصول على النصائح المتعلقة بإعادة التدوير.

إن وجود هذه العلامة على المنتج (المنتجات) و/أو المستندات المصاحبة له يعني أن المعدات الكهربائية والإلكترونية المستعملة لا يجب الخلط بينها وبين النفايات المنزلية العامة. لإجراء أعمال الإصلاح والاسترداد وإعادة التدوير بشكل صحيح، من فضلك اصطحب هذا المنتج (هذه المنتجات) إلى نقاط التجميع المخصصة حيث سيتم قبولها دون أي تكلفة. إن التخلص من هذا المنتج بشكل صحيح سيساعد في توفير الموارد الثمينة ومنع أي تأثيرات سلبية محتملة على صحة الإنسان والبيئة، والتي قد تنشأ نتيجة التعامل الخاطئ مع النفايات.
الرجاء الاتصال بالسلطة المحلية للحصول على مزيد من التفاصيل حول أقرب نقطة تجميع مخصصة لك.



تنبيه: أفضل الجهاز من الكهرياء دائماً قبل إجراء أي أعمال صيانة/فحوص استكشاف الأعطال وإصلاحها

هل هناك ملحق مفقود؟

- تحقق من المحتويات الموجودة في الصندوق للتأكد من تضمين القطعة بالتأكد مع جهازك.

لماذا لا يوجد طاقة بالجهاز؟

- ربما لا يكون القابس مدخلاً بالكامل في مقبس الكهرياء.
- قد يلزم استبدال المصهر الموجود في القابس. استبدل المصهر دائماً باستخدام مصهر 13 أمبير مطابق للمواصفات البريطانية.
- ربما يوجد خلل في منظم حرارة المحرك. إذا حدث ذلك، فافصل الجهاز. افحص الجهاز بحثاً عن أي انسداد ونظّف شبكة الفلتر.

لماذا لا يتم توزيع الماء/المحلول؟

- اضغط على الأصبع الموجود على الخرطوم لإطلاق المحلول ومزيج الماء. انتقل إلى "استخدام الأدوات".
- تأكد من تركيب خزان المياه النظيفة/ المحلول بإحكام. يُرجى الرجوع إلى قسم "ملء خزان محلول التنظيف/المياه النظيفة".
- خزان المياه النظيفة/ المحلول فارغ. أعد ملء الخزان. يُرجى الرجوع إلى قسم "ملء خزان محلول التنظيف/المياه النظيفة".
- قد يكون صمام خزان المياه النظيفة/المحلول عالقاً، أمسك الخزان فوق الحوض واضغط على الصمام الموجود تحته لتحريره.
- يتم احتجاز الهواء في المضخة والخرطوم. شغل الجهاز، وحسّر المضخة بخفض الخرطوم إلى الأرض مع الاستمرار في الضغط على الأصبع مدة تصل إلى دقيقة واحدة.

لماذا لا يقوم الجهاز بالالتقاط؟

- تأكد من عدم وجود أي انسدادات أو عوائق في الخرطوم. انتقل إلى "وظيفة التنظيف الذاتي للخرطوم".
- ربما تم تنشيط العوامة الموجودة في خزان المياه المتسخة. أفرغ خزان المياه المتسخة وانتظر حتى تستقر العوامة قبل إعادة تشغيل جهازك.
- قد لا تكون فوهة الأداة ملائمة للسطح، قم بإزالة الفوهة للأمام. انتقل إلى "استخدام الأدوات".
- تحقق من أداة الغسيل للتأكد من عدم وجود انسدادات وأنها خالية من الشوائب. انتقل إلى "إزالة وتنظيف أداة الغسيل والملحقات".
- قد لا يتم تجميع خزان المياه المتسخة بشكل صحيح أو قد لا يتم تركيب الغطاء بإحكام.
- يُرجى الرجوع إلى قسم "تفريغ خزان المياه المتسخة وتنظيفه".
- تأكد من تركيب فوهة أداة الغسل بشكل صحيح. انتقل إلى "استخدام الأدوات".
- افحص شبكة الفلتر الموجودة أسفل خزان المياه المتسخة بحثاً عن الأوساخ والأتربة. انتقل إلى "تنظيف شبكة الفلتر".

11 الصيانة:

ملاحظة مهمة: قبل تخزين خزان المياه النظيفة/المحلول وخزان المياه المتسخة، أفرغهما واشطفهما واتركهما حتى يجفَّ في الهواء قبل إعادة تركيبهما.

التخزين



اضغط على مقبض الحمل لأسفل في حالة التخزين وعدم الاستخدام.



لُف سلك الكهرباء حول خطافات التحرير السريع للسلك.

إزالة وتنظيف أداة الغسيل والملحقات




لإزالة الفوهة الموجودة على أداة الغسيل، ادفع المشبك البلاستيكي الشفاف وارفعه لأعلى فوق الزر الموجود في نهاية الخرطوم.



اسحب المشبك وارفعه لإزالة الملحق من أداة الغسيل.



اضغط على زر قفل الأداة واسحب لإزالة الأداة من الخرطوم.

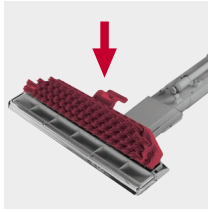

لإعادة التركيب، ثبت الجزء الأمامي من الملحق في مقدمة أداة الغسيل وادفع المشبك لأسفل لتثبيتته في مكانه.



لإعادة تركيب الفوهة، حرك الفوهة في أداة الغسيل حتى تستقر في مكانها.



اشطف الأدوات والملحقات والفوهة بماء دافئ (40 درجة مئوية كحد أقصى) لإزالة الأوساخ/الأتربة.

تنظيف شبكة الفلتر



قم بإزالة أي أوساخ وأتربة من شبكة الفلتر الموجودة أسفل خزان المياه المتسخة.



ارفع مقبض خزان المياه المتسخة واسحبه لإزالة الخزان.

وظيفة التنظيف الذاتي للخرطوم

ملاحظة مهمة: شغل وظيفة التنظيف الذاتي للخرطوم كلما استخدمت الخرطوم لإزالة أي أتربة أو ماء متبقي في الخرطوم. وتأكّد من أنّ خزان المياه المتسخة فارغ قبل استخدام وظيفة التنظيف الذاتي.



اضغط على زر تحرير الأداة
واسحب لخلع الأداة من الخرطوم.



أغلق غطاء الخزان وأعد تركيب
خزان المياه النظيفة/المحلول في
الجهاز حتى يستقر في مكانه.



ارفع غطاء خزان المياه النظيفة/
المحلول واملأ الخزان بحوالي
1 بوصة من المياه الدافئة (40
درجة مئوية بحد أقصى). لا تضيف
محلولاً.



ارفع مقبض خزان المياه النظيفة /
المحلول واسحبه لإزالة الخزان.



ارفع مشبك خزان المياه المتسخة
وانزع الغطاء من الخلف لتحريره.



بعد تنظيف الخرطوم، أوقف
تشغيل الجهاز.

ارفع مقبض خزان المياه المتسخة
واسحبه لإزالة الخزان.



شغل الجهاز واركب الخرطوم
ممتباً في مكانه حتى تفرغ خزان
المياه النظيفة. ولا تضغط على
الزناد. وكرّر هذه الخطوات حسب
الضرورة.



ادفع طرف الخرطوم إلى داخل
منفذ التنظيف الذاتي للخرطوم.



اشطف خزان المياه المتسخة
والغطاء تحت المياه (بحد أقصى
40 درجة مئوية) لإزالة الأوساخ/
الأتربة.



أفرغ المياه المتسخة في الحوض
أو المراض.



ارفع الغطاء لإزالته من على خزان
المياه المتسخة.

إفراغ وتنظيف خزان المياه المتسخة

ملاحظة مهمة: افصل الجهاز وأوقف تشغيله قبل إجراء فحوصات الصيانة أو استكشاف الأخطاء وإصلاحها.

خزان المياه المتسخة مزود بعوامة. عندما يمتلئ خزان المياه المتسخة، ستغلق العوامة وظيفة الشفط الموجودة في الجهاز. ستتمكن من معرفة حدوث ذلك وسماعه مع زيادة ضوضاء المحرك الصادرة من الجهاز. بمجرد تنشيط العوامة، أفرغ خزان المياه المتسخة إذا كان ممتلئًا.

إذا لم يكن خزان المياه المتسخة ممتلئًا، فأوقف تشغيل جهازك من مفتاح الطاقة وانتظر حتى تستقر العوامة.

أفرغ واشطف خزان المياه النظيفة/المحلول وخزان المياه المتسخة واتركه ليالجف في الهواء قبل إعادة تركيبه للتخزين.



أفرغ المياه المتسخة في الحوض أو المرحاض.



ارفع الغطاء لإزالته من على خزان المياه المتسخة.



ارفع مشبك خزان المياه المتسخة وانزع الغطاء من الخطاف لتحريره.



ارفع مقبض خزان المياه المتسخة واسحب لإزالة الخزان.



أعد تركيب خزان المياه المتسخة في الجهاز حتى يستقر في مكانه.




اعقف المشبك في الغطاء ثم ادفعه لأسفل لتثبيته في مكانه.




اشطف خزان المياه المتسخة والغطاء تحت المياه (بحد أقصى 40 درجة مئوية) لإزالة الأوساخ/الأتربة.

استخدام فرشاة الأماكن الواسعة / فرشاة المساحات الصغيرة

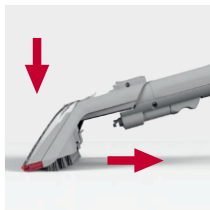

قم بإمالة الفوهة للأمام حتى تتلامس الفوهة مع السطح. اسحب للخلف لاستعادة الماء والمحلول.

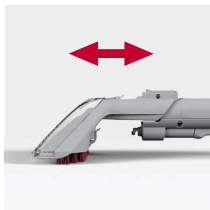

استخدم الفرشاة لتحريك أي بقع مستعصية، وادعكها ذهابًا وإيابًا.



اضغط على الأصبع الموجود في الخرطوم لإطلاق المياه ومحلول التنظيف.




في حالات الانسكاب، التقط دائمًا السائل الزائد قبل استخدام الماء/ المحلول. قم بإمالة الأداة للأمام باتجاه الانسكاب واسحب للخلف.

ملاحظة مهمة: قد يؤدي إمالة الأداة اليدوية أو تحتها إلى ضعف التقاط المياه.



استخدام أداة الشقوق

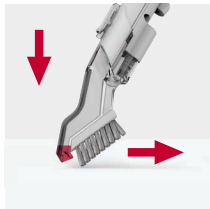

قم بإمالة الفوهة للأمام حتى تتلامس الفوهة مع السطح. اسحب للخلف لاستعادة الماء والمحلول.




استخدم الفرشاة لتحريك أي بقع مستعصية، وادعكها ذهابًا وإيابًا.




اضغط على الأصبع الموجود في الخرطوم لإطلاق المياه ومحلول التنظيف.

استخدام أداة SpinScrub اليدوية

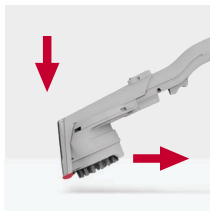

قم بإمالة الفوهة للأمام حتى تتلامس الفوهة مع السطح. اسحب للخلف لاستعادة الماء والمحلول.

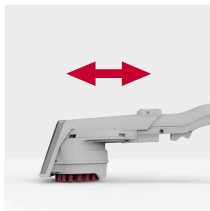

استخدم الفرشاة في حركة للأمام/ للخلف لتحريك أي بقع مستعصية.



اضغط على الأصبع الموجود في الخرطوم لإطلاق المياه ومحلول التنظيف.



اضغط على زر قفل الأداة وحرك الأداة على نهاية الخرطوم، فوق السن.



اسحب أداة القسيل والخرطوم
لخلعها من مشبك التخزين.



قم بتوصيل الجهاز بالتيار
الكهربي وت تشغيله.



أدر خطافات التحرير السريع وأزل
السلك من المشابك.

استخدام الأدوات



اختر الأداة/ الملحق.

1. فرشاة الأماكن الواسعة لتنظيف السجاد والموكيت والأرائك والمفروشات
أ) فرشاة متعددة الأغراض لتنظيف السجاد والموكيت والأرائك والمفروشات.
ب) ملحق فرك الأرضيات الصلبة لتنظيف البلاط والأرضيات الخشبية المعزولة.

2. فرشاة المساحات الصغيرة
أداة تنظيف احتياطية أصغر حجمًا لإبقاء عمليات تنظيف الفوضى الطارئة منفصلة عن عمليات التنظيف اليومي.

3. أداة الشقوق
لتنظيف الحواف والأماكن الضيقة/الشقوق.

4. أداة Spinscrub اليدوية
لاستهداف البقع والعلامات المستعصية.



اضغط على زر التشغيل/ الإيقاف
لتشغيل الجهاز.






لتركيب أحد الملحقات مع أداة
الغسيل، ثبت الجزء الأمامي من
الملحق المحدد في مقدمة أداة
الغسيل وادفع المشبك لأسفل
لتنبيته في مكانه.



اضغط على زر قفل الأداة وحرك
الأداة على نهاية الخرطوم، فوق
السن. حرر الزر عندما يكون في
مكانه.

ملء خزان المياه النظيفة/ المحلول

ملاحظة مهمة: لن يفتح غطاء الخزان عندما يكون الخزان مُمتلئًا في الجهاز. فاخلع الخزان من الجهاز لملئه.

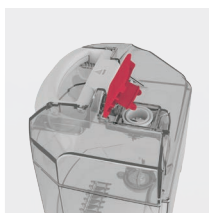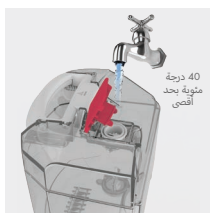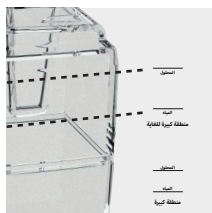

املأ الخزان بالماء الدافئ (40 درجة مئوية كحد أقصى) والمحلول إلى المستوى النظيف المطلوب، المشار إليه بواسطة الخطوط الموجودة على الخزان.

ارفع غطاء ملء خزان المياه النظيفة/المحلول لفتحه.

ارفع مقبض خزان المياه النظيفة / المحلول واسحبه لإزالة الخزان.



أعد تركيب خزان المياه النظيفة/ المحلول في الجهاز حتى يستقر في مكانه.



أغلق غطاء خزان المياه النظيفة/ المحلول.

ملاحظة مهمة: يُرجى الرجوع إلى توصيات العناية الصادرة من الشركة المصنعة قبل الاستخدام.

اختبر جميع السجاد/ الموكيت/ المفروشات/ الأرضيات الصلبة قبل الاستخدام. قبل استخدام الجهاز لتنظيف البقع والأوساخ الجافة، يجب تنظيف السطح بالمكنسة الكهربائية جيداً.


اختبار ثبات الألوان - بلل قطعة قماش بيضاء ماصة بالمحلول. في منطقة صغيرة مخفية من الأسطح المراد تنظيفها، افرك برفق بقطعة القماش المبللة. انتظر عشر دقائق وتحقق من إزالة اللون أو انتشاره بمنشفة ورقية أو قطعة قماش بيضاء. افحص جميع الأسطح المراد تنظيفها وإذا كان للسطح أكثر من لون واحد، تحقق من جميع الألوان.

اختبر منظف البقع على منطقة صغيرة مخفية - إذا لم يحدث أي تلف أو تشوه في الألياف بعد جفافها، يمكنك متابعة التنظيف. عند استخدام منظف البقع، يجب دائماً اتباع احتياطات السلامة الأساسية وعدم تشيع السجاد/المفروشات/الأرضيات الصلبة بالماء بشكل مفرط. غير مناسب للاستخدام على الأرضيات أو الأسطح الحساسة للماء. يجب استخدام محلول التنظيف المضاد للبكتيريا من هوفر فقط. استخدام محاليل أخرى قد يسبب رغوة زائدة ويؤدي للضرر. يجب ملء خزان الماء بالتنظيف بالمحلول والماء الدافئ فقط (بحد أقصى 40 درجة مئوية). ملء الخزان بالماء الساخن أو المغلي قد يتسبب في تلف الجهاز ويؤدي للضرر.

التجميع



ارفع مقبض الحمل حتى يصبح في وضع مستقيم مناسب للحمل.

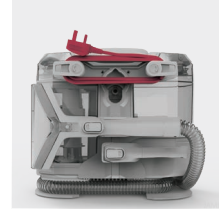


لُف سلك الكهرباء حول خطافات التحرير السريع للسلك.

1. هذا الجهاز مخصص للاستخدام المنزلي فقط، وليس للاستخدام التجاري أو الصناعي.
2. لا تترك الجهاز متصلاً بالكهرباء دون إشراف.
3. لا تستخدم الجهاز إذا تعرض للسقوط أو التلف أو القصر في المياه أو إذا تُرك في الهواء الطلق.
4. لا تستخدم الجهاز في حالة تلف سلك الطاقة أو القابس. في حالة تلف سلك الكهرباء، يجب استبداله بمعرفة شخص موهل لتجنب التعرض للخطر.
5. لا تستخدم الجهاز لشطف أي مواد قابلة للاشتعال أو الاحتراق (سائل الولاعة، والبنزين، والكبروسين، وما إلى ذلك) ولا تستخدمه في منطقة بها أبرة قابلة للانفجار أو سائل ضارة (الكحول والمبيض ومنظف أنابيب الصرف المحتوي على الأمونيا).
6. لا تستخدم الجهاز في الخارج أثناء الظروف الجوية الرطبة.
7. لا تُمسك القابس أو تستخدم الجهاز ويديك مبللتين.
8. ولا تسحب الجهاز أو تحمله من سلك الكهرباء.
9. لا تستخدم سلك الطاقة كمقبض أو تسحب سلك الطاقة حول الزوايا أو الحواف الحادة أو تغلق الباب على سلك الطاقة.
10. لا تفصل الجهاز من الكهرباء بجذب سلك الكهرباء.
11. لا تحمل الجهاز أثناء عمله.
12. لا تحاول إزالة الانسدادات باستخدام أدوات حادة، إذ قد يؤدي ذلك إلى إتلاف الجهاز. وأزل الانسدادات وفقاً للتعليمات الواردة في دليل المستخدم فقط.
13. لا تستخدم الجهاز بفرق جهد غير صحيح لأن هذا قد يؤدي إلى ضرر المستخدم أو إصابته. وستجد الجهد الكهربائي المناسب مدوناً على ملصق التصنيف.
14. لا تقط في تشيع الأرضيات/السطح. أنه عملية التنظيف دائماً بشروط جاف.
15. لا يجوز استخدام الجهاز على سطح تالف أو غير مستو أو مجهز بشكل غير صحيح.
16. لا تستخدم الجهاز على الأرضيات/الأسطح الحساسة للماء.
17. يُرجى الرجوع إلى توصيات العناية الصادرة من الشركة المصنعة قبل الاستخدام.
18. اختبر الأرضيات/الأسطح قبل استخدام الجهاز - شغل الجهاز فوق قطعة صغيرة مخفية، وفي حال عدم ظهور تلف أو تغير في اللون بعد جفافها يمكنك الاستمرار في التنظيف.
19. ينبغي ملء خزان المياه النظيفة بالماء الدافئ (بحد أقصى 40 درجة مئوية) فقط. سيؤدي ملء خزان المياه النظيفة بالماء الساخن أو المغلي إلى إتلاف الجهاز وإبطال الضمان. لا تستخدم الجهاز إلا بعدما تكون جميع خزانات المياه والفلاتر في موضعها الصحيح.
20. احرص دائماً على إضاءة المنطقة التي تنظفها جيداً.
21. لا تستبدل المصهر الموجود في المقبس سوى بمصهر بريطاني بقوة 13 أمبيراً.
22. افصل الجهاز دائماً قبل إجراء أي أعمال تنظيف أو صيانة وقبل توصيل الملحقات أو فصلها.
23. هذا الجهاز غير مخصص للاستخدام من قبل الأشخاص (بما في ذلك الأطفال) الذين يعانون من قصور جسدي أو حسي أو عقلي، أو نقص في الخبرة والمعرفة، إلا إذا تم تقديم الإشراف أو التوجيه لهم بشأن استخدام الجهاز من قبل شخص مسؤول عن سلامتهم.
24. يجب مراقبة الأطفال للتأكد من عدم استخدامهم للجهاز كلعبة.
25. توخّ مزيداً من الحذر عند تنظيف السلاسل.
26. أوقف تشغيل جميع عناصر التحكم الموجودة بالجهاز قبل فصل سلك الطاقة أو توصيله. بعد الاستخدام، لف سلك الكهرباء دائماً حول مشابك السلك المزود بها الجهاز.
27. تجنب حماية سلك الكهرباء دائماً من الأسطح الساخنة واللهب المكشوف.
28. استخدم فقط أسلاك التمديد 13 أمبيراً المعتمدة من السوق الأوروبية/المطابقة في المملكة المتحدة (CE/UKCA)، فقد ترتفع درجة حرارة أسلاك التمديد غير المعتمدة. يجب توخي الحذر عند ترتيب سلك التمديد، حيث يمكن أن يشكل خطر التعثر.
29. أبق جميع الفتحات خالية ونظيفة من الركام إذ قد يؤثر ذلك على تدفق الهواء/الشفت/شفت المياه.
30. استخدم الجهاز دائماً في وضعية قائمة. لحماية المحرك من التلف بفعل المياه المتسخة، لا تُمسك الجهاز مقلوباً أبداً أو مقل على جانبه.
31. احفظ الجهاز بعيداً عن أشعة الشمس المباشرة، وخزّنه في مكان بارد وجاف لا تقل درجة حرارته عن 5 درجات مئوية لأنّ تخزين الجهاز في درجات حرارة أقل من نقطة التجمد قد يؤدي إلى حدوث مشكلات تشغيلية. قبل تخزين الجهاز، يُرجى التأكد من أنّ جميع خزانات المياه/المحلول فارغة وأنّ المرشحات نظيفة وجافة تماماً.
32. هذا الجهاز مخصص للتنظيف الداخلي والإجراء الداخلية للسيارة أثناء ظروف الطقس الجاف.
33. يجب إبقاء الأصابع والشعر والملابس الفضفاضة بعيداً عن الأجزاء المتحركة والفتحات أثناء استخدام الجهاز.
34. قبل استخدام الجهاز، اختبر السجاد/الموكيت/المفروشات للتأكد من ثبات الألوان وعدم تشوه الوبر.
35. يجب استخدام الأدوات والمحاليل الموصى بها من شركة HOOVER فقط مع هذا الجهاز. وقد يؤدي استخدام محلول تنظيف آخر إلى إبطال الضمان.

يُرجى الاحتفاظ بالتعليمات للرجوع إليها مستقبلاً.

الوحدة

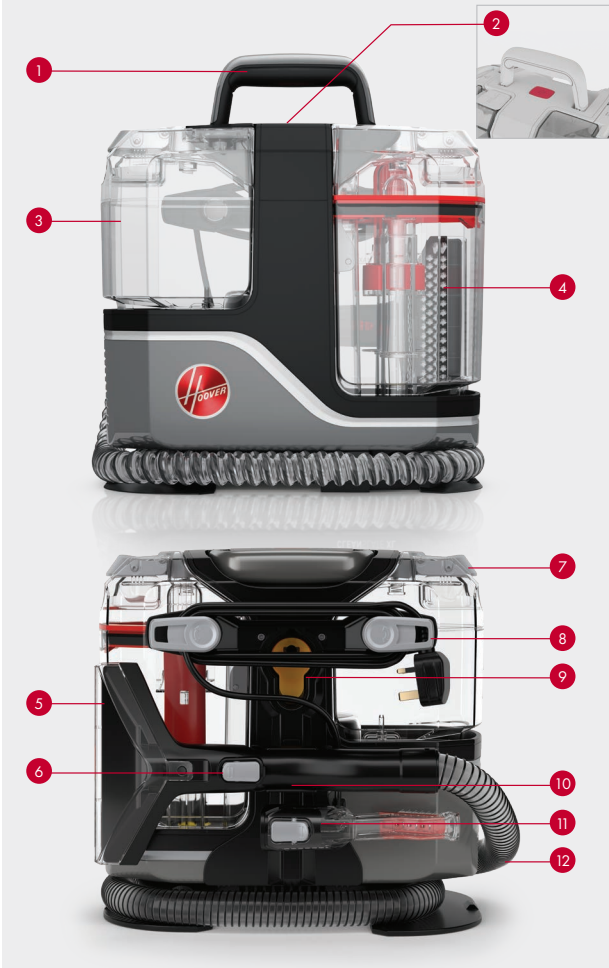

- 1 مقبض الحمل
- 2 زر التشغيل/ الإيقاف (موجود تحت المقبض)
- 3 خزان المياه النظيفة/ المحلول
- 4 خزان المياه المتسخة
- 5 فرشاة الأماكن الواسعة
- 6 زر تحرير أداة الغسيل
- 7 مقبض خزان المياه النظيفة/ المحلول
- 8 خطاطيف التحرير السريع للسلك
- 9 منفذ التنظيف الذاتي للخرطوم
- 10 مشبك تخزين الخرطوم
- 11 تخزين أداة الشقوق
- 12 الخرطوم
- 13 ملحقات فرشاة الأماكن الواسعة :
أ. ملحق متعدد الأغراض
ب. ملحق فرك الأرضية الصلبة
- 14 فرشاة المساحات الصغيرة
- 15 أداة الشقوق
- 16 أداة SpinScrub اليدوية
- 17 2x محلول التنظيف التجريبي

الملحقات





Cleanslate XL

دليل المستخدم



CDSW-MSME
Hoover.ae
Hoover.sa

CDSW-MSME_CleanSlate XL_UG Revisions

27.02.25

- Document created - OK
- PAGE 4 - All references to 'spot washer' amended to 'spot cleaner'.
- All amends reflected on Arabic side.