

HomePro

User Guide

CLSV-HPMS
CLSV-HPMA
CLSV-HPMT
Hoover.ae
Hoover.sa



2 GENERAL SAFETY INFORMATION

1. Don't leave the charger plugged in when unattended.
2. Don't use the machine if it is faulty or has been dropped, damaged or left outdoors.
3. Don't use the machine to pick up any flammable or combustible materials (lighter fluid, petrol, kerosene etc.) or use the machine in an area with explosive vapours or liquid.
4. Don't use the machine to pick up hot coals, cigarette butts, matches or smoking hot burning items or use in an area where there may be harmful fluids (chlorine, bleach and ammonia drain cleaner).
5. Don't handle the charger, battery or use the machine with wet hands.
6. Don't unplug the charger by pulling on the power cord. The power cord cannot be replaced. If the cord is damaged the charger should be scrapped.
7. Don't attempt to remove blockages with sharp objects as this may cause damage to the machine.
8. Don't use the machine with the incorrect battery or charger as this may result in damage or injury to the user. The correct battery charger information is listed on the battery pack ratings label.
9. Don't charge the battery outdoors, or leave the charger connected to the mains when not in use.
10. Don't use the machine with a damaged battery. If the battery is damaged return the machine, battery and charger to the point of purchase.
11. Don't use on a surface that is damaged, uneven or incorrectly fitted.
12. The brushbar in the floorhead constantly rotates. Never use on one spot for any prolonged period of time as this may damage the floor surface. When locked in the self-stand position always switch the machine off.
13. Always check suitability with the manufacturer of your flooring prior to using the machine.
14. Only HOOVER ONEPWR batteries and chargers should be used with this machine. See table on the next page for the full list of models.
15. Always stand the charger on a stable, level surface, uncovered and away from any heat source.
16. Always protect the charger power cord from heated surfaces and open flames.
17. Only HOOVER ONEPWR recommended tools and accessories should be used with this machine.
18. Always remove the battery from the machine before carrying out any maintenance or if storing unused for a long period of time.
19. Keep all openings clear, free from debris and don't overfill the dirt container as this may affect the airflow/suction.
20. Turn off all controls on the machine before disconnecting or connecting the battery.
21. Only use the machine indoors on dry surfaces and keep the area you're cleaning well lit.
22. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
23. Children should be supervised to ensure that they do not play with the appliance.
24. Keep fingers, hair and loose clothing away from moving parts and openings whilst using the machine.
25. Store the machine in a cool, dry area. Keep the machine away from rain and moisture.
26. Use only CE/UKCA approved 13amp extension cords, non-approved extension cords may overheat. Care should be taken to arrange the extension cord as it can be a trip hazard.
27. Take extra care when using the machine on the stairs.
28. Always test on an inconspicuous area of the flooring first.
29. Always make sure the separator and filter are fitted correctly before using your machine and only use the machine with the filter and separator in place.
30. Always check the powered floorhead and accessories are free from damage, dirt and debris before using.
31. Always use the wall mount to store the machine in between uses and never leave in the self-stand position for long periods or when unattended. Only use the self-stand positioning on a flat and stable surface.

32. Don't leave the charger stored or plugged in near metal objects.
33. Don't insert any area of the ONEPWR battery or charger into the mouth.
34. Don't insert any objects into the charger's magnetic connector area.
35. Always place the battery on a stable, level surface. The battery and charger must be uncovered and away from any heat source.
36. Ensure the surface of the magnetic connector and the charging port are free from debris before plugging into the mains and charging the battery.
37. Always use the wall mount to store the machine between uses and when charging the battery whilst it's attached to the machine.

BATTERY SAFETY PRECAUTIONS

38. Replace the battery with a HOOVER ONEPWR battery only. Use of another battery may present a risk of fire or explosion.
39. Do not attempt to disassemble the battery, remove any component projecting from the battery terminals and do not dispose of in a fire. The battery and charger have no user serviceable parts. Fire or injury may result.
40. Prior to disposal, protect exposed terminals with heavy insulating tape to prevent shorting. The battery is to be disposed of safely at your local battery recycling centre.
41. When the battery pack is not in use, keep it away from other metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
42. In case of battery leakages, avoid any contact with skin. Return the machine, battery and charger to the point of purchase.


PLEASE KEEP INSTRUCTIONS FOR FUTURE USE.

Battery Model	Description	Type	Rated Voltage	Rated Capacity	Cell Qty
BV19240VME	ONEPWR 4Ah Battery	Li-Ion	18V	≤4.0Ah	10
BV29040VME	ONEPWR 4Ah Max Battery	Li-Ion	18V	≤4.0Ah	5
BV13240VME	ONEPWR 4Ah Battery	Li-Ion	18V	≤4.0Ah	10
BV23040VME	ONEPWR 4Ah Max Battery	Li-Ion	18V	≤4.0Ah	5

Charger Model	Description
BV05115ME	ONEPWR 1.5A Slide Charger
BV05115MME	ONEPWR 1.5A Magnetic Charger

4 MACHINE OVERVIEW

- 1 Carry handle
- 2 Main unit
- 3 Dirt container filter (hidden)
- 4 Dirt container
- 5 Handheld release
- 6 Flexi clean pole
- 7 Flexi clean pole release
- 8 Floorhead release
- 9 Floorhead
- 10 Hair wrap resist brushbar
- 11 Battery level indicator light
- 12 Mode selector
- 13 Debris Detect mode indicator*
- 14 Power ON/OFF
- 15 Battery dock
- 16 Dirt release grip
- 17 Dirt container release
- 18 Dirt container lid release
- 19 ONEPWR Battery
- 20 ONEPWR Magnetic charger
- 21 Wall mount, screws and wall plugs
- 22 Crevice tool
- 23 Stair tool*
- 24 Deep cleaning tool*

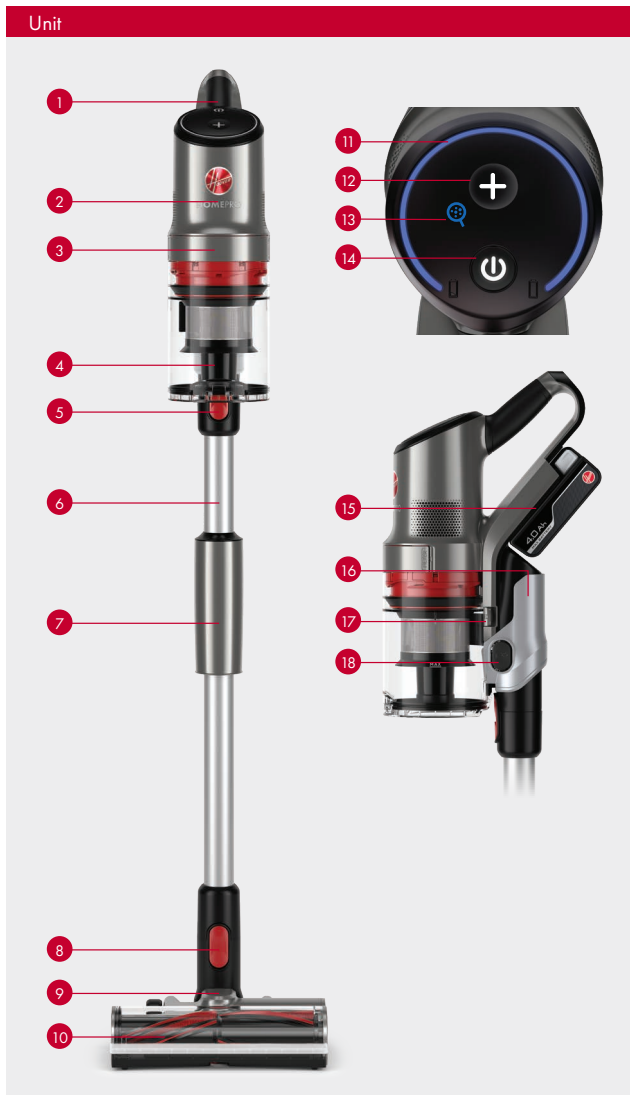

Accessories




* Included with model CLSV-HPMT only.

Assembly



Push the flexi clean pole into the floorhead until it clicks.

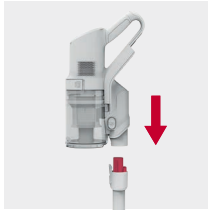


Attach the handheld to the flexi clean pole until it clicks into position.


Attaching the wall mount

IMPORTANT: Always store the machine in the wall mount. Never leave the machine in the self-stand position for long periods or when unattended.

NOTE: If charging the battery whilst it's attached to the machine, please consider the proximity of the wall mount to a mains socket.

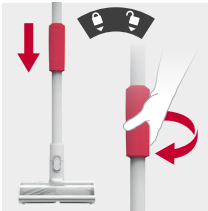

Slide the flexi clean pole release down and twist until it clicks to lock the pole into the straight position.

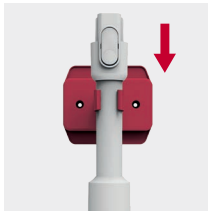


Without the handheld attached to the flexi clean pole and floorhead, push the wall mount onto the top and back of the flexi clean pole.



Choose a location for the machine to be stored. Stand the floorhead and flexi clean pole against the wall. Make sure the floorhead is flat on the floor. Do not hang.



Holding the wall mount securely against the wall, make a small mark for each screw. Remove the pole from the wall mount before fixing to the wall.

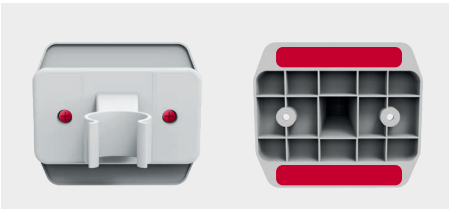

Secure the wall mount to the wall using the wall plugs and screws. For a 'screw free' option use two adhesive mounting strips (not included) attached to the back of the wall mount. Make sure the wall mount is secured to the wall before use.



Fully assemble the machine and firmly press the machine into the wall mount to secure. Always ensure the machine is securely locked into place.




Lock the floorhead into the self-stand position before storing it in the wall mount and always store the machine with the flexi clean pole straight.

Charging the battery

THIS MACHINE IS ONLY TO BE USED WITH HOOVER ONEPWR BATTERIES AND CHARGER. PLEASE READ THE SAFETY GUIDE BEFORE USE.

NOTE: Before first use, ensure the battery is fully charged. Failure to fully charge the battery before first use may result in poor battery performance. The life expectancy of the battery will vary depending on the usage of the machine.

IMPORTANT: The battery can also be charged whilst attached to the machine, always store the machine in the wall mount for charging or when not in use.

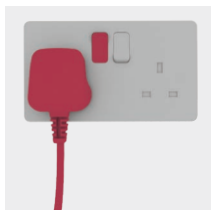

Plug the charger into the mains.



Place the magnetic connector onto the charging port, it will click into place and begin charging the battery.



When fully charged, pull the magnetic connector away from the battery to remove and unplug from the mains.

Battery charging light indicators

**CHARGING**

Each battery light will flash then remain illuminated in turn until all 4 lights are lit.

FULLY CHARGED

4 lights illuminated. When charging has completed, all lights go out after a short period of time.

CHARGING DELAY

The lights flash in a wave sequence back and forth. Battery pack is too hot or too cold, allow the battery to reach ambient temperature before charging.



To check the battery charge level press the battery symbol.

Operation (Models CLSV-HPMS and CLSV-HPMA)

WARNING: When locked in the self-stand position always switch the machine off.

If there is a blockage, or the brushbar in the floorhead is obstructed, the brushbar motor protection sensor may activate. The brushbar will stop, the on/off power button will flash, and the machine will switch off. To reset, first remove the tool from the flexi clean pole or handheld and clear any obstruction. Wait 1 minute before refitting the tool. Switch the machine on. If the power button still flashes check the filter or for blockages.



Slide the battery into the machine until it clicks into place.



Place your foot on the floorhead. Pull the handle backwards to recline.



Press the power on/off button to switch the machine on. When the floorhead is attached the brushbar will turn.



Hoover HomePro features an all surface brushroll designed for an optimum clean on any surface, from carpets to hard floors. The combination of agitative bristles and silicone flaps allow for pick up on any surface, designed to be tough on dirt and kind to your floors.



The battery indicator will illuminate white to show the remaining runtime.



+ Boost Mode
Max suction, using the most battery power and when activated provides up to 15 minutes runtime. The + illuminates white when selected.



Low Battery
When less than 20% charge is remaining the indicator light will flash red indicating the battery is running low.



To remove the battery press both the buttons to release.

8 OPERATION


Operation (Model CLSV-HPMT only)

WARNING: When locked in the self-stand position always switch the machine off.


If there is a blockage, or the brushbar in the floorhead is obstructed, the brushbar motor protection sensor may activate. The brushbar will stop, the on/off power button will flash, and the machine will switch off. To reset, first remove the tool from the flexi clean pole or handheld and clear any obstruction. Wait 1 minute before refitting the tool. Switch the machine on. If the power button still flashes check the filter or for blockages.



Slide the battery into the machine until it clicks into place.

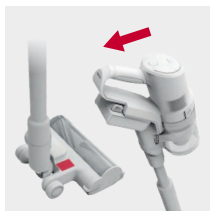

Place your foot on the floorhead. Pull the handle backwards to recline.

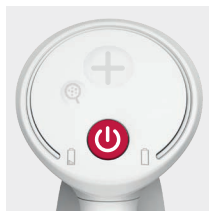

Press the power on/off button to switch the machine on. When the floorhead is attached the brushbar will turn.



Hoover HomePro features an all surface brushroll designed for an optimum clean on any surface, from carpets to hard floors.


Debris Detect Mode (Model CLSV-HPMT only)

To get the most out of your HOOVER HomePro use in Debris Detect mode.

Debris Detect mode automatically increase suction when required. This provides the most effective clean whilst optimising runtime. The machine will start with Debris Detect mode automatically activated.



The Debris Detect icon will illuminate white when activated.

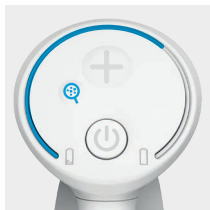

When an increased amount of debris is detected, the Debris Detect icon and battery indicator light will turn blue and the suction will automatically increase.

Mode Selection (Model CLSV-HPMT only)

Manually move through modes by pressing the mode selector.



+ Boost Mode

Max suction, using the most battery power and when activated provides up to 15 minutes runtime. The + illuminates white when selected.



🌿 Eco Mode

The machine will run in standard mode and provided maximum runtime.



🗑️ Debris Detect Mode

Press the mode selector. The Debris Detect icon will illuminate white when activated.

Battery indicator (Model CLSV-HPMT only)



The battery level indicator will illuminate white to show the remaining runtime.




🔴 Low Battery


When less than 20% charge is remaining the indicator light will flash red indicating the battery is running low.

10 OPERATION

Using the flexi clean pole

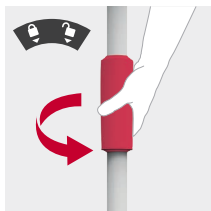


Twist the flexi clean pole release to unlock.

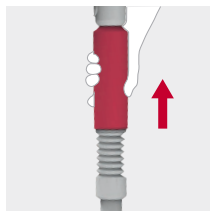

Slide up the flexi clean pole release to flex the pole.




The pole will flex during use to easily reach and clean under furniture.

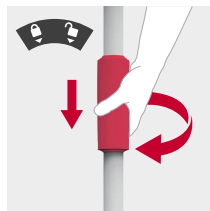

Slide the flexi clean pole release down and twist until it clicks to lock the pole into the straight position.

Using the tools

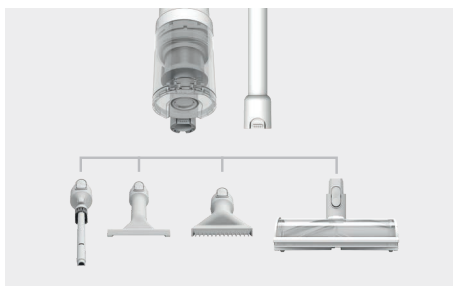

All of the accessories including the floorhead can be attached directly onto the handheld or the flexi clean pole.

To remove the tools, press the button on the tool and pull to release.

Model No:	CLSV-HPMS	CLSV-HPMA/HPMT
Crevice tool	✓	✓
Stair tool*		✓
Deep cleaning tool*		✓



Crevice tool

With integrated dusting brush. Designed to tackle the tight and hard to reach areas of the home. To use the brush press the button on the brush and slide to the end of the crevice tool.



Stair tool*

Created for easier cleaning on staircases, the velour strip will help agitate the carpet pile and remove any visible dirt and debris.



Deep cleaning tool*

The specialist silicone comb helps to gather and remove hair on carpet and upholstery.

*Included with selected models only.

WARNING: Always remove the battery before carrying out any maintenance or troubleshooting.

Emptying the dirt container


CAUTION: Don't over fill the dirt container to avoid blocking the air flow through the machine. For best cleaning results, do not fill beyond 'MAX' and empty the dirt container after every use. If the dirt container is overfull and becomes blocked, the on/off power button will flash and the machine will switch off.



Press the button on the flexi clean pole and pull to remove the handheld from the pole.



Hold the handheld over a bin and press the dirt release button to allow dirt and debris to fall out.

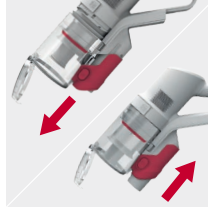

Slide the dirt release grip back and forth to remove any remaining dirt from the dirt container.



Push the dirt container door closed until it clicks into place.

Removing the dirt container and cleaning the separator




Press the button on the flexi clean pole and pull to remove the handheld from the pole.



Hold the handheld over a bin and press the dirt release button to allow dirt and debris to fall out.




Slide the dirt release grip down, press and hold the dirt container release button and pull the dirt container to remove.

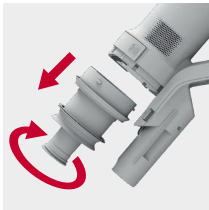

Twist and turn the separator to remove it from the handheld.



Tap the separator over a bin to remove dirt and debris and wipe over the metal shroud with a dry cloth.

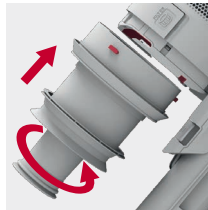

Line up the tab on the separator with the handheld and twist to lock into place.



Line up the dirt release grip with the handheld and slide the dirt container into place. The dirt bin will click when correctly fitted.

Emptying the dirt container

WARNING: If the filter is blocked, the on/off power button will flash and the machine will switch off. Wash the pre-motor filter with warm water (40°C max) and leave for 24 hours or until fully dry before refitting into the machine. For best cleaning results, filters should be tapped over a bin every 4-6 uses to remove dirt/debris, washed every 3 months and replaced every 9-12 months. Make sure all filters are in place before using the machine.




Push the tab upwards to release the filter.



Lift the filter frame out of the handheld.



Separate the sponge filter from the filter frame.

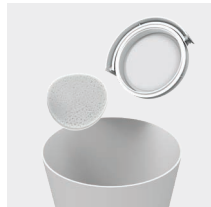


Tap the sponge filter and the frame over a bin to remove any dirt and debris.



Wash both filter parts under running water (40°C max). Leave for 24 hours or until fully dry before replacing.



Once fully dry, refit the sponge filter into the frame and slide it back into the machine. Do not use the machine without both filters in place.

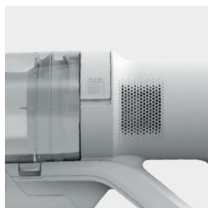

The filter will only fit one way and the frame will sit flush when correctly fitted.

Checking for blockages

WARNING: If there is a blockage or the brushbar in the floorhead is obstructed, the brushbar motor protection sensor may activate. The brushbar will stop, the on/off power button will flash, and the machine will switch off. To reset, first remove the tool from the flexi clean pole or handheld and clear any obstruction. Wait 1 minute before refitting the tool. Switch the machine on. If the power button still flashes check the filter or for blockages.



The On/Off button will flash and the machine will switch off if a blockage is detected.




The machine will switch off.

Removing a blockage in the flexi clean pole



Press the button on the flexi clean pole and pull to remove the handheld from the pole.

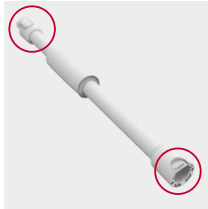

To test for a blockage, drop a small ball of paper into the flexi clean pole. The paper will drop through if the pole is clear. Use a blunt object to remove any blockage.


Removing a blockage from the handheld




Hold the handheld over a bin and press the dirt release button to allow dirt and debris to fall out.



Slide the dirt release grip down, press and hold the dirt container release button and pull the dirt container to remove.

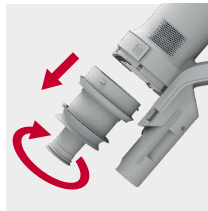

Twist and turn the separator to remove it from the handheld.

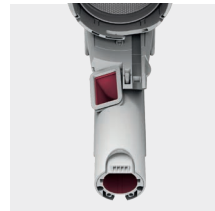

Check and clear any dirt and debris from the handheld connection points.

14 MAINTENANCE

Removing the brushbar and checking for blockages in the floorhead

WARNING: If the brushbar in the floorhead is obstructed, the brushbar motor protection sensor may activate. The brushbar will stop, the on/off power button will flash, and the machine will switch off.

To reset, first remove the tool from the flexi clean pole or handheld and clear any obstruction.

Wait 1 minute before refitting the tool. Switch the machine on. If the power button still flashes check the filter or for blockages.




The On/Off button will flash and the machine will switch off if a blockage is detected.




Press the button on the floorhead and pull to remove from the flexi clean pole.



Tilt the floorhead on its back.

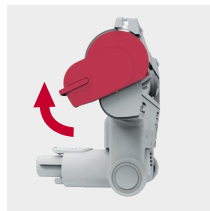

Turn the tab on the brushbar cover clockwise to release the brushbar.

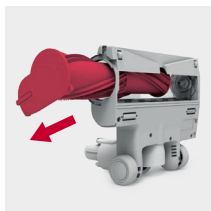

Pull the brushbar from the housing.



Wipe clean any remaining dirt and debris on the brushbar.




Check the floorhead for any blockages, dirt and debris.




Wipe the brushbar housing to remove dirt and debris.



To refit, slide the brushbar into the floorhead and onto the spindle.

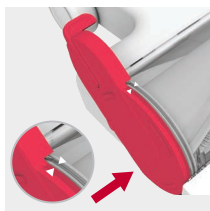

Line up the arrows and push the brushbar cover flush to the floorhead.

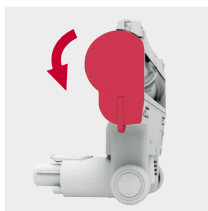

Turn the tab on the brushbar cover anticlockwise to lock into place.

WARNING: Always remove the battery before carrying out any maintenance or troubleshooting.

Is there an accessory missing?

- Check the contents on the box to make sure the part is definitely included with your machine.

Why does the machine have no power?

- The battery is not fitted correctly. Go to 'Operation'.
- The battery has no charge. Go to 'Charging the battery'.
- The On/Off power button has not been activated. Go to 'Charging the battery'.
- The motor thermostat may have tripped. Empty the dirt container and check for blockages. Clean the filters and allow the machine to cool for approximately 1 hour. If you have washed the filters, wait 24 hours to fully dry before placing back on the machine. Go to 'Cleaning and replacing the filter'.
- The brushbar motor sensor in the powered floorhead has been activated. To reset remove the powered floorhead from the flexi clean pole/handheld and clear any obstruction. Wait 1 minute before refitting the powered floorhead, switch the machine on. Go to 'Removing the brushbar and checking for blockages in the floorhead'.

Why won't the machine pick up?

- The filter may not be fitted. Go to 'Cleaning and replacing the filter'.
- The filters may be clogged or may need replacing. Go to 'Cleaning and replacing the filter'.
- The dirt container may not be fitted correctly. Go to 'Removing the dirt container and cleaning the separator'.
- The dirt container or separator may be blocked. Check the dirt container and handheld inlet for blockages. Go to 'Removing the dirt container and cleaning the separator'.
- There may be a blockage. Go to 'Checking for blockages'.
- The powered floorhead may be blocked. Go to 'Removing the brushbar and checking for blockages in the floorhead'.
- The handheld, powered floorhead and flexi clean pole may not be correctly fitted. Go to 'Assembly'.

Why is the power button flashing?

- There may be a blockage or the brushbar is obstructed. Go to 'Checking for blockages' and 'Removing the brushbar and checking for blockages in the floorhead'.

Why is there a light illuminated?*

- White - Debris Detect mode activated. Go to 'Operation'. *
- Blue - Debris has been detected. Go to 'Operation'. *
- Green - Eco mode activated. Go to 'Operation'. *

Why won't the brushbar in the powered floorhead turn?

- The brushbar in the floorhead may be obstructed. Go to 'Removing the brushbar and checking for blockages in the floorhead'.
- The handheld, flexi clean pole or floorhead may not be correctly fitted. Go to 'Assembly'.

* Included with selected models only.

16 OTHER INFORMATION

Service and Help

If you have any queries or concerns about using your HOOVER, please visit **hoover.ae** or **hoover.sa**

Consumables

To purchase spares and accessories, please visit **hoover.ae** or **hoover.sa**

The use of genuine HOOVER spare parts helps to maintain optimised performance and validates your guarantee.

Technical Specifications

CLSV-HPMS/HPMA/HPMT

Weight (without battery pack):	3kg
Dirt bin capacity:	0.7L

Subject to technical change without notice.

HOOVER is a trademark of Techtronic Cordless GP © 2026 Techtronic Cordless GP. All rights reserved.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

This marking on the product(s) and/or accompanying documents means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point.



الخدمة والمساعدة

إذا كنت لديك أي تساؤلات أو مخاوف متعلقة باستخدام مكنسة هوفر اللاسلكية، فتفضل بزيارة الموقع الإلكتروني **hoover.ae** أو **hoover.sa**

المستلزمات الاستهلاكية

لشراء قطع الغيار والملحقات، تفضل بزيارة موقعنا الإلكتروني: **hoover.ae** أو **hoover.sa**
إن استخدام قطع غيار هوفر الأصلية يساعد في الحفاظ على الأداء الأمثل وعلى سلامة ضمانك.

CLSV-HPMS/HPMA/HPMT

المواصفات الفنية

3 كجم
0.7 لتر

الوزن (دون حزمة البطارية):
سعة حاوية الغبار:

خاضع للتغيير الفني بدون إشعار.

HOOVER is a trademark of Techtronic Cordless GP © 2026 Techtronic Cordless GP. All rights reserved

ينبغي ألا يتم التخلص من نفايات المنتجات الكهربائية عن طريق طرحها مع النفايات المنزلية.
الرجاء إعادة تدويرها إن وجدت مراكز إعادة التدوير. راجع الأمر مع السلطة المحلية أو بائع التجزئة للحصول على النصائح المتعلقة بإعادة التدوير.

إن وجود هذه العلامة على المنتج (المنتجات) و/أو المستندات المصاحبة له يعني أن المعدات الكهربائية والإلكترونية المستعملة لا يجب الخلط بينها وبين النفايات المنزلية العامة. لإجراء أعمال الإصلاح والاسترداد وإعادة التدوير بشكل صحيح، من فضلك اصطحب هذا المنتج (هذه المنتجات) إلى نقاط التجميع المخصصة حيث سيتم قبولها دون أي تكلفة. إن التخلص من هذا المنتج بشكل صحيح سيساعد في توفير الموارد الثمينة ومنع أي تأثيرات سلبية محتملة على صحة الإنسان والبيئة، والتي قد تنشأ نتيجة التعامل الخاطئ مع النفايات.
الرجاء الاتصال بالسلطة المحلية للحصول على مزيد من التفاصيل حول أقرب نقطة تجميع مخصصة لك.



تحذير: افصل البطارية دائماً قبل إجراء أي صيانة أو استكشاف الأخطاء وإصلاحها.

هناك قطعة ملحقة مفقودة

- تحقق من المحتويات المدونة على الصندوق للتأكد من أن هذه القطعة بالتحديد مرفقة مع الجهاز.

لماذا لا توجد طاقة في الجهاز؟

- لم يتم تركيب البطارية بشكل صحيح. يُرجى الرجوع إلى قسم "التشغيل".
- البطارية غير مشحونة، يُرجى الرجوع إلى قسم "شحن البطارية".
- لم يتم تنشيط زر التشغيل/إيقاف التشغيل. يُرجى الرجوع إلى قسم "شحن البطارية".
- ربما يكون هناك خلل في منظم حرارة المحرك. أفرغ حاوية الأثرية وتحقق من عدم وجود أي انسداد. نظّف الفلاتر، واركب الجهاز ليبرد لمدة ساعة تقريباً. إذا غسّلت الفلاتر، فانتظر لمدة 24 ساعة حتى تجف تماماً قبل وضعها مرة أخرى في الجهاز. يُرجى الرجوع إلى قسم "تنظيف الفلتر واستبداله".
- تم تفعيل مستشعر محرك قضيب الفرشاة على رأس تنظيف الأرضية. لإعادة الضبط، أزل رأس تنظيف الأرضية من ذراع/أداة اليد المرنّة وأزل أي عوائق. انتظر دقيقة واحدة قبل إعادة تركيب رأس الأرضية، ثم شغل الجهاز. راجع قسم "فحص قضيب الفرشاة ورأس تنظيف الأرضية بحثاً عن أي عوائق".

ما الذي يجعل الجهاز غير قادر على الشفط؟

- قد لا يكون الفلتر مُركباً. يُرجى الرجوع إلى قسم "تنظيف الفلتر واستبداله".
- قد تكون الفلاتر مسدودة أو قد تحتاج إلى استبدال. يُرجى الرجوع إلى قسم "تنظيف الفلتر واستبداله".
- قد لا تكون حاوية الأثرية مركبة بشكل صحيح. يُرجى الرجوع إلى قسم "إزالة حاوية الأثرية وتنظيف الفاصل".
- قد يكون هناك انسداد في حاوية الأثرية أو الفاصل. افحص حاوية الأثرية والمدخل اليدوي بحثاً عن أي انسدادات. يُرجى الرجوع إلى قسم "إزالة حاوية الأثرية وتنظيف الفاصل".
- قد يكون هناك انسداد. يُرجى الرجوع إلى قسم "التحقق من عدم وجود انسدادات".
- قد يكون رأس الأرضية الذي يعمل بالطاقة مسدوداً. يُرجى الرجوع إلى قسم "عارضة الفرشاة والتحقق من عدم وجود انسدادات في رأس الأرضية".
- قد لا تكون الأداة اليدوية ورأس الأرضية الذي يعمل بالطاقة وذراع التنظيف المرنّة قد تم تركيبهم بشكل صحيح. يُرجى الرجوع إلى قسم "التجميع".

لماذا يومض زر الطاقة؟

- قد يكون هناك انسداد أو قد يكون هناك ما يعوق عارضة الفرشاة. يُرجى الرجوع إلى قسم "التحقق من عدم وجود انسدادات" وقسم "عارضة الفرشاة والتحقق من عدم وجود انسدادات في رأس الأرضية".

ما سبب وجود مصباح مضيء؟*

- الأبيض - تنشيط وضع اكتشاف الأوساخ. انتقل إلى قسم "التشغيل".*
- الأزرق - تم اكتشاف أوساخ. انتقل إلى قسم "التشغيل".*
- الأخضر - تنشيط وضع توفير الطاقة. انتقل إلى قسم "التشغيل".*

لماذا لا تدور عارضة الفرشاة في رأس الأرضية الذي يعمل بالطاقة؟


- قد يكون هناك ما يعوق رأس الأرضية. يُرجى الرجوع إلى قسم "عارضة الفرشاة والتحقق من عدم وجود انسدادات في رأس الأرضية".
- قد لا تكون الأداة اليدوية أو ذراع التنظيف المرنّة أو رأس الأرضية مركبة بشكل صحيح. يُرجى الرجوع إلى قسم "التجميع".

*تأتي مع طرازات محددة فقط.


عارضة الفرشاة والتحقق من عدم وجود انسدادات في رأس الأرضية

تحذير: في حالة إعاقة عارضة الفرشاة الموجودة في رأس الأرضية، فقد يتم تنشيط مستشعر حماية محرك عارضة الفرشاة. سوف تتوقف عارضة الفرشاة، وسوف يومض زر التشغيل/إيقاف التشغيل، وسوف يتوقف الجهاز عن العمل.

لإعادة الضبط، اخلع أولاً الأداة من ذراع التنظيف المرنية أو الأداة اليدوية، وأزل أي عوائق. انتظر لمدة دقيقة واحدة قبل إعادة تركيب الأداة. شغل الجهاز. إذا استمر زر الطاقة في الوميض، افحص الفلتر أو ابحث عن أي انسدادات.

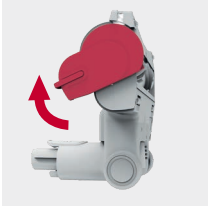

أدر اللسان الموجود في غطاء عارضة الفرشاة في اتجاه عقارب الساعة لتحرير عارضة الفرشاة.

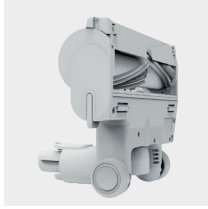

قم بإزالة رأس الأرضية على ظهره.



اضغط على الزر الموجود على رأس الأرضية، واسحبه لخلعه من ذراع التنظيف المرنية.



سوف يومض زر التشغيل/إيقاف التشغيل، وسوف يتوقف الجهاز عن العمل في حال اكتشاف انسداد.




امسح مبيت عارضة الفرشاة لإزالة أي أوساخ وأتربة.



افحص رأس الأرضية لاكتشاف أي انسدادات أو أوساخ أو أتربة.




امسح أي أوساخ وأتربة متبقية على عارضة الفرشاة.

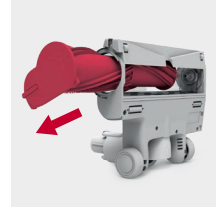

اسحب عارضة الفرشاة من مبيتها.



أدر اللسان الموجود في غطاء عارضة الفرشاة في عكس اتجاه عقارب الساعة بحيث يُقفل في موضعه.

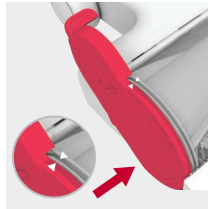

حاذٍ بين الأسهُم، وادفع غطاء عارضة الفرشاة بحيث يكون مستويًا مع رأس الأرضية.



لإعادة التركيب، ادفع عارضة الفرشاة في رأس الأرضية وعلى المحور الدوار.

التحقق من عدم وجود انسدادات

تحذير: في حالة وجود انسدادات أو إعاقة عارضة الفرشاة الموجودة في رأس الأرضية، فقد يتم تنشيط مستشعر حماية محرك عارضة الفرشاة. سوف تتوقف عارضة الفرشاة، وسوف يومض زر التشغيل/إيقاف التشغيل، وسوف يتوقف الجهاز عن العمل. لإعادة الضبط، اخلع أولاً الأداة من ذراع التنظيف المربة أو الأداة اليدوية، وأزل أي عوائق. انتظر لمدة دقيقة واحدة قبل إعادة تركيب الأداة. شغل الجهاز. إذا استمر زر الطاقة في الوميض، افحص الفلتر أو ابحث عن أي انسدادات.




سوف يتوقف الجهاز عن العمل.



سوف يومض زر التشغيل/إيقاف التشغيل، وسوف يتوقف الجهاز عن العمل في حال اكتشاف انسداد.

إزالة انسداد من ذراع التنظيف المربة

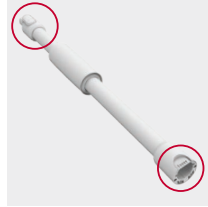

لاختبار وجود انسداد، أسقط كرة ورقية صغيرة في ذراع التنظيف المربة. وإذا كانت الذراع نظيفة، فسوف تسقط الكرة الورقية خارجة منها. استخدم أداة غير حادة لإزالة أي انسداد.




اضغط على الزر الموجود في ذراع التنظيف المربة، واسحب الأداة اليدوية لخلعها من الذراع.

إزالة انسداد من الأداة اليدوية



افحص نقاط توصيل الأداة اليدوية وأزل أي أوساخ أو أتربة منها.

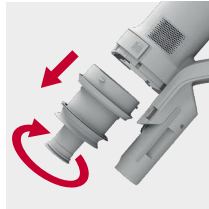

لّف الفاصل وأدره لخلعه من الأداة اليدوية.



ادفع مقبض إخراج الأتربة إلى أسفل، واضغط على زر تحرير حاوية الأتربة ضغطاً مستمراً واسحب حاوية الأتربة لخلعها.



أمسك الأداة اليدوية فوق سلة مهملات واضغط على زر إخراج الأتربة لإسقاط الأوساخ والأتربة.

إفراغ حاوية الأتربة


تحذير: في حال انسداد الفلتر، سوف يومض زر التشغيل/إيقاف التشغيل، وسوف يتوقف الجهاز عن العمل. اغسل فلتر ما قبل المحرك بمياه دافئة (لا تتجاوز درجة حرارتها 40 درجة مئوية) واتركه لمدة 24 ساعة حتى يجف تمامًا قبل إعادة تركيبه في الجهاز. للحصول على أفضل النتائج من التنظيف، يجب نفخ الفلاتر في سلة المهملات كل 4 أو 6 مرات استخدام لإزالة الأتربة/الأوساخ، ويجب غسلها كل 3 أشهر واستبدالها كل 9 أشهر أو 12 شهرًا. تأكد من وضع جميع الفلاتر في أماكنها الصحيحة قبل استخدام الجهاز.



اضغط على الفلتر الإسفنجي وإطاره على سلة المهملات لإزالة أي أوساخ وأتربة.




افصل الفلتر الإسفنجي من إطار الفلتر.

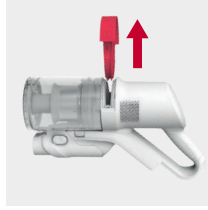


ارفع إطار الفلتر خارج الأداة اليدوية.



ادفع اللسان لأعلى لفك الفلتر.

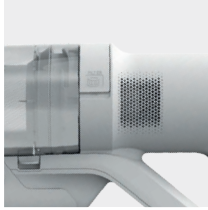

لن يُمكن تركيب الفلتر إلا باتجاه واحد، وينبغي أن يكون إطاره مستويًا عند تركيبه بالشكل الصحيح.

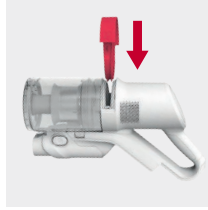

بعد جفاف الفلتر الإسفنجي تمامًا، رُكِّبه في الإطار وادفعه لإعادته إلى داخل الجهاز. لا تستخدم الجهاز إلا بعد تركيب الفلترين في مكانيهما.



اغسل الفلترين تحت المياه الجارية (بدرجة حرارة 40 درجة مئوية كحد أقصى). واتركهما لمدة 24 ساعة أو حتى يجفًا تمامًا قبل إعادة تركيبهما.

تحذير: افصل البطارية دائماً قبل إجراء أي صيانة أو استكشاف الأخطاء وإصلاحها.

إفراغ حاوية الأتربة


تنبيه: لا تملأ حاوية الأتربة أكثر من اللازم لتجنب سدّ مسار تدفق الهواء عبر الجهاز. للحصول على أفضل نتائج من التنظيف، لا تدع حاوية الأتربة تمتلئ بما يتجاوز علامة "MAX" وأفرغها بعد كل استخدام. في حال امتلاء حاوية الأتربة بما يتجاوز حدها الأقصى ومن ثم انسدادها، سوف يوضع زر التشغيل/إيقاف التشغيل، وسوف يتوقف الجهاز عن العمل.



ادفع باب تحرير حاوية الأتربة حتى يستقر في مكانه مغلقاً بصوت نقرة.



ادفع مقبض إخراج الأتربة إلى الخلف والأمام لإزالة أي أوساخ متبقية من حاوية الأتربة.

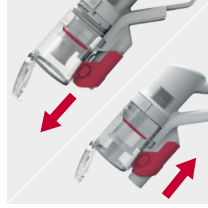

أمسك الأداة اليدوية فوق سلة مهملات واضغط على زر إخراج الأتربة لإسقاط الأوساخ والأتربة.



اضغط على الزر الموجود في ذراع التنظيف المرنة، واسحب الأداة اليدوية لخلعها من الذراع.

إزالة حاوية الأتربة وتنظيف الفاصل



ادفع مقبض إخراج الأتربة إلى أسفل، واضغط على زر تحرير حاوية الأتربة ضغطاً مستمراً واسحب حاوية الأتربة لخلعها.




أمسك الأداة اليدوية فوق سلة مهملات واضغط على زر إخراج الأتربة لإسقاط الأوساخ والأتربة.



اضغط على الزر الموجود في ذراع التنظيف المرنة، واسحب الأداة اليدوية لخلعها من الذراع.




حاذّ بين مقبض إخراج الأتربة وبين الأداة اليدوية، وادفع حاوية الأتربة لتستقر في موضعها. سوف تصدر حاوية الأتربة صوت نقرة عند تركيبها بالشكل الصحيح.

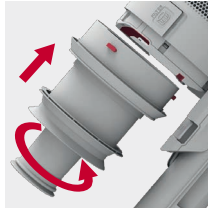

حاذّ اللسان الموجود في الفاصل مع الأداة اليدوية وأدره حتى يثبت في مكانه.




اضغط على الفاصل فوق حاوية الغبار لإزالة الأوساخ والأتربة وامسح الغطاء المعدني بقطعة قماش جافة.

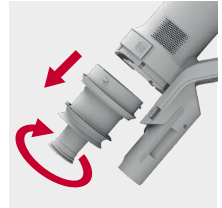


لُفّ الفاصل وأدره لخلعه من الأداة اليدوية.


استخدام ذراع التنظيف المرن

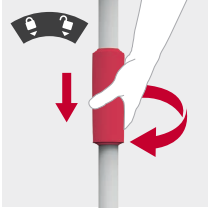


ادفع مقبض تحرير ذراع التنظيف المرن إلى أسفل ولفه حتى يثبت في موضعه بصوت نقره لتثبيت الذراع في وضعيه مستقيمة.

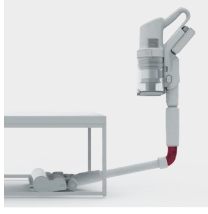

سوف تثني الذراع أثناء الاستخدام للوصول إلى ما تحت قطع الأثاث وتنظيفه بسهولة.

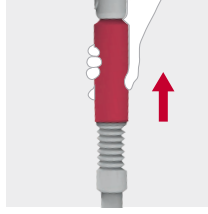

ادفع مقبض تحرير ذراع التنظيف المرن إلى أعلى لتثني الذراع.

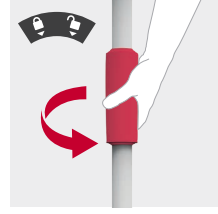


لف مقبض تحرير ذراع التنظيف المرن لفاك قفله.

استخدام الأدوات

يمكن توصيل جميع الملحقات، بما في ذلك رأس الأرضية، مباشرةً بالأداة اليدوية أو ذراع التنظيف المرن.

لخلع الأدوات، اضغط على الزر الموجود في الأداة واسحبها لفتكها.

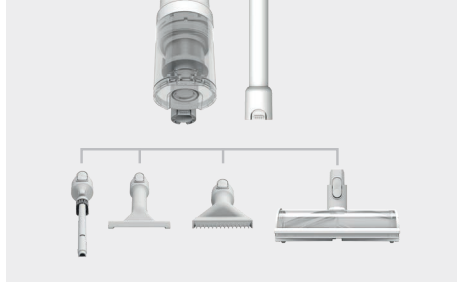

رقم الطراز:	CLSV-HPMA/HPMT	CLSV-HPMS
أداة الشقوق	✓	✓
أداة تنظيف الدرج*	✓	
أداة التنظيف العميق*	✓	



أداة التنظيف العميق*

يساعد المشط السيليكون المتخصص على جمع الشعر المنصق بالسجاد والمفروشات.



أداة تنظيف الدرج*

صُممت هذه الأداة لتنظيف الدرج بسهولة أكبر، ويساعد الشريط الوري على تحريك وبر السجاد وإزالة أي أتربة وأوساخ ظاهرة.



أداة الشقوق

مزودة بفرشاة مدمجة لتنظيف الغبار. صُممت هذه الأداة للتعامل مع مناطق المنزل الضيقة والتي يصعب الوصول إليها. لاستخدام الفرشاة، اضغط على الزر الموجود في الفرشاة ودفعه إلى طرف أداة الشقوق.

اختيار الوضع (مع الطراز CLSV-HPMT فقط)

تتَّكَلَّ بين الأوضاع يدويًا بالضغط على محدد الوضع.



وضع اكتشاف الأوساخ

اضغط على محدد الوضع. سيضيء رمز اكتشاف الأوساخ باللون الأبيض عند تنشيطه.



وضع توفير الطاقة

سيعمل الجهاز في الوضع القياسي وحتى أقصى وقت تشغيل متاح.



+ وضع الأداء القوي

أقصى قوة شفط، باستخدام أقصى قدرة للبطارية وعند تنشيطه يوفر وقت تشغيل يصل إلى 15 دقيقة. يضيء رمز + باللون الأبيض عند تحديده.

مؤشر البطارية (مع الطراز CLSV-HPMT فقط)



شحن البطارية منخفض

عندما يتبقى أقل من 20% من الشحن، سيومض مصباح الإشارة باللون الأحمر مشيرًا إلى أن البطارية على وشك النفاد.



سوف يُضيء مؤشر مستوى شحن البطارية باللون الأبيض ليُظهر وقت التشغيل المتبقي.

التشغيل (طراز CLSV-HPMT فقط)

تحذير: عند إيقاف الجهاز في الوضع القائم، احرص دائماً على إيقاف تشغيله.


في حالة وجود انسدادات أو إعاقة عارضة الفرشاة الموجودة في رأس الأرضية، فقد يتم تنشيط مستشعر حماية محرك عارضة الفرشاة. سوف تتوقف عارضة الفرشاة، وسوف يوضع زر التشغيل/إيقاف التشغيل، وسوف يتوقف الجهاز عن العمل. لإعادة الضبط، اخلع أولاً الأداة من ذراع التنظيف المرنة أو الأداة البدوية، وأزل أي عوائق. انتظر لمدة دقيقة واحدة قبل إعادة تركيب الأداة. شغل الجهاز. إذا استمر زر الطاقة في الوميض، افحص الفلتر أو أبحث عن أي انسدادات.



يضم جهاز Hoover HomePro فرشاة دوارة لجميع الأسطح مصممة لتنظيف أي سطح بشكل أمثل، مثل السجاجيد والأرضيات الصلبة.



اضغط على زر تشغيل/إيقاف تشغيل الطاقة لتشغيل الجهاز. عند توصيل رأس الأرضية، سوف تدور عارضة الفرشاة.

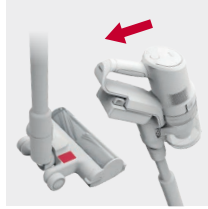

ضع قدمك على رأس الأرضية. اسحب المقبض للخلف للإمالة.



أدخل البطارية في الجهاز حتى تستقر في موضعها بصوت نقرة.

وضع اكتشاف الأوساخ (مع الطراز CLSV-HPMT فقط)

لتحقيق أقصى استفادة من Hoover HomePro، استخدم وضع اكتشاف الأوساخ. يعمل وضع اكتشاف الأوساخ على زيادة قوة الشفط عند اللزوم. وهذا يعطي القدرة على التنظيف بأقصى كفاءة مع تحسين وقت التشغيل. سيبدأ الجهاز العمل ووضع اكتشاف الأوساخ يعمل بالفعل.



عند اكتشاف كمية زائدة من الأوساخ، يضيء مؤشر البطارية ورمز اكتشاف الأوساخ ويتحول لونه إلى الأزرق وتزيد قوة الشفط تلقائياً.



سيضيء رمز اكتشاف الأوساخ باللون الأبيض عند تشغيته.

تحذير: عند إيقاف الجهاز في الوضع القائم، احرص دائمًا على إيقاف تشغيله.

في حالة وجود انسدادات أو إعاقة عارضة الفرشاة الموجودة في رأس الأرضية، فقد يتم تنشيط مستشعر حماية محرك عارضة الفرشاة. سوف تتوقف عارضة الفرشاة، وسوف يومض زر التشغيل/إيقاف التشغيل، وسوف يتوقف الجهاز عن العمل. لإعادة الضبط، اخلع أولاً الأداة من ذراع التنظيف المرنة أو الأداة البدوية، وأزل أي عوائق. انتظر لمدة دقيقة واحدة قبل إعادة تركيب الأداة. شغل الجهاز. إذا استمر زر الطاقة في الوميض، افحص الفلتر أو ابحث عن أي انسدادات.



يضم جهاز Hoover HomePro فرشاة دوارة لجميع الأسطح مصممة لتنظيف أي سطح بشكل أمثل، مثل السجاجيد والأرضيات الصلبة.



اضغط على زر تشغيل/إيقاف تشغيل الطاقة لتشغيل الجهاز. عند توصيل رأس الأرضية، سوف تدور عارضة الفرشاة.



ضع قدمك على رأس الأرضية. اسحب المقبض للخلف للإمالة.



أدخل البطارية في الجهاز حتى تستقر في موضعها بصوت نقرة.



لإزالة البطارية، اضغط على الزرين معًا لتحريرهما.



البطارية منخفضة
عندما يتبقى أقل من 20% من الشحن، سيومض مصباح الإشارة باللون الأحمر مشيرًا إلى أن البطارية على وشك النفاد.



+ وضع الأداء القوي
أقصى قوة شفط، باستخدام أقصى قدرة للبطارية وعند تنشيطه يوفر وقت تشغيل يصل إلى 15 دقيقة. يضيء رمز + باللون الأبيض عند تحديده.



سوف يضيء مؤشر البطارية باللون الأبيض ليُظهر وقت التشغيل المتبقي.

شحن البطارية

هذا الجهاز مخصص للاستخدام فقط مع بطاريات وشاحن HOOVER ONEPWR. يُرجى قراءة دليل السلامة قبل الاستخدام.

ملاحظة: تأكد من شحن البطارية بالكامل قبل الاستخدام للمرة الأولى. قد يؤدي عدم شحن البطارية بالكامل قبل استخدامها للمرة الأولى إلى ضعف أداء البطارية. يختلف متوسط العمر المتوقع للبطارية حسب استخدام الجهاز.

ملاحظة مهمة: يُمكن شحن البطارية أثناء اتصالها بالجهاز. يُرجى دائمًا تخزين الجهاز في الحامل الجداري أثناء الشحن أو عند عدم الاستخدام.



عند اكتمال الشحن، اسحب الموصل المغناطيسي بعيدًا عن البطارية لفصله، ثم افصل الشاحن عن مصدر الكهرباء.



ضع الموصل المغناطيسي على منفذ الشحن، حيث سيثبت في مكانه تلقائيًا ويبدأ شحن البطارية.



صل الشاحن بالتيار الكهربائي.

مؤشرات إضاءة شحن البطارية

الشحن

سيومض كل مؤشر ضوئي للبطارية ثم يضيء بالتتابع حتى تضاء جميع المؤشرات الأربعة.

مشحونة بالكامل

إضاءة 4 مؤشرات. عند اكتمال عملية الشحن، تنطفئ جميع المؤشرات بعد فترة قصيرة.

تأخير الشحن


تومض المؤشرات الضوئية بتسلسل يشبه الموجة ذهابة وإيابًا. يُشير ذلك إلى أن البطارية ساخنة جدًا أو باردة جدًا. يُرجى ترك البطارية حتى تصل إلى درجة حرارة الغرفة قبل الشحن.



للتحقق من مستوى شحن البطارية، اضغط على رمز البطارية.



التجميع

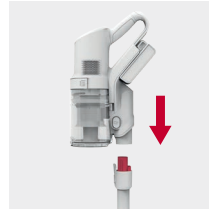

رَبِّبْ الأداة اليدوية في ذراع التنظيف المرنّة إلى أن تثبت في موضعها بصوت نقرة.



ادفع ذراع التنظيف المرنّة في رأس الأرضية إلى أن تثبت بصوت نقرة.

تركيب حامل التثبيت في الحائط

ملاحظة مهمة: حرّزّ الجهاز دائماً في حامل التثبيت في الحائط، لا تترك الجهاز أبداً في الوضع القائم دون دعم لفترات طويلة أو دون ملاحظة.


ملاحظة: في حال شحن البطارية أثناء اتصالها بالجهاز، فيرجى مراعاة قرب الحامل الجداري من مقبس الكهرباء.




ضع علامة صغيرة لكل برغي مع تثبيت حامل التثبيت في الحائط بإحكام على الحائط. انزع الذراع من حامل التثبيت في الحائط قبل تثبيت الحامل في الحائط.



اختر موقعاً لتخزين الجهاز. أوقف رأس الأرضية وذراع التنظيف المرنّة مقابل الحائط. تأكد من استقرار رأس الأرضية بوضعية مستوية على الأرضية. لا تعلّق الجهاز.

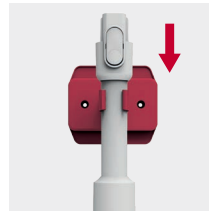

ادفع حامل التثبيت في الحائط نحو الجزء العلوي من ذراع التثبيت في الحائط وياجاه الجانب الخلفي لها. دون تركيب الأداة اليدوية في ذراع التنظيف المرنّة ورأس الأرضية.

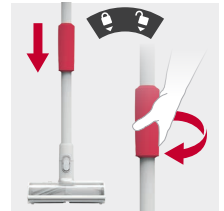


ادفع مقبض تحرير ذراع التنظيف المرنّة إلى أسفل ولفه حتى يثبت في موضعه بصوت نقرة لتثبيت الذراع في وضعية مستقيمة.



أوقف رأس الأرضية في الوضع القائم دون دعم قبل تخزينها في حامل التثبيت في الحائط، وحرّزّ الجهاز دائماً وذراع التنظيف المرنّة مستقيمة.




جَمِّع الجهاز بالكامل، واضغط على الجهاز بقوة تجاه حامل التثبيت في الحائط لإحكام تثبيته. تأكد دائماً من تثبيت الجهاز في مكانه بإحكام.

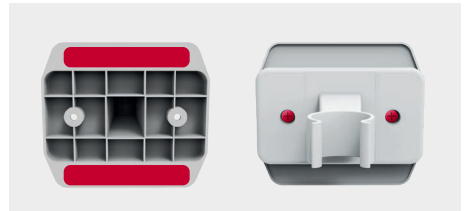


أحكم ربط حامل التثبيت في الحائط باستخدام سدادات وبراغي الحائط. لاستخدام خيار "التثبيت دون براغي" استخدم شريطين لاصقين للتثبيت (غير مشمولين) وضعهما على حامل التثبيت في الحائط من الخلف. تأكد من ثبات حامل التثبيت في الحائط بإحكام قبل الاستخدام.

الوحدة

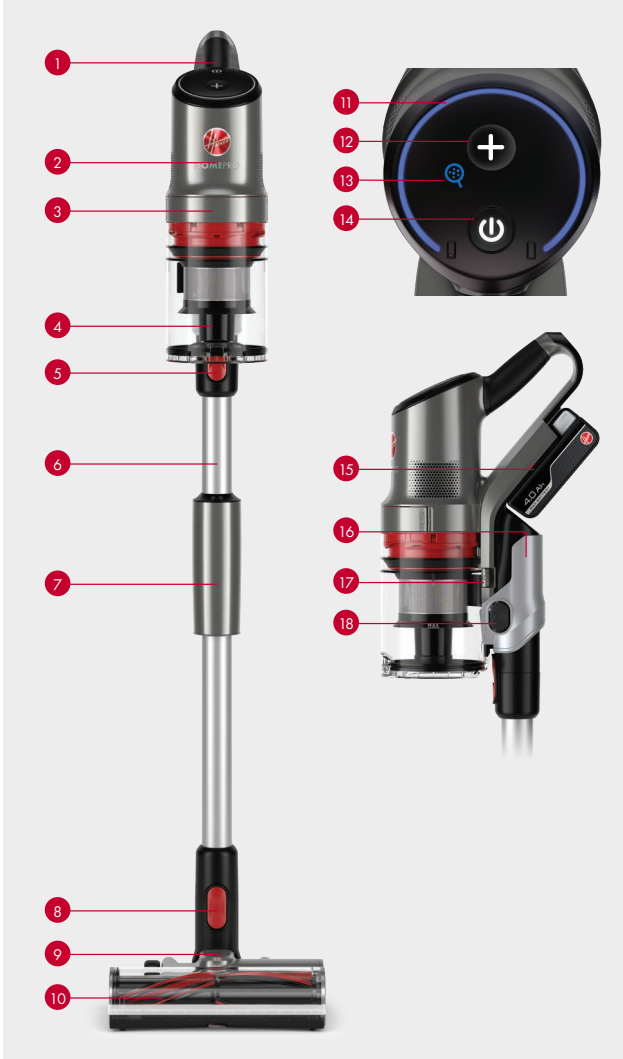

- 1 مقبض الحمل
- 2 الوحدة الرئيسية
- 3 فلتر حاوية الأتربة (غير ظاهر)
- 4 حاوية الأتربة
- 5 مقبض تحرير الأداة اليدوية
- 6 ذراع التنظيف المرنة
- 7 مقبض تحرير ذراع التنظيف المرنة
- 8 مقبض تحرير رأس الأرضية
- 9 رأس الأرضية
- 10 عارضة فرشاة مقاومة لالتفاف الشعر
- 11 مصباح إشارة مستوى البطارية
- 12 محدد الوضع
- 13 مؤشر وضع اكتشاف الأوساخ*
- 14 تشغيل/إيقاف تشغيل الطاقة
- 15 قاعدة البطارية
- 16 مقبض إخراج الأتربة
- 17 مقبض تحرير حاوية الأتربة
- 18 مقبض تحرير غطاء حاوية الأتربة
- 19 بطارية ONEPWR
- 20 شاحن ONEPWR مغناطيسي
- 21 حامل الحائط والبراغي وسدادات الحائط
- 22 أداة الشقوق
- 23 أداة تنظيف الدّج*
- 24 أداة التنظيف العميق*

الملحقات

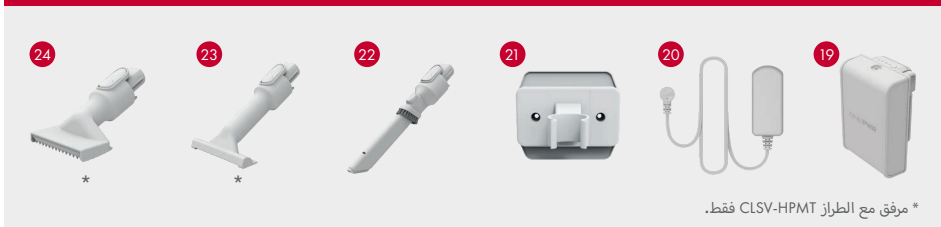

* مرفق مع الطراز CLSV-HPMT فقط.

37. احرص دائماً على استخدام الحامل الجداري لتخزين الجهاز بين مرات الاستخدام، وكذلك عند شحن البطارية أثناء اتصالها بالجهاز.

احتياطات السلامة الخاصة بالبطارية

38. لا يجوز استبدال البطارية إلا ببطارية HOOVER ONEPWR. قد يؤدي استخدام بطارية أخرى إلى خطر نشوب حريق أو حدوث انفجار.
 39. لا تحاول تفكيك البطارية أو إزالة أي مكون بارز من أطراف البطارية ولا تتخلص منها برميها في النار. لا تحتوي البطارية والشاحن على أجزاء يمكن للمستخدم صيانتها. قد ينتج عن ذلك حريق أو إصابة.
 40. قبل التخلص من البطارية، قم بحماية الأطراف المكشوفة بشريط عازل ثقيل لمنع حدوث تماس كهربائي. ينبغي التخلص من البطارية بأمان في مركز إعادة تدوير البطاريات المحلي.
 41. عندما لا تكون حزمة البطارية قيد الاستخدام، احتفظ بها بعيداً عن الأجسام المعدنية الأخرى التي يمكنها إنشاء وصلة بين طرفيها. قد يؤدي تماس أطراف البطارية معاً إلى الإصابة بحروق أو نشوب حريق.
 42. في حالة حدوث تسرب بالبطارية، تجنب أي ملامسة للجلد. وينبغي إعادة الجهاز والبطارية والشاحن إلى نقطة الشراء.
- يُرجى الاحتفاظ بالتعليمات للرجوع إليها مستقبلاً.

طراز البطارية	المواصفات	النوع	الجهد الكهربائي المقاس	السعة المقاسة	رقم الخلية
BV19240VME	ONEPWR 4Ah بطارية	Li-Ion	18 فولت	≤4.0Ah	10
BV29040VME	ONEPWR 4Ah الحد الأقصى للبطارية	Li-Ion	18 فولت	≤4.0Ah	5
BV13240VME	ONEPWR 4Ah بطارية	Li-Ion	18 فولت	≤4.0Ah	10
BV23040VME	ONEPWR 4Ah الحد الأقصى للبطارية	Li-Ion	18 فولت	≤4.0Ah	5

موديل الشاحن	المواصفات
BV05115ME	شاحن ONEPWR سحاب بقدرة 1.5 أمبير
BV05115MME	شاحن ONEPWR مغناطيسي بقدرة 1.5 أمبير

نظرة عامة على الجهاز

1. لا تترك الشاحن متصلاً بالكهرياء دون ملاحظة.
2. لا تستخدم الجهاز في حال تغطله أو إذا تعرض للسقوط أو التلف أو الغمر في المياه أو إذا تُرك في الهواء الطلق.
3. لا يجوز استخدام الجهاز لشطف أي مواد ملتهبة أو قابلة للاحتراق (سائل الولاعات أو النفط أو الكيروسين أو ما إلى ذلك)، أو استخدامه في منطقة تحتوي على أبخرة أو سوائل قابلة للانفجار.
4. لا يجوز استخدام الجهاز لشطف الفحم الساخن أو أعقاب السجائر أو الثقاب أو الأغراض المحترقة الساخنة، ولا استخدامه في منطقة قد تكون فيها سوائل ضارة (مثل الكلور والمبيض ومنظف أنابيب الصرف المحتوي على الأمونيا).
5. لا تمسك الشاحن أو البطارية أو تستخدم الجهاز ويدك مبتلة.
6. لا تفصل الشاحن من الكهرياء بجذب سلك الكهرياء. لا يمكن استبدال سلك الطاقة. وفي حالة تلف السلك، ينبغي التخلص من الشاحن.
7. لا تحاول إزالة المواد العالقة باستخدام أدوات حادة، إذ قد يؤدي ذلك إلى إتلاف الجهاز.
8. لا تستخدم الجهاز مع البطارية أو الشاحن غير المناسبين، فقد يؤدي ذلك إلى تلف الجهاز أو تعرض المستخدم للإصابة. معلومات شاحن البطارية الصحيحة مدرجة في ملصق تصنيفات حزمة البطارية.
9. لا تشحن البطارية في الهواء الطلق، أو تترك الشاحن متصلاً بالتيار الكهربائي عندما لا يكون قيد الاستخدام.
10. لا تستخدم الجهاز مع بطارية تالفة. في حالة تلف البطارية، ينبغي إعادة الجهاز والبطارية والشاحن إلى نقطة الشراء.
11. لا يجوز استخدام الجهاز على سطح تالف أو غير مستوٍ أو مجهز بشكل غير صحيح.
12. تدور عارضة الفرشاة الموجودة في رأس الأرضية باستمرار. لا تستخدمها أبدًا في بقعة واحدة لأي فترة زمنية طويلة لأن هذا قد يؤدي إلى إتلاف سطح الأرضية. عند إيقاف الجهاز في الوضع القائم، احرص دائمًا على إيقاف تشغيله.
13. راجع دائمًا ملزمة الجهاز للأرضية مع الشركة المصنعة للأرضية قبل استخدام الجهاز.
14. لا يجوز استخدام سوى الأدوات والملحقات الموصى بها من HOOVER ONEPWR مع هذا الجهاز. راجع الجدول في الصفحة التالية للاطلاع على قائمة الطرازات.
15. ضع الشاحن دائمًا على سطح ثابت ومستوٍ ومكشوف وبعيدًا عن أي مصدر حرارة.
16. تجنب حماية سلك الشاحن دائمًا من الأسطح الساخنة واللهب المكشوف.
17. لا يجوز استخدام سوى الأدوات والملحقات الموصى بها من HOOVER ONEPWR مع هذا الجهاز.
18. اخلع البطارية دائمًا من الجهاز قبل إجراء أي صيانة أو في حالة تخزينه دون استخدام لفترة طويلة.
19. حافظ على نظافة جميع الفتحات وخلوها من الأوساخ، واحرص على عدم ملء حاوية الأتربة بما يتجاوز حدّها الأقصى لأن ذلك قد يؤثر على تدفق الهواء/الشفت.
20. يجب إيقاف تشغيل جميع أزرار التحكم في الجهاز قبل فصل البطارية أو توصيلها.
21. لا تستخدم الجهاز إلا في مناطق داخلية مغلقة وعلى الأسطح الجافة، وحافظ على الإضاءة الجيدة للمنطقة التي تنظفها.
22. هذا الجهاز غير مخصص للاستخدام من قبل الأشخاص (بما في ذلك الأطفال) الذين يعانون من قصور جسدي أو حسي أو عقلي، أو نقص في الخبرة والمعرفة، إلا إذا تم تقديم الإشراف أو التوجيه لهم بشأن استخدام الجهاز من قبل شخص مسؤول عن سلامتهم.
23. يجب مراقبة الأطفال للتأكد من عدم استخدامهم للجهاز كلعبة.
24. يجب إبقاء الأصابع والشعر والملابس الفضفاضة بعيدًا عن الأجزاء المتحركة والفتحات أثناء استخدام الجهاز.
25. يجب تخزين الجهاز في مكان بارد وجاف. احتفظ بالجهاز بعيدًا عن المطر والرطوبة.
26. لا يجوز استخدام سوى أسلاك تمديد بقوة 13 أمبير معتمدة من المفوضية الأوروبية/مطابقة لمعايير المملكة المتحدة (CE/UKCA)، فقد تؤدي الأسلاك غير المعتمدة إلى فرط السخونة. يجب توخي الحذر عند ترتيب سلك التمديد لأن ذلك قد يسبب التعثر.
27. توجّه مزيدًا من الحذر عند استخدام الجهاز على السلاسل.
28. اختبر دائمًا منطقة غير ظاهرة من الأرضية أولاً.
29. تأكد دائمًا من تركيب الفاصل والفلتر بشكل صحيح قبل استخدام الجهاز، ولا تستخدم الجهاز إلا مع وجود الفلتر والفاصل في مكانهما.
30. افحص دائمًا رأس الأرضية الذي يعمل بالبطاقة والملحقات للتأكد من عدم وجود أي تلف أو أوساخ أو أتربة فيها قبل الاستخدام.
31. استخدم حامل التثبيت في الحائط دائمًا لتخزين الجهاز بين مرات الاستخدام، ولا تترك الجهاز أبدًا في الوضع القائم دون دعم لمدة طويلة أو دون ملاحظة. لا تضع الجهاز في الوضع القائم دون دعم إلا على سطح مستوٍ وثابت.
32. لا تترك الشاحن مخزنًا أو موصولًا بالكهرياء بالقرب من الأجسام المعدنية.
33. لا تدخل أي جزء من بطارية ONEPWR أو الشاحن في الفم.
34. لا تدخل أي أجسام في منطقة الموصل المغناطيسي للشاحن.
35. ضع البطارية دائمًا على سطح مستوٍ وثابت. يجب أن تكون البطارية والشاحن مكشوفين وبعيدين عن أي مصدر حرارة.
36. تأكد من أن سطح الموصل المغناطيسي ومنفذ الشحن خاليين من الأوساخ أو الشوائب قبل توصيل الشاحن بالكهرياء وشحن البطارية.



HomePro

دليل المستخدم

CLSV-HPMS
CLSV-HPMA
CLSV-HPMT
Hoover.ae
Hoover.sa

04.04.25

- PAGE 2 - Extra sentence added to point 12.
- PAGE 4 - Points 12 & 13 have been updated.
- PAGE 5 - Removed battery from second image.
 - Image and text updated for third box.
- PAGE 7 - 'NOTE' amended to 'WARNING'.
 - Extra sentence added to 'WARNING' section.
 - Image 4 updated.
 - 'Boost Mode' text changed.
- PAGE 8 - Completely reworked page.
- PAGE 9 - Added new page.
- PAGE 10 - 'Using the flexi clean pole' section reworked.
 - 'Using the tools' layout changed.
- PAGE 11 - 'Emptying the dirt container' second and third image changed.
 - 'Hold the handheld over...' image updated.
- PAGE 12 - 'Cleaning and replacing filter' title amended.
 - Warning text box amended so numbers read correctly.
 - 'Wash the sponge filter...' image amended.
 - 'Wash the sponge filter...' text amended to add 'sponge filter and frame'.
 - 'The filter will only fit...' image amended.
- PAGE 13 - 'Hold the handheld over...' image updated.
- PAGE 14 - Entire top row amended to be correct.
- PAGE 15 - Warning text completely amended.
 - 'There is an accessory missing.' added.
 - Removal of '/tool' from a bullet.
 - Added 'Why is there a light illuminated?' section.
 - Removed 'Using the tools' from last bullet.
- PAGE 16 - Weight & bin capacity updated.

12.06.25

- PAGE 5 - "Slide the flexi clean pole..." text amended.
- PAGE 7 - Removed warning text
 - Added new step to "Operation"
 - "Boost Mode" text amended
- PAGE 8 - Removed warning text
 - Added new step to "Operation"
 - "Debris Detect Mode" text amended
- PAGE 9 - "Boost Mode" & "Eco Mode" text amended
- PAGE 11 - "Slide the flexi clean pole..." text amended

13.06.25

- PAGES 7 & 8 - Image added to new step

13.06.25

- PAGES 10 - 'Deep cleaning tool' text amended

PAGE 2

03.07.25

- Translations added to Arabic section
- PAGE 8 - 'HOOVER HomePro features...' text reduced
- PAGE 7 & 9 - '15mins' changed to '15 minutes'

13.06.25

- Copyright ownership statement amended to 2025

07.08.25

- Page count amended to 36 pages

21.01.26

- PAGE 2 & 3 - Added bullets and Battery and Charger information updated
- PAGE 4 - ONEPWR Charger and Battery changed to Gen 3 Battery and Magnetic charger
- PAGE 5 - Added in 'NOTE' to Attaching wall mount
- PAGE 6 - Entire page amended for Gen 3
- PAGE 16 - Copyright year updated
- Arabic side updated with above changes

03.02.26

- PAGE 4 - Magnetic charger spelling amended

27.02.26

- PAGE 3 & 30 - Cell Qty changed from 5 to 10 for BV19240VME and BV13240VME