

Platinum Power Max


User Guide



CWKTH012
Hoover.ae

1 MACHINE OVERVIEW

- 1 Handle
- 2 Boost trigger
- 3 SpinScrub tool and caddy
- 4 Clean water/solution tank release button
- 5 Clean water/solution tank caps
- 6 Clean water/solution tank
- 7 Rinse/Wash dial
- 8 Dirty water release latch
- 9 Dirty water tank
- 10 Hose and solution connection port (hidden)
- 11 Nozzle release clip
- 12 Quick Clean function
- 13 Nozzle
- 14 SpinScrub brushes and brushbars
- 15 Solution trigger (hidden)
- 16 Quick cord release hook (hidden)
- 17 Handle lock dial (hidden)
- 18 Recline pedal (hidden)
- 19 On/Off pedal (hidden)
- 20 2.5m Hose
- 21 SpinScrub tool
- 22 Upholstery wash tool
- 23 Pre-treatment wand
- 24 Hard floor squeegee
- 25 Accessory bag
- 26 Trial size solution

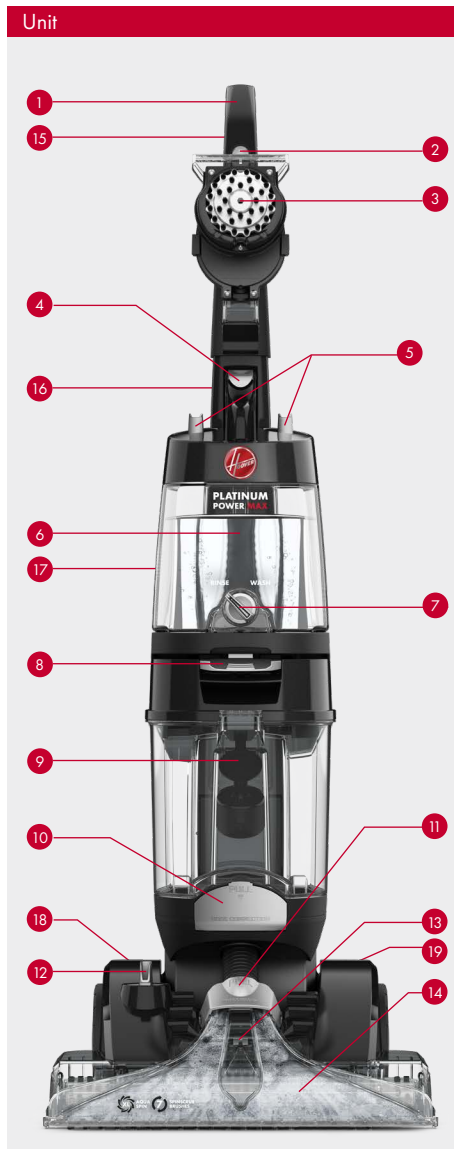

Accessories



GENERAL SAFETY INFORMATION

2

1. Only use the carpet washer indoors and keep the area you're cleaning well lit.
2. Keep fingers, hair and loose clothing away from moving parts and openings whilst using the carpet washer.
3. Before using the carpet washer test your carpets/rugs/upholstery for colourfastness and pile distortion.
4. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Children should be supervised to ensure that they do not play with the appliance.
6. Only Hoover recommended tools and solution should be used with this carpet washer. Using other solutions may invalidate the guarantee.
7. Don't leave the carpet washer plugged in when unattended.
8. Don't use the carpet washer if it has been dropped, damaged or left outdoors.
9. Don't run over the power cord or use the carpet washer if the power cord or plug is damaged. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
10. Don't use the carpet washer to pick up any flammable or combustible materials (lighter fluid, petrol, kerosene etc.) or use the carpet washer in an area with explosive vapours or liquid.
11. Don't handle the plug or use the carpet washer with wet hands.
12. Don't pull or carry the carpet washer by the power cord.
13. Don't use the carpet washer to pick up hot coals, cigarette butts, matches or smoking hot burning items or use in an area where there may be harmful fluids (chlorine, bleach and ammonia drain cleaner).
14. Don't use the power cord as a handle, pull the power cord around corners or sharp edges, or close a door over the power cord.
15. Don't unplug the carpet washer by pulling on the power cord.
16. Don't carry the carpet washer while it's switched on.
17. Don't attempt to remove blockages with sharp objects as this may cause damage to the carpet washer.
18. Don't use the carpet washer with incorrect voltage as this may result in damage or injury to the user.
19. The correct voltage is listed on the ratings label. Check with the manufacturer of your flooring prior to using the carpet washer.
20. The clean water tank should be filled with warm water (max 40°C) only. Filling the clean water tank with hot or boiling water will damage the machine and invalidate the guarantee.
21. Always vacuum your flooring thoroughly before using the carpet washer.
22. Test all carpets/rugs/upholstery before full usage. Run the carpet washer over a small hidden area. If no damage or pile distortion occurs continue cleaning.
23. Always replace the fuse in the plug with a British 13amp fuse.
24. Always unplug the carpet washer before carrying out any maintenance and before connecting or disconnecting the hose/accessories.
25. Always check tools and accessories are free from damage, dirt and debris before using.
26. Take extra care when cleaning on the stairs.
27. Always protect the power cable from heated surfaces or near open flames.
28. Turn off all controls on the carpet washer before disconnecting or connecting the power cord. After use always wrap the power cord around the cord clips provided.
29. Always keep the power cord away from the brushes whilst using the carpet washer.
30. Use only CE approved 13amp extension cords, non-approved extension cords may overheat. Care should be taken to arrange the extension cord as it can be a trip hazard.
31. Always use the carpet washer with all water/solution tanks and filters in place.
32. Keep all openings clear and free from debris as this may affect the airflow/suction.
33. Always use the carpet washer in an upright position. To prevent motor damage from dirty water, never hold the carpet washer upside down or on its side.
34. Store the carpet washer in a cool, dry area. Before storing the carpet washer please ensure all water/solutions tanks and filters are thoroughly clean and dry.

PLEASE KEEP INSTRUCTIONS FOR FUTURE USE.

3 OPERATION

PLEASE READ 'GENERAL SAFETY INFORMATION' AT THE BEGINNING BEFORE USE

IMPORTANT: Carpets should be dry vacuumed thoroughly before washing.

Test for colourfastness – Wet a white absorbent cloth with the solution. In a small hidden area of your carpet/rugs/upholstery gently rub with the dampened cloth. Wait ten minutes and check for colour removal or bleed with a white paper towel or cloth. Check all carpets/rugs/upholstery material before first use and If your carpet has more than one colour, check all colours.

Test all carpets/rugs/upholstery before full usage. Run the carpet washer over a small hidden area. If no damage or pile distortion occurs continue cleaning.


When cleaning an entire room, move furniture out of the area to be cleaned. If the furniture cannot be moved, place aluminium foil or wax paper under the legs. This will prevent wood finishes from staining your carpet. Pin up furniture skirts and curtains.

When using the carpet washer, basic safety precautions should always be observed and don't over saturate your carpets.

Only use Hoover carpet solution. Using other solutions may cause excess foaming and will invalidate your guarantee.

The clean water tank should only be filled with warm water (max 40°C). Filling the clean water tank with hot/boiling water will damage your machine and invalidate the guarantee. This is a powerful carpet washer, before plugging in make sure all controls are turned off and hold the carpet washer firmly when starting and during use.

Assembling your Carpet Washer

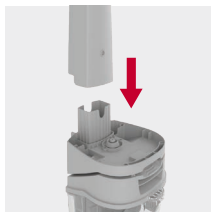


Stand the base of the carpet washer on the floor in the upright position. Line up the handle with the main body and push into place.



Turn handle lock dial clockwise to lock in position.



Assemble the tanks by tilting and lining up the front of the tank to the washer and pushing the tank back until it clicks into place.

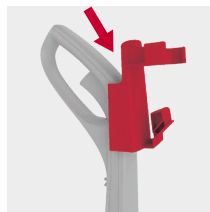

Slide the SpinScrub tool holder over and down the handle.



Line up the SpinScrub tool with the holder and slide the tool downwards into place.

NOTE: Carpets should be dry vacuumed thoroughly before washing. For heavily soiled areas, it may be necessary to repeat the cleaning process. Make criss-crossing strokes across the original pattern and overlap with each pass.

Filling the water/solution tank and cleaning modes



Press the clean water/solution tank release button, pull and lift to remove the tank.



Twist the water/solution tank cap anti-clockwise and remove.



Pour the required amount of carpet cleaning solution into the tank. Tighten the cap before returning the tank to the washer.



Fill the clean water tank with warm water (max 40°C). Fill to max fill line for a Deep Clean, and fill to the Quick Clean fill line for a quick surface clean.




Tilt and line up the front of the tank to the washer and push the tank back until it clicks into place.



Turn the wash/rinse dial to 'wash'. The SpinScrub brushes and brushbar deep clean your carpets with water and solution removing dirt and stains.



Plug into the mains, press the On/Off button to switch on.

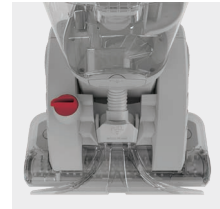

Choose the cleaning mode by turning the dial on the base.

Quick Clean Mode:

Best for a quick, surface clean - carpets dry in less than an hour.*

Deep Clean Mode:

Best overall results for a thorough, deep clean.

NOTE: This machine has an auto mix tank so any solution not used can be poured back into the bottle.

*Tested on PP and Wool - Nylon carpet. Results may vary.

5 OPERATION


IMPORTANT: Your dirty water tank is fitted with a float. When the dirty water tank is full, or the floorhead is not in contact with the carpet, the float will shut off the suction on the carpet washer. You will be able to hear if this has happened as the motor noise on the machine will increase. Once the float is activated, empty the dirty water tank if full. If the dirty water tank is not full then turn off your machine at the power switch and wait for the float to settle.



Press the recline pedal and pull the handle backwards.



Squeeze the trigger to release the solution and water mix.

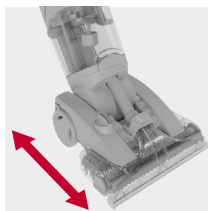

For best results apply water/solution on the forward stroke and release the trigger on the backward stroke to pick up water/solution. For a dryer finish, follow with an additional dry stroke with no trigger pressed.



For tough stains press the boost trigger together with the solution trigger to release more water/solution mix.



Turn the wash/rinse dial to 'rinse'. Only water is released to remove solution residue.


NOTE: For best cleaning results use slow straight parallel strokes. Intermittent dry forward strokes will increase water pick up. The 'rinse' mode will also work when using the hose.

Using the hose and tools

NOTE: The carpet washer should be in the upright position when using the hose and tools; this will de-activate the SpinScrub brushes and brushbar.



Pour the required amount of carpet cleaning solution into the tank.

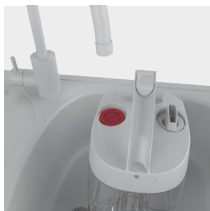


Fill the clean water tank with warm water (max 40°C).




Turn the wash/rinse dial to 'wash'.



Pull down the accessory hose connector cover.

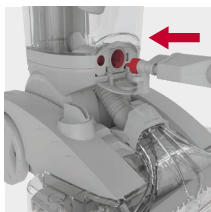

Push the hose end and hose solution connector into the hose and solution connection port.

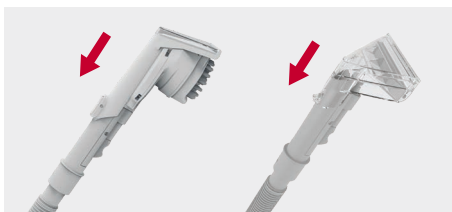

Select the SpinScrub or Upholstery tool. Slide the tool over the tab at the end of the hose until it clicks into place.



Plug into the mains and press the On/Off button to switch on.



Press the trigger on the hose to release solution/water.



Squeeze the trigger on the forward stroke and release the trigger on the backward stroke to pick up water/solution. For a dryer finish, follow with an additional dry stroke with no trigger pressed.

NOTE: Use the carpet washer or hose to pick up spills before washing and cleaning the area.

7 OPERATION

Using the pre-treatment wand

NOTE: Pre-treating your carpet before washing will help to remove stubborn stains.
Do not saturate your carpet.



Pour the required amount of carpet cleaning solution into the tank.




Fill the clean water tank with warm water (max 40°C).



Turn the wash/rinse dial to 'wash'.




Pull down the accessory hose connector cover.

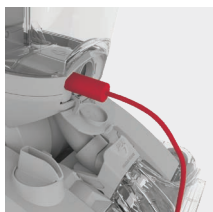


Push the wand connector into the solution tube port.



Plug into the mains and press the On/Off button to switch on.

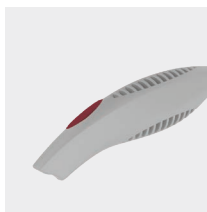

Press and hold the trigger on the pre-treatment wand, spraying evenly over stubborn stains.

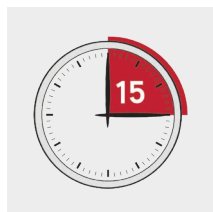

Leave the solution for 10-15 minutes before washing the carpet.

CAUTION: To prevent damage to wood floors and other hard floors, follow the flooring manufacturer's cleaning recommendations. Inspect the floor surface for a worn finish, bare wood or separated joints. It is not recommended to use the carpet washer on floors if any of these conditions exist. Test on an inconspicuous area first.

Washing hard floors


IMPORTANT: Hard floors should be dry vacuumed thoroughly before washing. Before attaching the hard floor squeegee onto the carpet washer, either remove the tanks or make sure the tanks are empty before lying the carpet washer on its back.



Pour the required amount of solution into the tank.



Fill the clean water tank with warm water (max 40°C).

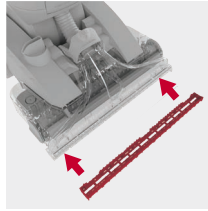

Lie the carpet washer on its back and line up the squeegee with the nozzle.



Hold the front of the squeegee onto the edge of the nozzle and push the squeegee under the nozzle until it clicks into place.

IMPORTANT: For best results, clean hard floors in Quick Clean Mode.

CAUTION: Always unplug the carpet washer before performing any maintenance/troubleshooting checks.

Emptying and cleaning the dirty water tank

IMPORTANT: Empty and rinse out the clean and dirty water tanks and leave to air dry before replacing. Do not leave solution stored in the tanks between uses.



Press the dirty water tank release latch and pull the tank to remove.



Pull and lift the dirty water tank clip to release the lid. Lift the tank lid to remove.



Empty the dirty water over the sink. Rinse the dirty water tank and lid under water (max 40°C) to remove dirt/debris.




Clean the filter screen located at the back of the dirty water tank.




To re-fit, tilt the dirty water tank and line the front of the tank up onto the carpet washer. Push back until it clicks into place.

CAUTION: Always unplug the carpet washer before performing any maintenance/troubleshooting checks.

Removing and cleaning the nozzle

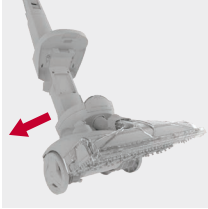


Remove both tanks and tilt the carpet washer back.

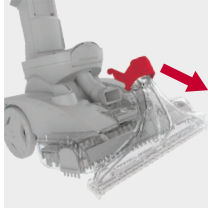

Lift the nozzle release clip and pull the nozzle forward, separating the tabs on the nozzle and carpet washer.




Rinse the nozzle under water to remove dirt/debris.

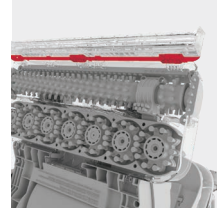


To replace the nozzle, line up the tabs on the nozzle with the tabs underneath the front of the carpet washer. Push the nozzle down until it clicks into place.

IMPORTANT: If the nozzle is fitted incorrectly, this will cause poor dirty water pick up.


Removing and cleaning the SpinScrub brushes

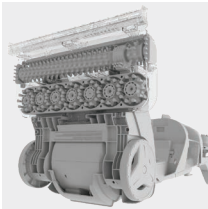


Lie the carpet washer on its back exposing the SpinScrub brushes and brushbar.

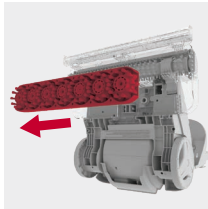

Firmly pull the sides of the SpinScrub cover and remove the SpinScrub brushes.

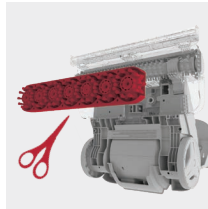


Using a pair of scissors, remove any threads or hair caught around the brushes. Rinse under water to remove debris.

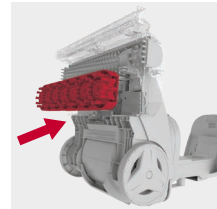


Line up the spindle and tabs on the side of the SpinScrub cover into carpet washer, push firmly until it clicks into place.

NOTE: Carpets and hard floors should be dry vacuumed thoroughly before washing. This will help prevent excessive build up of dirt/debris in the nozzle.


Removing and cleaning the brushbar

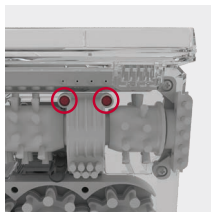


Using a crosshead screwdriver, undo the 2 screws and remove the belt guard.

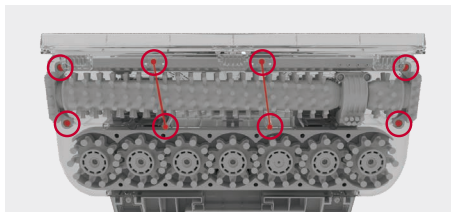


Using a crosshead screwdriver remove the 4 screws on the side brushes and the top and bottom screws from each of the rug guards (metal pins) to get access to the brushbar.

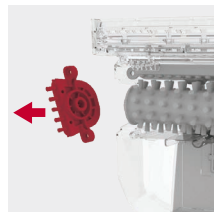


Pull and slide the left side brushes and remove the side cap from the brushbar.

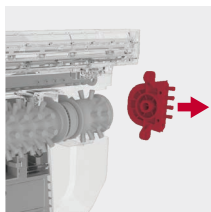


Pull and slide the right side brushes together with the brushbar. Remove the side cap from the brushbar and unloop the brushbar from the belt.

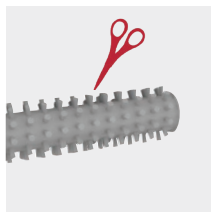


Using a pair of scissors, remove any threads or hair caught around the brushes. Rinse under water (max 40°C) to remove debris.

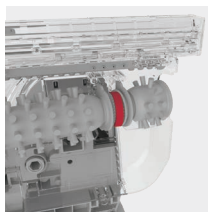


To refit, loop the brushbar through the belt and onto the belt grip.

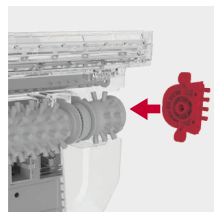

Line up the 'right' side brushes with the base and slide into place. Attach the brushbar to the side brushes.

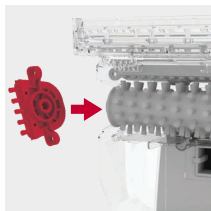

Attach the other side of the brushbar to the side brushes. Slide onto the side of the base and into place.

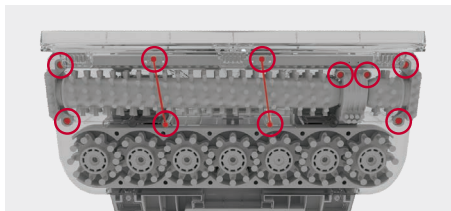

Refit the belt guard and tighten the 2 screws. Replace and tighten the 4 screws on the side brushes and refit the rug guards tightening the 4 screws to secure.

IMPORTANT: Always unplug the carpet washer before performing any maintenance/troubleshooting checks.

Is there an accessory missing?

- Check the contents on the box to make sure the part is definitely included with your washer.

Why won't the carpet washer turn on?

- The plug may not be fully pushed into the electrical socket.
- Check if the fuse in the plug needs replacing. Always replace with a British 13amp fuse.

Why won't the solution/clean water dispense?

- Make sure the clean water tank is fitted securely. Go to 'Assembling your Carpet Washer'.
- The Wash/Rinse dial has been set to Rinse, set the dial to Wash to dispense the solution.
- The clean water tank valve may be stuck, hold the clean water tank over the sink and press the valve underneath to release.
- Squeeze the trigger on the handle to release solution and water mix.
- The water/solution tank is empty. Refill the tank. Go to 'Filling the water/solution tank and cleaning modes'.

Why won't the carpet washer pick up?

- The float in the dirty water tank may have been activated. Empty the dirty water tank wait for the float to settle before re-starting your carpet washer.
- Check the SpinScrub and brushbar for blockages and clear.
- The dirty water tank may not be fitted correctly, also make sure the lid is pushed down securely.
- Check the nozzle for blockages and clear.
- Check the nozzle is correctly fitted. Go to 'Removing and cleaning the nozzle'.
- Check the filter screen located in the dirty water tank for dirt and debris. Go to 'Emptying and cleaning the dirty water tank'.

Why won't the brushes spin?

- The brushes will only spin when the carpet washer is reclined.
- Check the SpinScrub and brushbar for blockages and clear. Go to 'Removing and cleaning the brushbar'.
- Check for damage to the brushbar and the spindle on the back of the SpinScrub brush.

13 OTHER INFORMATION

Service and Help

If you have any queries or concerns about using your Hoover, please visit **hoover.ae**

Consumables

To purchase spares and accessories, please contact your local Hoover supplier.

The use of genuine Hoover spare parts helps to maintain optimised performance and validates your guarantee. For more information visit **hoover.ae**

Technical Specification

Voltage:	See rating label on machine for details.
Wattage:	See rating label on machine for details.
Cord length:	8m
Weight:	9kg

Subject to technical change without notice.

HOOVER is a trademark of Techtronic Cordless GP © 2023 Techtronic Cordless GP. All rights reserved.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

This marking on the product(s) and/or accompanying documents means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point.



الخدمة والمساعدة

إذا كانت لديك أي تساؤلات أو مخاوف متعلقة باستخدام غسالة سجاد هوفر، فتفضل بزيارة الموقع الإلكتروني **hoover.ae**

المستلزمات الاستهلاكية

لشراء قطع الغيار والملحقات، تفضل بزيارة موقعنا الإلكتروني: **hoover.ae**
إن استخدام قطع غيار هوفر الأصلية يساعد في الحفاظ على الأداء الأمثل وعلى سلامة ضمانك.

المواصفات الفنية

القولنية: راجع لوحة المعايير الموجودة على الجهاز للتعرف على التفاصيل.
شدة التيار: راجع لوحة المعايير الموجودة على الجهاز للتعرف على التفاصيل.
طول السلك 8 أمتار
الوزن 9 كجم
خاضع للتغيير الفني بدون إشعار.

HOOVER is a trademark of Techtronic Cordless GP © 2023 Techtronic Cordless GP. All rights reserved

ينبغي ألا يتم التخلص من نفايات المنتجات الكهربائية عن طريق طرحها مع النفايات المنزلية.
الرجاء إعادة تدويرها إن وجدت مراكز إعادة التدوير. راجع الأمر مع السلطة المحلية أو بائع التجزئة للحصول على النصائح المتعلقة بإعادة التدوير.

إن وجود هذه العلامة على المنتج (المنتجات) و/أو المستندات المصاحبة له يعني أن المعدات الكهربائية والإلكترونية المستعملة لا يجب الخلط بينها وبين النفايات المنزلية العامة. لإجراء أعمال الإصلاح والاسترداد وإعادة التدوير بشكل صحيح، من فضلك اصطحب هذا المنتج (هذه المنتجات) إلى نقاط التجميع المخصصة حيث سيتم قبولها دون أي تكلفة. إن التخلص من هذا المنتج بشكل صحيح سيساعد في توفير الموارد الثمينة ومنع أي تأثيرات سلبية محتملة على صحة الإنسان والبيئة، والتي قد تنشأ نتيجة التعامل الخاطئ مع النفايات.
الرجاء الاتصال بالسلطة المحلية للحصول على مزيد من التفاصيل حول أقرب نقطة تجميع مخصصة لك.



معلومة مهمة: احرص على فصل غسالة السجاد عن مصدر التيار الكهربائي قبل إجراء أي أعمال صيانة/فحوصات لاستكشاف الأخطاء وإصلاحها.

هل هناك قطعة ملحقة مفقودة؟

- افحص محتويات الصندوق للتأكد أن القطعة موجودة مع الغسالة.

ما سبب تعذر تشغيل غسالة السجاد؟

- ربما لم يتم دفع القابس تمامًا في المقبس الكهربائي.
- تحقق مما إذا كان المصدر الموجود في القابس بحاجة للاستبدال. استبدله دومًا بمصهر بريطاني 13 أمبير.

ما سبب عدم إخراج المحلول/الماء التنظيف؟

- تأكد من تركيب خزان الماء التنظيف بشكل محكم. انتقل إلى "تجميع غسالة السجاد".
- ضبط مفتاح الغسيل/الشطف على وضع الشطف، وعندئذ يجب ضبط المفتاح على وضع الغسيل لإخراج المحلول.
- ربما يكون صمام خزان الماء التنظيف ملتصقًا، احمل خزان الماء التنظيف فوق الحوض واضغط على الصمام الموجود أسفله لإخراج الماء.
- اضغط على الزر الموجود على المقبض لإخراج خليط المحلول والماء.
- خزان الماء/المحلول فارغ. أعد ملء الخزان. انتقل إلى "ملء خزان الماء/المحلول وأوضاع التنظيف".


ما سبب تعذر امتصاص غسالة السجاد للماء/المحلول؟

- قد يكون الجسم العائم في خزان الماء المتسخ في حالة نشطة. أفرغ خزان الماء المتسخ وانتظر حتى يستقر الجسم العائم قبل إعادة تشغيل غسالة السجاد.
- افحص المنظف الدوار وقضيب الفرشاة للتأكد من خلوهما من أي انسدادات وقم بإزالتها إن وُجدت.
- ربما لم يتم تركيب خزان الماء المتسخ بشكل صحيح، تأكد أيضًا من تثبيت الغطاء بشكل محكم.
- افحص الفوهة للتأكد من خلوها من أي انسدادات وقم بإزالتها إن وُجدت.
- تأكد من تركيب الفوهة بشكل صحيح. انتقل إلى "خلع وتنظيف الفوهة".
- افحص مرشح الفلتر الموجود في خزان الماء المتسخ للتأكد من خلوه من الأوساخ والبقايا. انتقل إلى "إفراغ وتنظيف خزان الماء المتسخ".


ما سبب تعذر دوران الفرش؟

- تدور الفرش فقط في حالة إمالة غسالة السجاد.
- افحص المنظف الدوار وقضيب الفرشاة للتأكد من خلوهما من أي انسدادات وقم بإزالتها إن وُجدت. انتقل إلى "خلع وتنظيف قضيب الفرشاة".
- افحص قضيب الفرشاة ومسار التثبيت الموجود بالجزء الخلفي من فرشاة المنظف الدوار للتأكد من خلوهما من التلف.


خلع وتنظيف قضيب الفرشاة

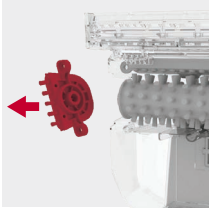


اسحب وحرك الفرش الموجودة على الناحية اليسرى وأخلع الغطاء الجانبي من قضيب الفرشاة.

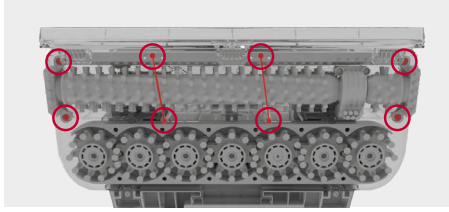


باستخدام مفك متصالب، فك البراغي الأربعة للفرش الجانبية والبرغيين العلوي والسفلي من كل من واقبي السجاد (مسمارين معدنيين) للوصول إلى قضيب الفرشاة.

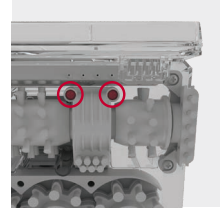


باستخدام مفك متصالب، فك البرغيين وقم بخلع واق السير.

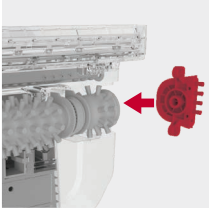


قم بمحاذاة الفرش الموجودة على الجانب الأيمن مع القاعدة وحركها إلى مكانها. وصل قضيب الفرشاة بالفرش الجانبية.

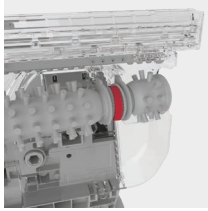


لإعادة التركيب، قم بتوصيل حلقات قضيب الفرشاة بالسير وعلى مقبض السير.

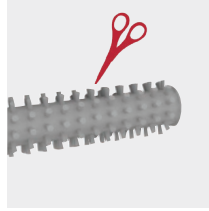


باستخدام مقص، قم بإزالة أي خيوط أو شعر عالق في الفرش. اغسلها تحت الماء الجاري (في درجة حرارة تبلغ بحد أقصى 40° سيلزيوس) لإزالة البقايا.

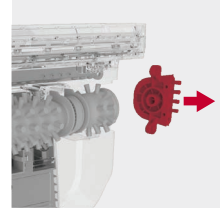

اسحب وحرك الفرش الموجودة على الجانب الأيمن مع قضيب الفرشاة. أخلع الغطاء الجانبي من قضيب الفرشاة وفك حلقات قضيب الفرشاة من السير.

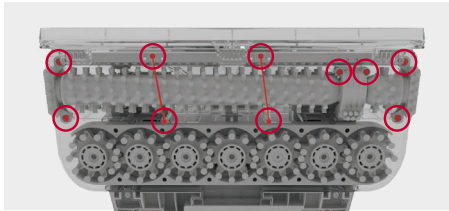


أعد تركيب واق السير واربط البرغيين بإحكام. أعد تركيب وربط البراغي الأربعة على الفرش الجانبية وتركيب واقبي السجاد بربط البراغي الأربعة لتثبيتهما.

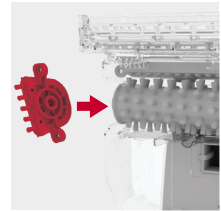

وصل الجانب الآخر من قضيب الفرشاة بالفرش الجانبية. حركها على جانب القاعدة ثم إلى مكانها.

تنبيه: احرص على فصل غسالة السجاد عن مصدر التيار الكهربائي قبل إجراء أي أعمال صيانة/فحوصات لاستكشاف الأخطاء وإصلاحها.


خلع وتنظيف الفوهة

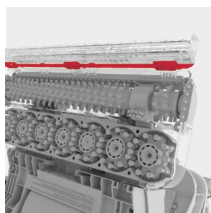

لإعادة الفوهة إلى مكانها، قم بمحاذاة العروات الصغيرة الموجودة على الفوهة مع العروات الموجودة أسفل الجزء الأمامي من غسالة السجاد. اضغط على الفوهة للأسفل حتى تستقر في مكانها بإحكام.



اغسل الفوهة تحت الماء الجاري لإزالة الأوساخ/البقايا.

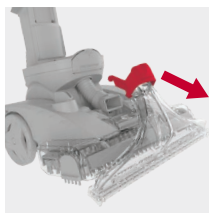


ارفع مشبك تحرير الفوهة واسحب الفوهة للأمام، مع فصل المقابض الصغيرة الموجودة على الفوهة وغسالة السجاد.




قم بخلع الخزائين وإمالة غسالة السجاد للخلف.

معلومة مهمة: إذا لم يتم تركيب الفوهة على نحو صحيح، فسوف يؤدي ذلك إلى ضعف امتصاص الماء المتسخ.


خلع وتنظيف فرش المنظف الدوار

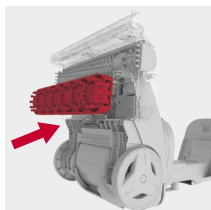


قم بمحاذاة مسمار التثبيت والعروات الموجودة على جانب غطاء المنظف الدوار مع غسالة السجاد، واضغط عليها بقوة حتى تستقر في مكانها بإحكام.

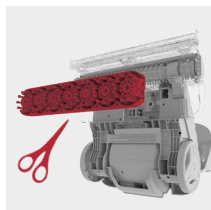

أزل أية خيوط أو شعر عالق حول الفرش باستخدام مقص. اغسلها تحت الماء الجاري لإزالة البقايا.

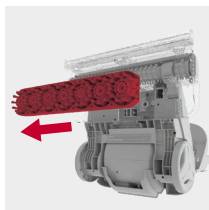

اسحب جوانب غطاء المنظف الدوار بقوة وقم بخلع فرش المنظف الدوار.

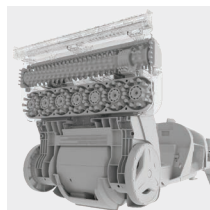

ضع غسالة السجاد على جانبها الخلفي بحيث تظهر فرش وقضبان فرش المنظف الدوار.

ملاحظة: يجب تنظيف السجاد والأرضيات الصلبة بواسطة المكنسة الكهربائية جيداً قبل غسلها. حيث يساعد ذلك في منع تراكم الأوساخ/البقايا بداخل الفوهة.

تنبيه: احرص على فصل غسالة السجاد عن مصدر التيار الكهربائي قبل إجراء أي أعمال صيانة/فحوصات لاستكشاف الأخطاء وإصلاحها.

إفراغ وتنظيف خزان الماء المتسخ


معلومة مهمة: قم بإفراغ وشطف خزانات الماء التنظيف والمتسخ وتركها لتجف في الهواء قبل إعادتها إلى الغسالة. لا تترك المحلول بداخل الخزانات بين مرات استعمال الغسالة.




أفرغ الماء المتسخ في الحوض، اغسل خزان الماء المتسخ والغطاء تحت الماء الجاري (في درجة حرارة تبلغ بحد أقصى 40° سيلزيوس) لإزالة الأوساخ/البقايا.




اسحب وارفع مشبك خزان الماء المتسخ لتحرير الغطاء. ارفع غطاء الخزان لخلعه.

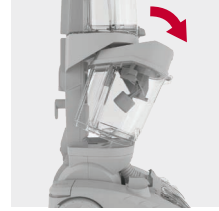

اضغط على قفل تحرير خزان الماء المتسخ واسحب الخزان لإخراجه.

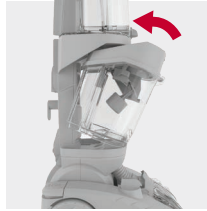

لإعادة التركيب، قم بإمالة خزان الماء المتسخ ومحاذاة الجزء الأمامي للخزان مع غسالة السجاد. اضغط عليه للخلف حتى يستقر في مكانه بإحكام.

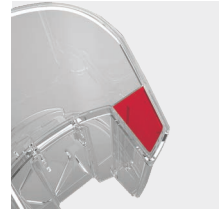

قم بتنظيف مرشح الفلتر الموجود في الجزء الخلفي لخزان الماء المتسخ.


تنبيه: للحيلولة دون تلف الأرضيات الخشبية وغيرها من الأرضيات الصلبة، اتبع توصيات التنظيف الصادرة عن شركة تصنيع الأرضية. افحص سطح الأرضية بحثًا عن أية أجزاء بالية في الطبقة الخارجية أو خشب مكشوف أو وصلات منفصلة. لا يوصى باستخدام غسالة السجاد على الأرضيات في أية من هذه الحالات. اختبر الأماكن التي يصعب رؤيتها أولاً.

غسل الأرضيات الصلبة

معلومة مهمة: يجب تنظيف الأرضيات الصلبة بواسطة المكينة الكهربائية جيدًا قبل غسلها. قبل توصيل الممسحة المطاطية للأرضيات الصلبة بغسالة السجاد، قم إما بخلع الخزائين أو التأكد من فراغهما قبل وضع الغسالة على الجانب الخلفي لها.



أمسك بالجزء الأمامي من الممسحة المطاطية وضعه على حافة الفوهة واضغط على الممسحة أسفل الفوهة حتى تستقر في مكانها.

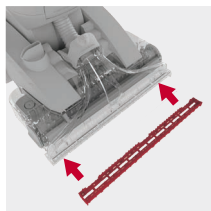

ضع غسالة السجاد على الجانب الخلفي لها وقم بمحاذاة الممسحة المطاطية مع الفوهة.



املأ خزان الماء التنظيف بماء دافئ (بحد أقصى 40° سيلزيوس).



صُب الكمية المطلوبة من المحلول في الخزان.

معلومة مهمة: للحصول على أفضل النتائج، قم بتنظيف الأرضيات الصلبة في وضع التنظيف السريع.

استخدام عصا المعالجة المسبقة

ملاحظة: تساعد المعالجة المسبقة للسجادة قبل غسلها في إزالة البقع العنيدة.
لا تغمر السجاد بشكل زائد.



اسحب غطاء موصل
خرطوم الملحق للأسفل.



أدر مفتاح الغسيل/الشطف إلى
وضع "الغسيل".



املاً خزان الماء التنظيف بماء دافئ
(بحد أقصى 40° سيلزيوس).



ضَبّ الكمية المطلوبة من محلول
تنظيف السجاد في الخزان.



اترك المحلول لمدة 10-15
دقيقة قبل غسل السجادة.



اضغط باستمرار على الزر
الموجود في عصا المعالجة
المسبقة، مع رش السائل بشكل
متسق على البقع العنيدة.




وصِّل الجهاز بمصدر التيار
الكهربي، واضغط على زر
التشغيل/الإيقاف لتشغيله.



اضغط على موصل العصا لتوصيله
بمنفذ أنبوب المحلول.

ملاحظة: يجب أن تكون غسالة السجاد في وضع قائم عند استخدام الخرطوم والأدوات، حيث سيؤدي ذلك إلى تعطيل فرش المنظف الدوار وقضيب الفرشاة.

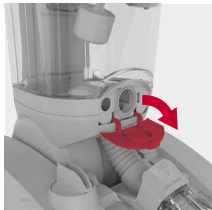

اسحب غطاء موصل
خرطوم الملحق للأسفل.



أدر مفتاح الغسيل/الشطف إلى
وضع "الغسيل".




املا خزان الماء التنظيف بماء دافئ
(يحد أقصى 40° سيلزيوس).




صُب الكمية المطلوبة من محلول
تنظيف السجاد في الخزان.



وَصَل الجهاز بمصدر التيار
الكهربي، واضغط على زر
التشغيل/الإيقاف لتشغيله.

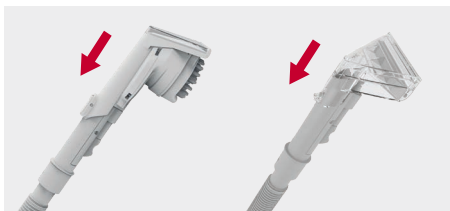

حدد أداة المنظف الدوار أو أقمشة التنجيد. حرك الأداة فوق المقبض
الصغير الموجود عند طرف الخرطوم حتى تستقر في مكانها بإحكام.

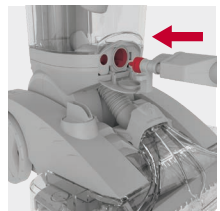

اضغط على طرف الخرطوم
وموصل محلول الخرطوم
لإدخاله في منفذ توصيل المحلول
والخرطوم.




اضغط على الزر مع الحركة
الأمامية وحرر الزر أثناء الحركة
الخلفية لالتقاط الماء/المحلول.
للحصول على نتائج أكثر جفافاً،
تابع ذلك بشوط جاف إضافي مع
عدم الضغط على أي زر.



اضغط على الزر الموجود على
الخرطوم لإخراج المحلول/الماء.

ملاحظة: استخدم غسالة السجاد أو الخرطوم لالتقاط السوائل المتناثرة قبل غسل وتنظيف المكان.


معلومة مهمة: خزان الماء المتسخ مجهز بجسم عائم. فعندما يمتلئ الخزان عن آخره، أو لا يلامس رأس الأرضية السجادة، يغلق هذا الجسم العائم وظيفة الشفط لغسالة السجاد. وسيكون بوسعك سماع صوت حال حدوث ذلك عندما ترتفع الضوضاء الصادرة عن محرك الجهاز. بمجرد تنشيط الجسم العائم، يجب إفراغ خزان الماء المتسخ إن كان ممتلئاً، وإذا لم يكن الخزان ممتلئاً فأوقف تشغيل الجهاز بواسطة مفتاح التشغيل وانتظر حتى يستقر الجسم العائم.

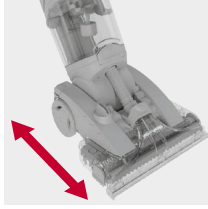

للحصول على أفضل النتائج استخدام الماء/المحلول مع الحركة الأمامية وحرر الزر أثناء الحركة الخلفية لالتقاط الماء/المحلول. للحصول على نتائج أكثر جفافاً، تابع ذلك بشوط جاف إضافي مع عدم الضغط على أي زر.



اضغط على الزر لتحرير خليط المحلول والماء.

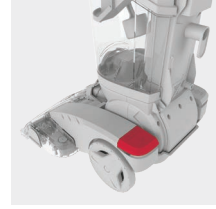

اضغط على دواسة الإمالة واسحب المقبض للخلف.



أدر مفتاح الغسيل/الشفط إلى وضع "الشفط". حيث يتم فقط إخراج الماء لإزالة بقايا المحلول.



للتخلص من البقع العنيدة اضغط على زر التنشيط مع زر المحلول لإخراج كمية أكبر من خليط الماء/المحلول.

ملاحظة: للحصول على أفضل نتائج التنظيف، استخدم حركات مستقيمة ومتوازية. قد تؤدي الحركات الأمامية المتقطعة الجافة لزيادة شفق الماء. يعمل وضع "الشفط" أيضاً عند استخدام الخرطوم.

ملاحظة: يجب تنظيف السجاد بواسطة المكسّسة الكهربائية جيّدًا قبل غسله. بالنسبة للأجزاء شديدة الاتساخ، قد يتطلب الأمر تكرار عملية التنظيف، قم بإجراء حركات متقاطعة على النقش الأصلي مع جعل الحركات متداخلة مع بعضها البعض.

ملء خزان الماء/المحلول وأوضاع التنظيف



املأ خزان الماء التنظيف بماء دافئ (يحد أقصى 40° سيلزيوس).
املأ الخزان حتى تصل إلى خط الحد الأقصى للتنظيف العميق، واملأه حتى خط التنظيف السريع للتنظيف السطحي السريع.




صُب الكمية المطلوبة من محلول تنظيف السجاد في الخزان. أغلق الغطاء بإحكام قبل إعادة الخزان إلى الغسالة.



أدر غطاء خزان الماء/المحلول في عكس اتجاه عقارب الساعة وقم بخلعه.



اضغط على زر تحرير خزان الماء/المحلول التنظيف واسحب الخزان وارفعه لإخراجه.

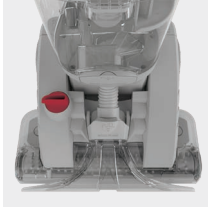

اختر وضع التنظيف عبر تدوير المفتاح الموجود على القاعدة.

وضع التنظيف السريع:

مناسب للتنظيف السطحي السريع - يجف السجاد خلال أقل من ساعة.*

وضع التنظيف العميق:

يعطي أفضل نتائج بوجه عام للتنظيف الشامل والعميق.



وصل الجهاز بمصدر التيار الكهربائي، واضغط على زر التشغيل/الإيقاف لتشغيله.



أدر مفتاح الغسيل/الشفط إلى وضع "الغسيل". تعمل فرش وقضبان فرش المنظف الدوار على تنظيف السجاد بعمق بالماء والمحلول لإزالة الأوساخ والبقع.



قم بإمالة ومحاذاة الجزء الأمامي للخزان مع الغسالة واضغط على الخزان للخلف حتى يستقر في مكانه بإحكام.

ملاحظة: يضم هذا الجهاز خزان خليط تلقائي يتيح إعادة أي محلول لم يتم استعماله مجددًا إلى الزجاجية.

الرجاء قراءة قسم "معلومات السلامة العامة" قبل البدء في استخدام هذا الجهاز
معلومة مهمة: يجب تنظيف السجاد بواسطة المكنسة الكهربائية جيداً قبل غسله.

اختبار ثبات الألوكان - بلل قطعة قماش بيضاء شديدة الامتصاص بالمحلول. استخدم قطعة القماش المبللة في فرك جزء صغير ومخفي من السجادة/المفرش/ قماش التنجيد برفق. انتظر عشر دقائق وافحص اللون للتحقق من عدم إزالته أو تغييره باستخدام منشفة ورقية أو قطعة قماش بيضاء. افحص جميع السجاد/المفارش/أقمشة التنجيد قبل أول استخدام وإذا كانت السجادة بأكثر من لون واحد، فافحص جميع الألوكان.

اختبر جميع السجاد/المفارش/أقمشة التنجيد قبل الاستخدام الكامل. قم بتشغيل غسالة السجاد على جزء صغير مخفي. وإذا لم يحدث أي تلف أو تشوه للبلورات، فواصل التنظيف.

عند تنظيف الغرفة بالكامل، انقل الأثاث خارج المنطقة التي سيتم تنظيفها. إذا تعذر نقل الأثاث، فضع رقائق الألومنيوم أو ورق الشمع أسفل السيقان. حيث يحول ذلك دون إحداث الطيقة الخارجية للأرضيات الخشبية بقع

على السجادة. ارفع الحاشية القماشية للأثاث والستائر.

ينبغي دوماً اتباع احتياطات الأمان الأساسية عند استخدام غسالة السجاد، وعدم غمر السجاد بشكل زائد.

استخدام فقط محلول السجاد من فاكس. فقد يؤدي استخدام المحاليل الأخرى إلى تكوين رغوة زائدة وإبطال الضمان.

يجب ملء خزان الماء التنظيف بالماء الدافئ (بحد أقصى 40° سيلزيوس). حيث إن ملء الخزان بالماء الساخن أو المغلي سيؤدي إلى إتلاف الجهاز وإبطال الضمان. إن غسالة السجاد هذه قوية للغاية، فيجب التأكد من إغلاق جميع مفاتيح التحكم قبل توصيلها بمصدر التيار الكهربائي والإمسك بغسالة السجاد بقوة عند بدء التشغيل وأثناء الاستخدام.

تجميع غسالة السجاد




حرك حامل أداة المنظف الدوار فوق المقبض وأسفله.




قم بتجميع الخزانات عبر إمالة ومحاذاة الجزء الأمامي للخزان مع الغسالة والضغط على الخزان للخلف حتى يستقر في مكانه بإحكام.



أدر مفتاح قفل المقبض في اتجاه عقارب الساعة لتثبيته في موضعه.

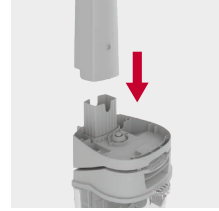

أوقف قاعدة غسالة السجاد فوق الأرضية في وضع قائم. قم بمحاذاة المقبض مع الهيكل الرئيسي واضغط عليه لتثبيته في مكانه.

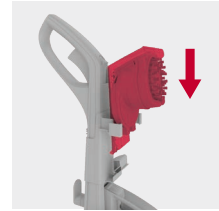

قم بمحاذاة أداة المنظف الدوار مع الحامل وحرك الأداء للأسفل لتثبيتها في موضعها.

1. لا تستخدم غسالة السجاد إلا في أماكن داخلية وحافظ على الإضاءة الجيدة في المنطقة التي تقوم بتنظيفها.
2. أبعد أصابع اليد والشعر والملابس الفضفاضة عن الأجزاء المتحركة والفتحات أثناء استخدام غسالة السجاد.
3. قبل استخدام غسالة السجاد، اختر السجاد/المفارش/أقمشة التنجيد للتأكد من ثبات الألوان والكشف عن تشوه البلورات.
4. هذا الجهاز غير مخصص للاستخدام من قبل الأشخاص (بما في ذلك الأطفال) الذين يعانون من قصور جسدي أو حسي أو عقلي، أو نقص في الخبرة والمعرفة، إلا إذا تم تقديم الإشراف أو التوجيه لهم بشأن استخدام الجهاز من قبل شخص مسؤول عن سلامتهم.
5. يجب مراقبة الأطفال للتأكد من عدم استخدامهم للجهاز كلعبة.
6. يجب ألا يتم استخدام سوى الأدوات والمحالييل التي توصي شركة فاكس بها مع غسالة السجاد. حيث قد يؤدي استخدام محاليل أخرى إلى إبطال الضمان.
7. لا ترك غسالة السجاد قيد التشغيل أثناء عدم الإشراف عليها.
8. لا تستخدم غسالة السجاد في حالة سقوطها أرضاً أو تلفها أو تركها في أماكن خارجية.
9. لا تطأ سلك الطاقة بقدمك أو تستخدم غسالة السجاد في حالة تلف سلك أو قابس التيار الكهربائي. إذا تعرض سلك التيار الكهربائي للتلف، فيجب استبداله بواسطة شركة التصنيع أو وكيل الخدمة التابع لها أو أشخاص مؤهلين بدرجة مشابهة لتجنب وقوع أي مخاطر.
10. لا تستخدم غسالة السجاد لالتقاط أية مواد قابلة للاشتعال أو قابلة للاحتراق (سائل الولاعات، البنزين، الكيروسين، وما إلى ذلك) أو استخدامها في مكان تنتشر به الأبخرة أو السوائل القابلة للانفجار.
11. لا تمسك القابس أو غسالة السجاد بيدتين مبللتين.
12. لا تسحب غسالة السجاد أو تحملها بواسطة سلك الطاقة.
13. لا تستخدم غسالة السجاد في النقاط أعقاب جمرات الفحم المشتعلة أو أعقاب السجائر أو عيدان الثقاب أو الأشياء المشتعلة التي ينبعث الدخان منها ولا تستخدمها في منطقة قد تكون بها سوائل ضارة (مثل الكلور وسائل التبييض ومنقي الصرف من الأمونيا).
14. لا تستخدم سلك الطاقة كمقبض ولا تسحب سلك الطاقة حول الزوايا أو الحواف الحادة أو تغلق باباً فوق سلك الطاقة.
15. لا تزعزع قابس غسالة السجاد عن طريق سحبه من سلك الطاقة.
16. لا تحمل غسالة السجاد بينما تكون قيد التشغيل.
17. لا تحاول إزالة الانسدادات باستخدام أجسام حادة لأن ذلك قد يؤدي إلى إتلاف غسالة السجاد.
18. لا تستخدم غسالة السجاد مع فولتية غير صحيحة لأن ذلك قد يؤدي إلى إتلافها أو إصابة المستخدم. يتم توضيح قيمة الجهد الكهربائي المناسب في لوحة المعالجة.
19. استشر شركة تصنيع الأرضية قبل استخدام غسالة السجاد.
20. يجب ملء خزان الماء التنظيف بالماء الدافئ (بحد أقصى 40° سيلزيوس) فقط. سيؤدي ملء الخزان بالماء الساخن أو المغلي إلى إتلاف الجهاز وإبطال الضمان.
21. احرص دومًا على تنظيف الأرضيات بالمكنسة الكهربائية جيدًا قبل استخدام غسالة السجاد.
22. اختر جميع السجاد/المفارش/أقمشة التنجيد قبل الاستخدام الكامل. قم بتشغيل غسالة السجاد على جزء صغير مخفي. إذا لم يحدث أي تلف أو تشوه للبلورات، فواصل التنظيف.
23. استبدل المصهر الموجود في القابس دومًا بمصهر بريطاني 13 أمبير.
24. افصل غسالة السجاد دومًا قبل إجراء أية أعمال صيانة وقبل توصيل أو فصل الخرطوم/الملحقات.
25. افحص الأدوات والملحقات دومًا للتأكد من خلوها من التلف والأوساخ والبقايا قبل استخدامها.
26. توخ بالحد عند تنظيف الدَّرَج.
27. قم دومًا بحماية كابل الطاقة من الأسطح الساخنة أو بالقرب من أسنة اللهب المكشوفة.
28. أوقف تشغيل كل مفاتيح التحكم في غسالة السجاد قبل فصل أو توصيل سلك الطاقة. قم دومًا بلف سلك الطاقة حول مشابك السلك المتوفرة عقب الاستخدام.
29. احتفظ بسلك الطاقة دومًا بعيدًا عن الفُرش أثناء استخدام غسالة السجاد.
30. لا تستخدم سوى أسلاك إطالة معتمدة من CE بمعايرة 13 أمبير لأن أسلاك الإطالة غير المعتمدة قد تؤدي إلى زيادة السخونة، ينبغي توخي الحذر لوضع سلك الإطالة بحيث يتم تجنب خطر التعثر فيه.
31. استخدم دومًا غسالة السجاد مع وجود جميع خزانات الماء/المحلول والفلتر في أماكنها.
32. احتفظ بكل الفتحات خالية من الأوساخ لأن ذلك قد يؤثر في تدفق الهواء/الشفط.
33. استخدم دومًا غسالة السجاد في وضع قائم. للحيلولة دون تلف المحرك بسبب الماء المتسخ، لا تقلب غسالة السجاد أبدًا رأسًا على عقب أو على جانبها.
34. قم بتخزين غسالة السجاد في مكان جاف وبارد. قبل تخزين غسالة السجاد، يُرجى التأكد من أن جميع خزانات الماء/المحلول والفلتر نظيفة وجافة تمامًا.

الرجاء الاحتفاظ بهذه التعليمات بحيث يتم استخدامها في المستقبل.

تجميع غسالة السجاد



- 1 المقيض
- 2 زر التنشيط
- 3 أداة وحامل المنظف الدوار
- 4 زر تحرير خزان الماء/المحلول التنظيف
- 5 أغشية خزان الماء/المحلول التنظيف
- 6 خزان الماء/المحلول التنظيف
- 7 مفتاح الشطف/الغسيل
- 8 قفل تحرير الماء المتسخ
- 9 خزان الماء المتسخ
- 10 منفذ توصيل الخرطوم و المحلول (مخفي)
- 11 مشبك تحرير الفوهة
- 12 وظيفة التنظيف السريع
- 13 الفوهة
- 14 فرش وقضيب فرش المنظف الدوار
- 15 زر المحلول (مخفي)
- 16 خطاف تحرير السلك السريع (مخفي)
- 17 مفتاح قفل المقيض (مخفي)
- 18 دواسة الإمالة (مخفية)
- 19 دواسة الإيقاف/التشغيل (مخفية)
- 20 الخرطوم
- 21 أداة المنظف الدوار
- 22 أداة غسيل قماش التنجيد
- 23 عصا المعالجة المسبقة
- 24 الممسحة المطاطية للأرضيات الصلبة
- 25 حقيبة الملحقات
- 26 محلول تنظيف

الملحقات





Platinum Power Max

دليل المستخدم

CWKTH012
Hoover.ae