

Gator 10.8V


User Guide



2 MACHINE OVERVIEW


- 1 Charging indicator (red LED)
- 2 On/off switch
- 3 Filter release button
- 4 Handle
- 5 Dirt container release button
- 6 Dirt container release button
- 7 Retractable crevice tool
- 8 Charger socket
- 9 Filter
- 10 Charger

Unit

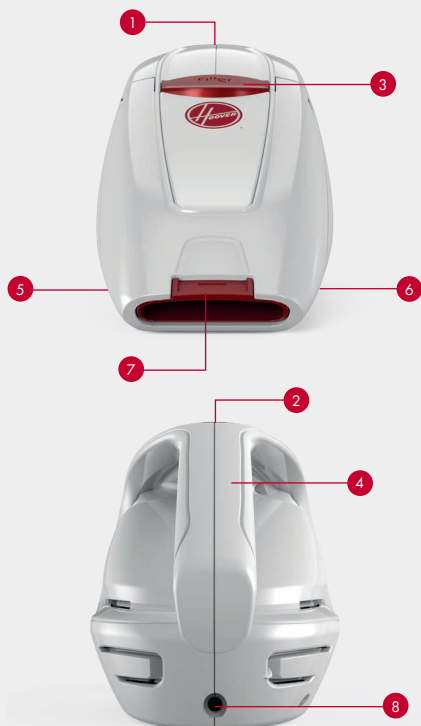


Filter & Accessories

9



10

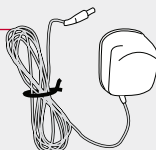

FOR HOUSEHOLD USE ONLY.


Please keep instructions for further use and use only as instructed in this guide. This handheld cleaner is intended for household use only and NOT for commercial or industrial use.

1. This handheld is for indoor use only.
2. For dry debris use, not to be used on wet surfaces.
3. Keep fingers, hair and loose clothing from moving parts and openings whilst using the handheld.
4. Only Hoover charger, tools and accessories should be used with this handheld.
5. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not clean or maintain the appliance without adult supervision. Cleaning and user maintenance shall not be made by children without supervision.
6. Don't charge the handheld outdoors.
7. Don't use this handheld if it has been dropped, damaged, immersed in water or left outdoors.
8. Don't handle the plug or use the handheld with wet hands.
9. Don't throw the handheld into fire or expose to high temperatures, as the handheld contains a rechargeable nickel cadmium battery which may cause damage or burst.
10. Don't pull or carry this handheld by the charger cord. Don't use the charger cord as a handle, pull the charger cord around corners or sharp edges or close a door over the charger cord. Don't unplug handheld by pulling on the charger cord.
11. Don't attempt to remove blockages with sharp objects as this may cause damage to your handheld.
12. Don't use the handheld charger with incorrect voltage as this may result in damage or injury to the user. The correct voltage is listed on the ratings label.
13. Don't vacuum up hot coals, cigarette butts, matches or smoking hot burning items or use in an area where there may be harmful fluids (chlorine, bleach, and ammonia drain cleaner).
14. Always make sure filter and dirt container are fitted correctly before using your handheld.
15. Always turn off the Gator handheld vacuum and disconnect the charger before carrying out any maintenance.
16. Do not operate the handheld whilst charging.
17. Take extra care when cleaning on the stairs.
18. Only replace the fuse in the plug with a 13amp fuse.
19. Always protect the charger cable from heated surfaces or near open flames.
20. Use only CE approved 13amp extension cords, non-approved extension cords may overheat. Care should be taken to arrange the extension cord as it can be a trip hazard.
21. Always carry the handheld by the handle.
22. Store your handheld in a cool, dry area.


PLEASE KEEP INSTRUCTIONS FOR FUTURE USE.

IMPORTANT: Failure to initially charge the battery for 24 hours, may result in poor battery performance. The power switch must be in the off position to charge the battery.


Operating the appliance

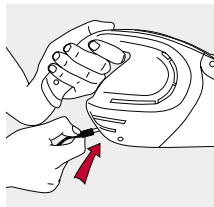


Plug charger into the mains and insert lead into back of machine. Initial charging time is 24 hours.

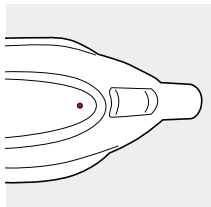


The charging light will illuminate continuously whilst the charger is connected.

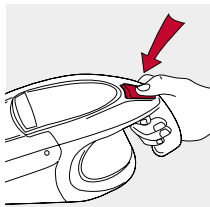

Slide the ON/OFF switch to turn the machine on and off.

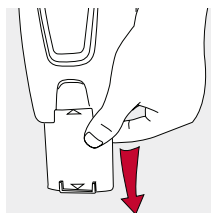


Gently pull the crevice tool.

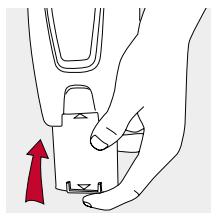


Push the crevice tool to retract.

IMPORTANT: Always unplug the charging lead from the machine before carrying out any maintenance.
We recommend to empty the dirt container after each use.

Emptying the dirt container

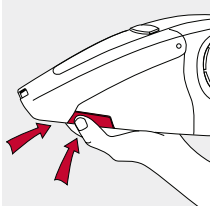


To empty the dirt container, press both buttons either side of the dirt container to release lid.

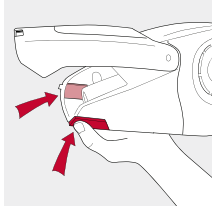

Empty dirt and debris over a bin.

Emptying and washing the filter

IMPORTANT: Do not use the handheld without the filter in place.

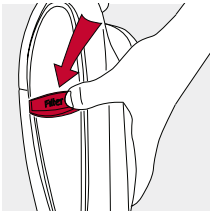


Press the filter removal button and pull dirt container from machine.



Whilst holding the dirt container over a bin, grasp the filter gently and pull out.





Shake any excess dirt or debris from the dirt container.

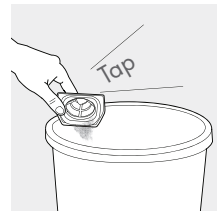


Tap filter against bin.



Wash the filter under running water and leave to fully dry for a least 24 hours before replacing.

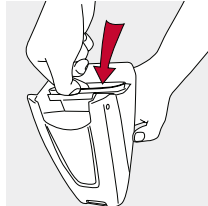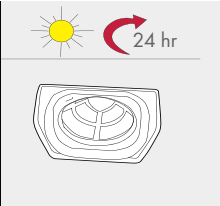

Gently push filter back into the dirt container.

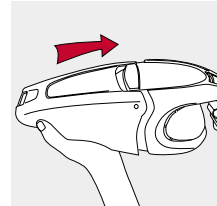

To re-attach the dirt container, align bottom of the dirt container and push until it locks into place.

6 FAQs

Is there an accessory missing?

- Check the 'Contents' panel on the box to make sure the part is included with your machine.

Why does my handheld have no power?

- Battery may not be fully charged. If using the handheld for the first time the initial charge should be 24 hours. The charging light will illuminate continuously when charger is connected.

Why won't the handheld pick up?

- The nozzle or crevice tool may be blocked, check and clear any blockage.
- The filter may be clogged, clean the filter. Go to 'Maintenance'.
- The battery is getting weak, let the battery run until it stops and recharge.
- The dirt container may be full, empty the dirt container. Go to 'Maintenance'.

Why won't the battery recharge?

- The charger may not be inserted correctly. Check the fuse in the plug, if this needs replacing always replace with a 13amp fuse.

Service and Help

If you have any queries or concerns about using your Hoover, please visit **hoover.ae**

Consumables

To purchase spares and accessories, please contact your local Hoover supplier.

The use of genuine Hoover spare parts helps to maintain optimised performance and validates your guarantee. For more information visit **hoover.ae**

Technical Specification

Voltage:	10.8V
Weight:	1.24kg
Capacity:	0.3L
Cleaning time:	13 mins
Charging time:	12 hrs

Subject to technical change without notice.

HOOVER is a trademark of Techtronic Cordless GP © 2023 Techtronic Cordless GP. All rights reserved.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

This marking on the product(s) and/or accompanying documents means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point.



الخدمة والمساعدة

للتوصل إلى أقرب بائع تجزئة لمنتجات هوفر، ليس عليك سوى أن تزور **hoover-mea.com**

المستلزمات الاستهلاكية

إن استخدام قطع غيار هوفر الأصلية يساعد في الحفاظ على الأداء الأمثل ويحافظ على سريان ضمانك. الرجاء زيارة **hoover-mea.com** للحصول على مزيد من المعلومات

المواصفات الفنية

القولبية:	10.8 فولت
الوزن:	1.24 كجم
السعة:	0.3 لتر
مدة التنظيف:	13 دقيقة
مدة الشحن:	12 ساعة
عرضة للتغير الفتي بدون إشعار.	

هل هناك قطعة ملحقة مفقودة؟

- افحص لوحة «محتويات الصندوق» للتأكد أن القطعة موجودة في جهاز التنظيف بالبخر.

ما سبب عدم وصول التيار الكهربائي إلى المكينة الكهربائية؟

- ربما لم يتم شحن البطارية شحنًا كاملاً، في حالة شحن المكينة المتحركة للمرة الأولى، فينبغي أن يدوم الشحن لمدة 24 ساعة، سيضيء مصباح الشحن إضاءة مستمرة أثناء توصيل الشاحن.

لماذا لا تلتقط المكينة المحمولة الأوساخ؟

- قد تكون الفوهة أو أداة تنظيف الشقوق وافحص للكشف عن أي انسداد وإزالته.
- الفلتر قد يكون مسدوداً، قم بتنظيفه، انتقل إلى «الصيانة».
- البطارية ضعيفة، اترك البطارية تعمل حتى تتوقف وأعد شحنها.
- حاوية الأتربة قد تكون ممتلئة، قم بتفريغ حاوية الأتربة، انتقل إلى «الصيانة».

ما سبب تعذر إعادة شحن البطارية؟


- ربما لم يتم إدخال الشاحن بشكل صحيح، افحص المصهر الموجود في القابس وإذا كان يحتاج إلى الاستبدال فاستبدله بمصهر 13 أمبير.

هام: انزع دائمًا سلك الشحن من الجهاز واتركه يبرد قبل تنفيذ أي عمليات صيانة.
نحن نوصي بتفريغ حاوية الأتربة بعد كل مرة تستخدم الجهاز فيها.


تفريغ حاوية الأتربة.



أفرغ الأوساخ والشوائب في
سلة النفايات.

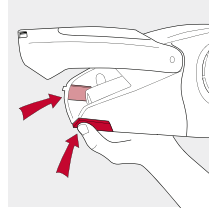

لتفريغ حاوية الأتربة، اضغط على كل من الأزرار الموجودة على
جانبي حاوية الأتربة لفتح الغطاء.

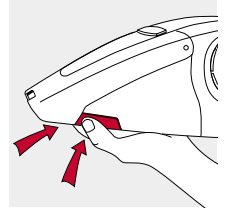

تفريغ الفلتر وغسله

هام: لا تستخدم هذه المكنسة المحمولة إلا بعد تركيب الفلتر في أماكنها.




قم بتنظيف الفلتر عن طريق نقره
على حافة السلة.




هز الأوساخ أو الشوائب الزائدة من
حاوية الأتربة.




بينما تحمل حاوية الأتربة فوق
سلة النفايات، قم بمسك الفلتر
بلطف واسحبه للخارج.

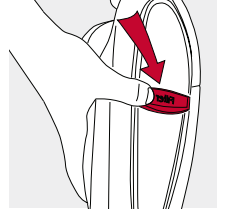


اضغط على زر إزالة الفلتر
واسحب حاوية الأتربة من
الجهاز.

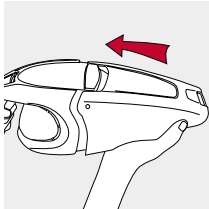

لإعادة تثبيت حاوية الأتربة،
بمحاذاة أسفل حاوية الأتربة
واضغط حتى يتم قفلها مكانها.

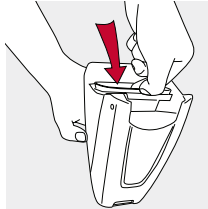

قم بدفع الفلتر بلطف مرة أخرى
داخل حاوية الأتربة.

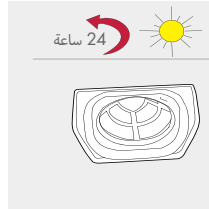


اغسل الفلتر تحت الماء الجاري واتركه يجف تمامًا لمدة 24 ساعة على الأقل
قبل استبداله.




هام: قد يؤدي عدم شحن البطارية شحنًا أوليًا لمدة 24 ساعة إلى ضعف أداء البطارية.

يجب أن يكون مفتاح التشغيل في وضع الإيقاف ليتم شحن البطارية.


تشغيل الجهاز

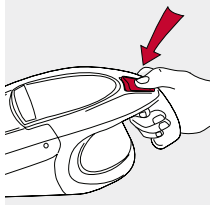


قم بتحريك مفتاح التشغيل/
الإيقاف لتشغيل وإيقاف تشغيل
الجهاز.

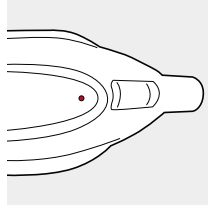


ستضيء لمبة الشحن بشكل مستمر
بينما عندما الشاحن متصلاً.

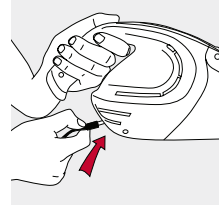

قم بتوصيل الشاحن بمنفذ
الكهرباء وأدخل السلك في الجزء
الخلفي من الجهاز. يستغرق
الشحن الأولي 24 ساعة.

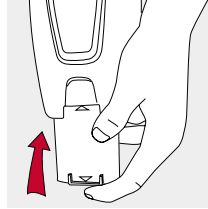

اضغط على أداة تنظيف الشقوق
لسحبها.

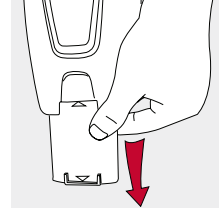

اسحب أداة تنظيف الشقوق
بلطف.

لقد تم تصميم هذا الجهاز للاستخدام المنزلي فقط.

الرجاء الاحتفاظ بالتعليمات من أجل استخدامها بعد ذلك ولا تستخدم هذا الجهاز إلا حسب التعليمات الواردة في هذا الدليل. يتم تصنيع هذه المكنسة المحمولة

للاستخدام المنزلي فقط وليس للاستخدام التجاري أو الصناعي.

1. هذا الجهاز مخصص للاستخدام الداخلي فقط.

2. يستخدم لتنظيف الأوساخ والجافة ولا يستخدم لتنظيف الأسطح المبللة.

3. أبعد أصابع اليد والشعر والملابس الفضفاضة بعيدًا عن الأجزاء المتحركة والفتحات أثناء استخدام هذه المكنسة المحمولة.

4. يجب استخدام شاحن هوفر فقط، والأدوات والملحقات مع هذا الجهاز المحمول.

5. يمكن استخدام هذا الجهاز من قبل الأطفال الذين تتراوح أعمارهم بين 8 سنوات وأكبر، والأشخاص الذين يعانون من قدرات جسدية أو حسية أو عقلية محدودة أو نقص في الخبرة والمعرفة إذا تم توفير الإشراف أو التعليم بشأن استخدام الجهاز بطريقة آمنة ووفق المخاطر المشاركة فيها. يجب ألا يقوم الأطفال بتنظيف الجهاز أو صيانته بدون إشراف بالغ.

6. لا تشحن المكنسة المحمولة في أماكن خارجية مفتوحة.

7. لا تستخدم المكنسة المحمولة في حالة سقوطها أرضًا أو تلفها أو غمرها في الماء أو تركها في أماكن خارجية.

8. لا تمسك بالقابس أو المكنسة المحمولة أو تستخدمها بيدين مبللتين.

9. لا تلمس المكنسة المحمولة في النيران أو تعرضها لدرجات حرارة مرتفعة لأن تلك المكنسة المحمولة تحتوي على بطارية نيكل كاديوم قابلة لإعادة الشحن والتي قد تتسبب في حدوث تلف أو انفجار.

10. لا تسحب المكنسة المحمولة أو تقلبها باستخدام سلك الطاقة. لا تستخدم سلك الشاحن كمقبض ولا تسحب سلك الشاحن حول الزوايا أو الحواف الحادة أو تغلق بابًا فوق سلك الشاحن. لا تنزع قابس المكنسة المحمولة عن طريق سحبه من سلك الشاحن.

11. لا تحاول إزالة الانسدادات باستخدام أجسام حادة لأن ذلك قد يؤدي إلى إتلاف المكنسة المحمولة.

12. لا تستخدم شاحن المكنسة المحمولة مع جهد غير صحيح لأن ذلك قد يؤدي إلى إتلافه أو إصابة المستخدم. يتم توضيح قيمة الجهد الكهربائي المناسب في لوحة المعايرة.

13. لا تستخدم المكنسة الكهربائية في النقاط أعقاب جمرات الفحم المشتعلة أو أعقاب السجائر أو عيدان الثقاب أو الأشياء المشتعلة التي ينبعث الدخان منها ولا تستخدمها في منطقة قد تكون بها سوائل ضارة (مثل الكلور وسوائل التبييض ومنقي الصرف من الأمونيا).

14. تأكد دائمًا أن الفلتر وحواشي الأتربة تم تركيبهما بشكل صحيح قبل استخدام هذه المكنسة المحمولة.

15. أوقف دائمًا تشغيل مكنسة Gator المحمولة وأفضل الشاحن قبل تنفيذ أي صيانة.

16. لا تقم بتشغيل الجهاز المحمول أثناء عملية الشحن.

17. توخ مزيدًا من الحذر عند التنظيف فوق السلام.

18. استبدل الصمام الكهربائي (الفيز) في القابس بصمام كهربائي سعة 13 أمبير فقط.

19. قم دائمًا بحماية كابل الشاحن من الأسطح الساخنة أو عند الاقتراب من أسنة اللهب المكشوفة.


20. لا تستخدم سوى أسلاك إطالة معتمدة من CE بمعايرة 13 أمبير لأن أسلاك الإطالة غير المعتمدة قد تؤدي إلى زيادة السخونة. ينبغي توخي الحذر لوضع سلك الإطالة بحيث يتم تجنب خطر التعثر فيه.

21. احمل الجهاز المحمول دائمًا باستخدام المقبض.

22. قم بتخزين الجهاز المحمول في منطقة جافة وجيدة.



الرجاء الاحتفاظ بهذه التعليمات بحيث يتم استخدامها في المستقبل.

الوحدة

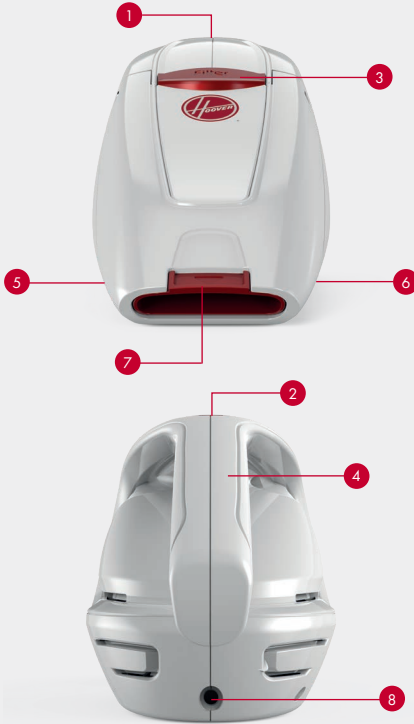

- 1 مؤثر الشحن (ليد أحمر)
- 2 مفتاح التشغيل/إيقاف التشغيل
- 3 زر تحرير الفلتر
- 4 المقبض
- 5 زر تحرير حاوية الأتربة
- 6 زر تحرير حاوية الأتربة
- 7 أداة تنظيف الشقوق القابلة للسحب
- 8 مقبس الشحن
- 9 فلتر
- 10 شاحن

الفلتر والملحقات

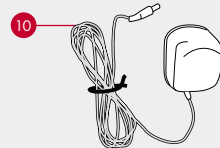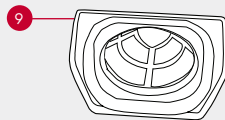



Gator 10.8V

دليل المستخدم



HQ86-GA-B-ME
Hoover.ae