

Streamline


User Guide



CDHF-SLME
Hoover.ae
Hoover.sa

2 MACHINE OVERVIEW

- 1 Handle
- 2 Power ON/OFF
- 3 Boost button
- 4 Self-clean mode button
- 5 Function display panel
- 6 Main unit
- 7 Dirt water tank release button
- 8 Filter (hidden)
- 9 Dirty water tank
- 10 Brushroll cover release buttons
- 11 Brushroll cover
- 12 Brushroll release tab
- 13 Brushroll
- 14 Trigger
- 15 Cord clip
- 16 Quick release cord hook
- 17 Clean water/solution tank release button
- 18 Clean water/solution tank
- 19 Rinse/storage tray
- 20 250ml Solution

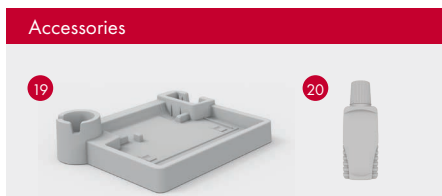

1. Only use the machine indoors and keep the area you're cleaning well lit.
2. Keep fingers, hair and loose clothing away from moving parts and openings whilst using the machine.
3. Before using the machine test your flooring for suitability.
4. Not suitable for stair cleaning.
5. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Children should be supervised to ensure that they do not play with the appliance.
7. Only HOOVER recommended accessories and solution should be used with this machine. Using other solutions may invalidate the guarantee.
8. Don't leave the machine plugged in when unattended.
9. Don't use the machine if it has been dropped, damaged or left outdoors.
10. Don't run over the power cord or use the machine if the power cord or plug is damaged. If the power cord is damaged, it must be replaced by a qualified person in order to avoid a hazard.
11. Don't use the machine to pick up any flammable or combustible materials (lighter fluid, petrol, kerosene etc.) or use the machine in an area with explosive vapours or liquid.
12. Don't handle the plug or use the machine with wet hands.
13. Don't pull or carry the machine by the power cord.
14. Don't use the machine to pick up hot coals, cigarette butts, matches or smoking hot burning items or use in an area where there may be harmful fluids (chlorine, bleach and ammonia drain cleaner).
15. Don't use the power cord as a handle, pull the power cord around corners or sharp edges, or close a door over the power cord.
16. Don't unplug the machine by pulling on the power cord.
17. Don't carry the machine while it's switched on.
18. Don't attempt to remove blockages with sharp objects as this may cause damage to the machine. Remove blockages only as instructed in this guide.
19. Don't use the machine with incorrect voltage as this may result in damage or injury to the user. The correct voltage is listed on the ratings label.
20. Don't over saturate your flooring. Always finish on a dry stroke.
21. Don't use on a surface that is damaged, uneven or incorrectly fitted.
22. Refer to the floor manufacturer's care recommendations prior to using the machine and solution. Test all your flooring before full usage - run the machine over a small hidden area, if no damage or discoloration occurs continue cleaning. Not suitable for use on water-sensitive flooring.
23. The clean water tank should be filled with warm water (max 40°C) only. Filling the clean water tank with hot or boiling water will damage the machine and invalidate the guarantee.
24. Always vacuum your flooring thoroughly before using the machine.
25. Always replace the fuse in the plug with a British standard 13amp fuse.
26. Always unplug the machine before carrying out any maintenance.
27. Always check the machine, machine base and brushroll are free from damage, dirt and debris before using.
28. Always protect the power cord from heated surfaces and open flames.
29. Turn off all controls on the machine before disconnecting or connecting the power cord. After use always wrap the power cord around the cord clips provided.
30. Always keep the power cord away from the brushroll whilst using the machine.
31. Use only CE/UKCA approved 13amp extension cords, non-approved extension cords may overheat. Care should be taken to arrange the extension cord as it can be a trip hazard.
32. Always use the machine with all water tanks and filters in place.
33. Keep all openings clear and free from debris as this may affect the airflow/suction/water pick up.
34. Always use the machine in an upright position. To prevent motor damage from dirty water, never hold the machine upside down or on its side.
35. Store the machine in a cool, dry area. Before storing the machine please ensure all water tanks are empty and filters are thoroughly clean and dry.

PLEASE KEEP INSTRUCTIONS FOR FUTURE USE.

PLEASE READ 'GENERAL SAFETY INFORMATION' AT THE BEGINNING BEFORE USE

IMPORTANT: Check suitability with the manufacturer of the flooring and test the machine over a small hidden area of your flooring before use. If no damage occurs, continue cleaning. Not suitable for water-sensitive flooring.

When using the machine, basic safety precautions should always be observed.

Take care not to oversaturate flooring. Always finish on a dry stroke (no trigger pressed). For heavily soiled areas, it may be necessary to repeat the cleaning process.


Only use HOOVER hard floor solutions. Using other solutions may cause excess foaming and will invalidate your guarantee.

The water/solution tank should only be filled with warm water (max 40°C). Filling the water/solution tank with hot/boiling water will damage your machine and invalidate the guarantee.


Empty and rinse out the dirty water tank and leave it to air dry before storage. Do not leave water/solution in the tanks for a prolonged period. A small amount of water/solution can be left in the tank for short periods of time in between cleans if the machine is used regularly.

Always stand the machine in the rinse/storage tray when not in use.

For prolonged storage, the brushroll and filters should be removed, cleaned, dried, and stored in the rinse/storage tray.

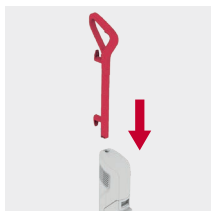Assembly

Push the handle into the main body until it clicks into place.

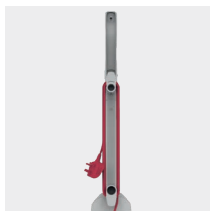

Loosely wrap the power cord around the quick release cord hooks.



Stand the machine in the rinse/storage tray between uses to catch excess water and prevent flooring damage.

Filling the water/solution tank

IMPORTANT: The ADD WATER light will illuminate if the water/solution tank requires refilling during use.



Press the water/solution tank release button and pull the tank to remove it from the back of the machine.



Pull to open the tank cap and fill with water (max 40°C) and solution to the markers on the tank.



Firmly push the tank cap closed.



To refit, align the base of the tank with the machine and push back until it clicks into place.

Operation

IMPORTANT: The dirty water tank is fitted with a float. When the dirty water tank is full, the float will shut off the suction on the machine. When this happens the motor noise on the machine will increase and the EMPTY DIRTY WATER light will illuminate. Once the light is illuminated or the float is activated, check if the dirty water tank is full and empty if necessary.



Remove the machine from the rinse/storage tray.

NOTE: the handle controls are deactivated when the machine is standing in the rinse/storage tray.



Turn the quick release cord hook to release the power cord.



Clip the cord into the cord hook so that the cord does not get pulled, caught or tangled in the machine during use.

6 OPERATION

Operation

Function display panel



1. BOOST

For particularly dirty areas.

2. WASH

Illuminates when the trigger is pressed and water/solution is released.

3. ADD WATER

Illuminates to indicate when the water/solution tank needs refilling.

4. BRUSH ROLL

Illuminates if the brushroll is obstructed or the brushroll or brushroll cover is not correctly fitted.

5 EMPTY DIRTY WATER

Illuminates and flashes when the dirty water tank is full and needs emptying.

6. SELF-CLEAN

Will only activate when stood in the rinse/storage tray. Illuminates and flashes when activated. Once activated the clean mode automatically runs through a 90-second cleaning cycle to remove any remaining dirt and debris from the brushroll in the floorhead and hose.



Place your foot on the base and pull the handle backward to recline.



Press the on/off button to switch the machine on.



Press the trigger on the handle to release water and solution. The WASH light on the digital display will illuminate.



For best results apply water/solution on the forward stroke and release the trigger on the backward stroke to pick up water/solution. For a dryer finish, follow with an additional dry stroke with no trigger pressed.



For particularly dirty areas activate the + boost mode. BOOST will illuminate on the display screen.



For optimum pick up on deep grout lines, position the brushroll over the grout and follow the line.



For optimum edge cleaning run the machine parallel to the edge.

IMPORTANT: Always switch off and unplug the machine before performing maintenance or troubleshooting checks.

Emptying and cleaning the dirty water tank

IMPORTANT: The dirty water tank is fitted with a float. When the dirty water tank is full, the float will shut off the suction on the machine. When this happens the motor noise on the machine will increase and the EMPTY DIRTY WATER light will illuminate. Once the light is illuminated or the float is activated, check if the dirty water tank is full and empty if necessary.



Press down the dirty water tank release button and pull the tank to remove it.



Hold the top of the dirty water tank lid and pull upwards to remove.




Pull the tabs on the side of the filter to remove.



Empty the dirty water tank into a sink or toilet.



Rinse the tank, float and filter under water (max 40°C) to remove dirt/debris.

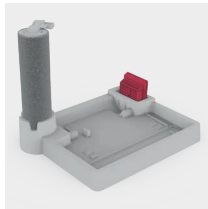

Leave the filter to dry in the rinse/storage tray for at least 24hrs or until fully dry before refitting.



To re-fit, tilt the dirty water tank and line the front of the tank up onto machine. Push back until it clicks into place.

8 MAINTENANCE

Machine rinse and brushroll quick clean

IMPORTANT: The self-clean mode will only activate when the machine is standing in the rinse/storage tray. If the water/solution tank requires filling during the self-clean cycle the ADD WATER light will illuminate. This will end the cycle, to reset refill the tank and reactivate pressing the self-clean button.



Stand the machine in the rinse/storage tray.
NOTE: The self-clean mode will only activate when the machine is standing in the rinse/storage tray.



Empty the dirty water tank into a sink or toilet.



Pull to open the tank cap and fill to halfway with water (max 40°C).




Firmly push the tank cap closed and refit to the machine.



Press the SELF-CLEAN button to activate. The self-clean light will illuminate.



The brushroll will spin and water will automatically be released. The self-clean cycle takes 90 seconds and will automatically stop when finished. To stop the self-clean mid cycle press the SELF-CLEAN button.

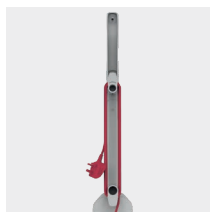


Unplug from the mains and loosely wrap the power cord around the hooks.



Empty the dirty water tank into a sink or toilet.



Rinse the tank, float and filter under water (max 40°C) to remove dirt/debris.

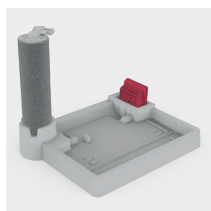

Leave the filter to dry in the rinse/storage tray for at least 24hrs or until fully dry before refitting.



Stand the machine in the rinse/storage tray between uses to catch excess water and prevent flooring damage.

IMPORTANT: Always switch off and unplug the machine before performing maintenance or troubleshooting checks.

Removing and advanced cleaning of the brushroll

IMPORTANT: If the brushroll gets obstructed or is not correctly fitted, the brushroll will stop and the BRUSH ROLL light will illuminate. To reset switch the machine off, remove the obstruction, and refit the brushroll and brushroll cover. For best cleaning results, advanced cleaning of the brushroll should be done every 5-6 uses. For prolonged storage, the brushroll should be removed, cleaned and stored in the rinse/storage tray.



Squeeze the clips on the brushroll cover and lift the cover to remove.



Lift and pull the brushroll release tab to remove the brushroll.



Rinse the brushroll in water (40°C max).



Wipe the cover to remove any dried on dirt and debris.



Allow the brushroll to dry in the rinse/storage tray before refitting.



To refit the brushroll, slide the brushroll onto the spindle.



Push the brushroll release tab down in until it clicks.



Align the brushroll cover and push until it clicks into place.

10 MAINTENANCE


IMPORTANT: Always switch off and unplug the machine before performing maintenance or troubleshooting checks.

Checking for blockages


IMPORTANT: Using the SELF-CLEAN function after every use will help prevent the build up of dirt and debris.



Remove the water/solution tank and the dirty water tank from the machine.

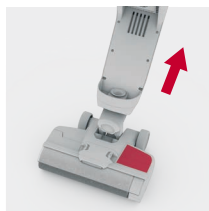

Place your foot on the base and pull the handle backwards to recline.

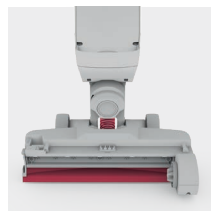


Check for blockages and use a blunt object to remove the blockage.


Removing and cleaning the squeegee assembly




Remove the water/solution tank and the dirty water tank from the machine.

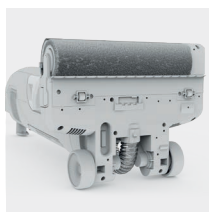

Lie the machine on its back.

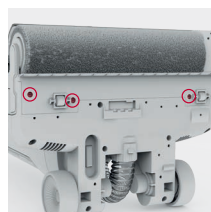


Using a crosshead screwdriver, remove the 3 screws.

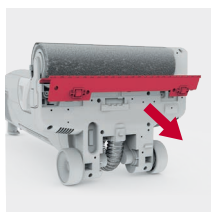


Pull the squeegee assembly to remove it.



Rinse the assembly under water (40°C max). Wipe the squeegee to remove any dried on dirt and debris.

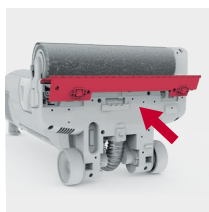

To refit the squeegee assembly, fit the tabs below the rollers on the assembly into the machine and push the assembly into place.

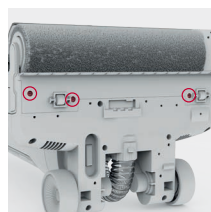


Refit and tighten the 3 screws.

Removing, cleaning and replacing the filter

IMPORTANT: Every 5-6 uses wash the filter with warm water (40°C max) and leave for 24 hours or until fully dry, before refitting onto the machine. For prolonged storage the filter should be removed, cleaned and stored in the rinse/storage tray. For best cleaning results filters should be replaced every 6 months (depending on the level of use). Ensure all filters are dry and in place before using the machine.




Press down the dirty water tank release button and pull the tank to remove it.

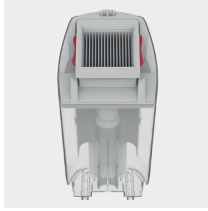

Pull the tabs on the side of the filter to remove.



Wash the filter under running water (40°C max). Leave for at least 24hrs or until fully dry before refitting.

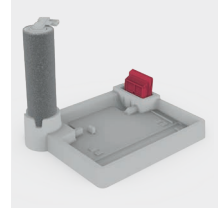

Leave the filter to dry in the rinse/storage tray for at least 24hrs or until fully dry before refitting.

12 MAINTENANCE

Storage

IMPORTANT: Store the machine in a cool, dry area. Before storing the machine ensure all water tanks are empty, and the brushroll and filters are thoroughly clean and dry.



Remove the filter and brushroll from the machine and store in the storage tray in between uses.



Stand the machine in the rinse/storage tray between uses to catch excess water and prevent flooring damage.



Loosely wrap the power cord around the quick release cord hooks.


Removing the handle



Turn the quick release cord hook to release the power cord.



Firmly push a thin blunt object into the handle release hole.

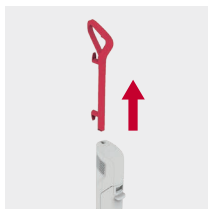

Pull to remove the handle from the machine.

CAUTION: Always unplug the machine before performing any maintenance/troubleshooting checks.

Is there an accessory missing?

- Check the contents on the box to make sure the part is definitely included with your machine.

Why won't the machine turn on?

- The machine is standing in the rinse/storage tray and the handle controls have been deactivated. Remove from the rinse/storage tray.
- The plug may not be fully pushed into the electrical socket.
- The ON/OFF button may not have been activated.
- The fuse in the plug may need replacing. Always replace with a British 13amp fuse.
- The motor thermostat may have tripped. If this has happened, empty the dirty water tank and check for blockages. Clean the filters and allow the machine to rest for approximately 1 hour.

Why won't the machine pick up?

- The float in the dirty water tank may have been activated. Empty the dirty water tank and wait for the float to settle before restarting the machine. Go to 'Emptying and cleaning the dirty water tank'.
- The brushroll cover may not be correctly fitted. Go to 'Removing and advanced cleaning of the brushroll'.
- The dirty water tank may not be assembled correctly, or the lid may not be pushed down securely. Go to 'Emptying and cleaning the dirty water tank'.
- Check the filter located on the dirty water tank lid for dirt and debris. The filter should be washed after every 5-6 uses, dried before refitting, and replaced every 6 months. Go to 'Removing, cleaning and replacing the filter'.
- The filter is wet. Allow to dry before refitting. Go to 'Removing, cleaning and replacing the filter'.
- Check for blockages and clear. Go to 'Checking for blockages'.
- Check the float in the dirty water tank for dirt and debris. Clean the float and retry. Go to 'Emptying and cleaning the dirty water tank'.
- Check the squeegee assembly and brushroll cover for dirt and debris. Go to 'Removing and cleaning the squeegee assembly' and 'Removing and advanced cleaning of the brushroll'.

Why won't the solution/clean water dispense?

- Squeeze the trigger on the handle to release the solution and water mix.
- The water/solution tank is empty. Refill the tank. Go to 'Filling the water/solution tank'.
- Make sure the water/solution tank is fitted securely, has been clicked into place and the tank cap is closed. Go to 'Filling the water/solution tank'.
- The water/solution tank valve may be stuck. Hold the water/solution tank over the sink and press the valve on the base of the tank to release.

Why won't the brushroll turn?

- The machine is not reclined. Place your foot on the base and pull the handle backward to recline. Go to 'Operation'.
- The brushroll or brushroll cover may not be correctly fitted. Go to 'Removing and advanced cleaning of the brushroll'.
- The brushroll may be obstructed. Go to 'Removing and advanced cleaning of the brushroll'.
- Check for damage to the brushroll.

Why won't the self-clean function activate?

- The self-clean mode will only activate when the machine is standing in the rinse/storage tray.
- The water/solution tank may be empty. Refill the tank. Go to 'Filling the water/solution tank'.

14 OTHER INFORMATION

Service and Help

If you have any queries or concerns about using your Hoover, please visit **hoover.ae** or **hoover.sa**

Consumables

To purchase spares and accessories, please visit **hoover.ae** or **hoover.sa**

The use of genuine HOOVER spare parts helps to maintain optimised performance and validates your guarantee.

Technical Specifications

CDHF-SLME

Dirty water tank capacity:	0.42L
Clean water/solution tank capacity:	0.62L
Cord length:	7.6m
Weight:	5.31kg

Subject to technical change without notice.

HOOVER is a trademark of Techtronic Cordless GP. © 2024 Techtronic Cordless GP. All rights reserved.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

This marking on the product(s) and/or accompanying documents means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point.



الخدمة والمساعدة

إذا كنت لديك أي تساؤلات أو مخاوف متعلقة باستخدام غسالة سجاد هوفر، فتفضل بزيارة الموقع الإلكتروني **hoover.sa** أو **hoover.ae**

المستلزمات الاستهلاكية

لشراء قطع الغيار والملحقات، تفضل بزيارة موقعنا الإلكتروني: **hoover.sa** أو **hoover.ae**
إن استخدام قطع غيار هوفر الأصلية يساعد في الحفاظ على الأداء الأمثل وعلى سلامة ضمانك.

CDHF-SLME

المواصفات الفنية

0.42 لتر
0.62 لتر
7.6 م
5.31 كجم

سعة خزان المياه المتسخة:
سعة خزان المياه النظيفة/محلول التنظيف:
طول الكابل:
الوزن:

مع مراعاة التغير التقني دون سابق إنذار.

HOOVER is a trademark of Techtronic Cordless GP. © 2024 Techtronic Cordless GP. All rights reserved

ينبغي ألا يتم التخلص من نفايات المنتجات الكهربائية عن طريق طرحها مع النفايات المنزلية.
الرجاء إعادة تدويرها إن وجدت مراكز إعادة التدوير. راجع الأمر مع السلطة المحلية أو بائع التجزئة للحصول على النصائح المتعلقة بإعادة التدوير.

إن وجود هذه العلامة على المنتج (المنتجات) و/أو المستندات المصاحبة له يعني أن المعدات الكهربائية والإلكترونية المستعملة لا يجب الخلط بينها وبين النفايات المنزلية العامة. لإجراء أعمال الإصلاح والاسترداد وإعادة التدوير بشكل صحيح، من فضلك اصطحب هذا المنتج (هذه المنتجات) إلى نقاط التجميع المخصصة حيث سيتم قبولها دون أي تكلفة. إن التخلص من هذا المنتج بشكل صحيح سيساعد في توفير الموارد الثمينة ومنع أي تأثيرات سلبية محتملة على صحة الإنسان والبيئة، والتي قد تنشأ نتيجة التعامل الخاطئ مع النفايات.
الرجاء الاتصال بالسلطة المحلية للحصول على مزيد من التفاصيل حول أقرب نقطة تجميع مخصصة لك.



تنبيه: افصل الجهاز من الكهرباء دائماً قبل إجراء أي أعمال صيانة/فحوص استكشاف الأعطال وإصلاحها.

هل هناك ملحق مفقود؟

- تحقق من المحتويات الموجودة في الصندوق للتأكد من تضمين القطعة بالتأكد مع جهازك.

ما الذي يجعل الجهاز لا يعمل؟

- الجهاز واقف في درج الشطف/التخزين مع تعطيل أزرار التحكم الموجودة في المقبض.
- أخرج الجهاز من درج الشطف/التخزين.
- ربما لا يكون القابس مدملاً بالكامل في مقبس الكهرباء.
- قد لا يكون زر التشغيل/إيقاف التشغيل في وضع التشغيل.
- قد يلزم استبدال المصهر الموجود في القابس. استبدل المصهر دائماً باستخدام مصهر 13 أمبير مطابق للمواصفات البريطانية.
- ربما يوجد خلل في منظم حرارة المحرك. وفي حال حدوث ذلك، أفرغ خزان المياه المتسخة وتحقق من عدم وجود انسدادات. نظّف الفلاتر واترك الجهاز ليهدأ لمدة ساعة تقريباً.

لماذا لا يقوم الجهاز بالالتقاط؟

- ربما تم تنشيط العوامة الموجودة في خزان المياه المتسخة. أفرغ خزان المياه المتسخة، وانتظر ثبات العوامة قبل إعادة تشغيل الجهاز. يُرجى الرجوع إلى قسم "تفريغ خزان المياه المتسخة وتنظيفه".
- قد لا تكون الفرشاة الدوارة مركبة بشكل صحيح. يُرجى الرجوع إلى قسم "خلع الفرشاة الدوارة والتنظيف المتقدم لها".
- ربما لا يكون خزان المياه المتسخة قد تم تجميعه بالشكل الصحيح أو ربما لا يكون قد تم ضغط الغطاء بإحكام. يُرجى الرجوع إلى قسم "تفريغ خزان المياه المتسخة وتنظيفه".
- افحص الفلتر الموجود تحت غطاء خزان المياه المتسخة بحثاً عن الأوساخ والأتربة. يجب غسل الفلتر كل 5 أو 6 مرات استخدام، وتجفيفه قبل إعادة تركيبه، واستبداله كل 6 أشهر. يُرجى الرجوع إلى قسم "خلع الفلتر وتنظيفه واستبداله".
- الفلتر ممبّل. اتركه يجف قبل إعادة التركيب. يُرجى الرجوع إلى قسم "خلع الفلتر وتنظيفه واستبداله".
- تحقق من وجود أي انسدادات وأزلها. انتقل إلى قسم "التحقق من عدم وجود انسدادات".
- افحص العوامة الموجودة في خزان المياه المتسخة بحثاً عن الأوساخ والأتربة. نظّف العوامة وأعد المحاولة. يُرجى الرجوع إلى قسم "تفريغ خزان المياه المتسخة وتنظيفه".
- افحص مجموعة الممسحة المطاطية وغطاء الفرشاة الدوارة بحثاً عن الأوساخ والأتربة. يُرجى الانتقال إلى قسم "خلع مجموعة الممسحة المطاطية وتنظيفها" وقسم "خلع الفرشاة الدوارة والتنظيف المتقدم لها".

لماذا لا يخرج محلول التنظيف/المياه النظيفة؟

- اضغط على الأصبع الموجود في المقبض لإطلاق خليط محلول التنظيف والمياه.
- قد يكون خزان المياه/محلول التنظيف فارغاً. أعد ملء الخزان. يُرجى الرجوع إلى قسم "ملء خزان المياه/محلول التنظيف".
- تأكد من تركيب خزان المياه/محلول التنظيف بإحكام وثباته بصوت نقرة في موضعه الصحيح وإغلاق غطاء الخزان. يُرجى الرجوع إلى قسم "ملء خزان المياه/محلول التنظيف".
- قد يكون صمام خزان المياه/محلول التنظيف عالقاً. احمل خزان المياه/محلول التنظيف فوق الحوض، واضغط على الصمام نحو قاعدة الخزان لتحريره.

ما الذي يجعل الفرشاة الدوارة لا تدور؟

- الجهاز ليس في وضعية مائلة. ضع قدمك على قاعدة الجهاز واسحب المقبض إلى الخلف لإمالة الجهاز. يُرجى الرجوع إلى قسم "التشغيل".
- قد لا تكون الفرشاة الدوارة أو غطاؤها مركبتين بشكل صحيح. يُرجى الرجوع إلى قسم "خلع الفرشاة الدوارة والتنظيف المتقدم لها".
- قد يكون هناك ما يعوق الفرشاة الدوارة. يُرجى الرجوع إلى قسم "خلع الفرشاة الدوارة والتنظيف المتقدم لها".
- افحص الفرشاة الدوارة للتحقق من أي تلف.

لماذا لا تعمل وظيفة التنظيف الذاتي؟

- لن يعمل وضع التنظيف الذاتي إلا عندما يكون الجهاز بوضعية قائمة في درج الشطف/التخزين.
- قد يكون خزان المياه/محلول التنظيف فارغاً. أعد ملء الخزان. يُرجى الرجوع إلى قسم "ملء خزان المياه/محلول التنظيف".

التخزين

ملاحظة مهمة: يجب تخزين الجهاز في مكان بارد وجاف. قبل تخزين الجهاز، تأكد من أن جميع خزانات المياه فارغة، ومن تنظيف الفرشاة الدوارة والفلاتر جيدًا وجفافها.



لُف سلك الكهرباء دون شدّه حول
خطافات التحرير السريع للسلك.



أوقِف الجهاز في درج الشطف /
التخزين بين مرات الاستخدام
لسحب المياه الزائدة وحماية
الأرضية من التلف.



انزع الفلتر والفرشاة الدوارة من
الجهاز، وخزنهما في درج التخزين
بين مرات الاستخدام.

خلع المقبض



اسحب المقبض لخلعه من الجهاز.




اضغط بإحكام بجسم دقيق غير
حاد في فتحة تحرير المقبض.



أدر خطاف التحرير السريع
للسلك لتحرير سلك الكهرباء.


ملاحظة مهمة: بعد كل 5 أو 6 مرات استخدام اغسل الفلتر بمياه دافئة (لا تتجاوز درجة حرارتها 40 درجة مئوية) واتركه لمدة 24 ساعة حتى يجف تمامًا قبل إعادة تركيبه في الجهاز. للتخزين لفترات طويلة، يجب خلع الفلتر وتنظيفه وتخزينه في درج الشطف/التخزين. للحصول على أفضل نتائج من التنظيف، ينبغي استبدال الفلاتر كل 6 أشهر حسب مستوى الاستخدام). تأكد من جفاف جميع الفلاتر وتركيبها في أماكنها قبل استخدام الجهاز.

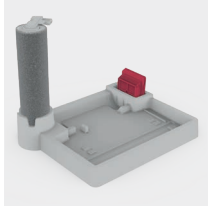

اترك الفلتر حتى يجف في مكان الشطف/التخزين لمدة 24 ساعة على الأقل أو حتى يجف تمامًا قبل إعادة تركيبه.



اغسل الفلتر تحت المياه الجارية (40 درجة مئوية كحد أقصى). واتركه لمدة 24 ساعة على الأقل أو حتى يجف تمامًا قبل إعادة تركيبه.

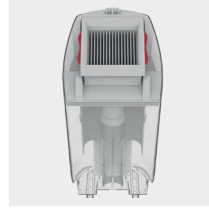

اسحب الفلتر من الألسنة الموجودة على جانبيه لخلعه.



اضغط لأسفل على زر تحرير خزان المياه المتسخة واسحبه لخلعه.

ملاحظة مهمة: أوقف تشغيل الجهاز وافصله دائمًا قبل إجراء الصيانة أو فحوص استكشاف الأعطال وإصلاحها.


التحقق من عدم وجود انسدادات



ملاحظة مهمة: يساعد استخدام وظيفة التنظيف الذاتي بعد كل مرة استخدام على منع تراكم الأوساخ والأتربة.



افحص الجهاز بحثًا عن أي انسدادات واستخدم أداة غير حادة لإزالة الانسداد.

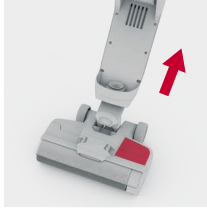


ضع قدمك على قاعدة الجهاز واسحب المقبض إلى الخلف لإمالة الجهاز.



اخلع خزان المياه/محول التنظيف وخزان المياه المتسخة من الجهاز.



خلع مجموعة الممسحة المطاطية وتنظيفها

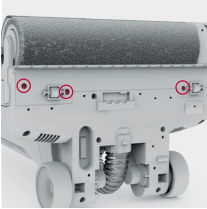


فك البرغي الثلاثة باستخدام مفك برأس متصالب.




ضع الجهاز على ظهره.



اخلع خزان المياه/محول التنظيف وخزان المياه المتسخة من الجهاز.

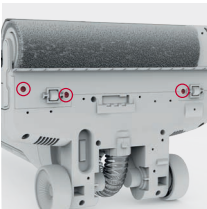


أعد تركيب البرغي الثلاثة وأحكام ربطها.

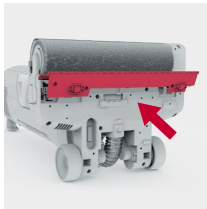

لإعادة تركيب مجموعة الممسحة المطاطية، ركب الألسنة تحت البكرات الموجودة في المجموعة في الجهاز وادفع المجموعة لتثبيتها في موضعها.



اشطف المجموعة تحت المياه (بدرجة حرارة لا تتجاوز 40 درجة مئوية). امسح الممسحة المطاطية لإزالة أي أوساخ وأتربة جافة.

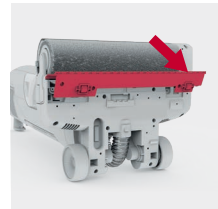

اسحب مجموعة الممسحة المطاطية لخلعها.

ملاحظة مهمة: أوقف تشغيل الجهاز وافصله دائماً قبل إجراء الصيانة أو فحوص استكشاف الأعطال وإصلاحها.

خلع الفرشاة الدوارة والتنظيف المتقدم لها



ملاحظة هامة: إذا تعرضت الفرشاة لعائق، أو لم تُركب بشكل صحيح، ستتوقف الفرشاة وسيتم تشغيل مصباح الفرشاة الدوارة. لإعادة التعيين، قم بإيقاف تشغيل الجهاز، وإزالة العائق، وإعادة تركيب الفرشاة الدوارة وغطاء الفرشاة. للحصول على أفضل نتائج في التنظيف، يجب إجراء عملية تنظيف شاملة للفرشاة الدوارة كل 5-6 استخدامات. للتخزين الطويل، يجب إزالة الفرشاة الدوارة، وتنظيفها، وتخزينها في وعاء الشطف/التخزين.



امسح الغطاء لإزالة أي أوساخ وأتربة جافة.



اشطف الفرشاة الدوارة في المياه (بدرجة حرارة لا تتجاوز 40 درجة مئوية).



ارفع لسان تحرير الفرشاة الدوارة واسحبه لخلع الفرشاة.



اضغط على المشايك الموجودة في غطاء الفرشاة الدوارة وارفع الغطاء لخلعه.



حاذِ غطاء الفرشاة الدوارة وادفعه حتى يثبت في موضعه بصوت نقرة.



ادفع لسان تحرير الفرشاة الدوارة إلى أسفل حتى يثبت في موضعه بصوت نقرة.



لإعادة تركيب الفرشاة الدوارة، ادفع الفرشاة على المحور الدوار.



اترك الفرشاة الدوارة تجف في درج الشطف/التخزين قبل إعادة تركيبها.

شطف الجهاز والتنظيف السريع للفرشاة الدوارة




ملاحظة مهمة: لن يعمل وضع التنظيف الذاتي إلا عندما يكون الجهاز بوضعية قائمة في درج الشطف/التخزين. إذا كان خزان المياه/محلول التنظيف يحتاج إلى الماء أثناء دورة التنظيف الذاتي، سيضيئ مصباح إشارة إضافة المياه (ADD WATER). وسيؤدي ذلك إلى إنهاء الدورة، وإعادة الضبط، أعد ملئ الخزان وأعد تفعيل بالضغط على زر التنظيف الذاتي.



اضغط بقوة على غطاء الخزان لإغلاقه وأعد تركيبه في الجهاز.



اسحب غطاء الخزان لفتحه واملاؤه حتى المنتصف بالمياه (بدرجة حرارة لا تتجاوز 40 درجة مئوية).

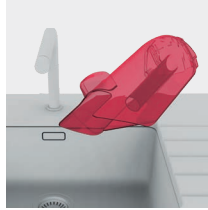


أفرغ خزان المياه المتسخة في حوض أو مرحاض.



أوقف الجهاز في درج الشطف/التخزين. **ملاحظة:** لن يعمل وضع التنظيف الذاتي إلا عندما يكون الجهاز بوضعية قائمة في درج الشطف/التخزين.



أفرغ خزان المياه المتسخة في حوض أو مرحاض.

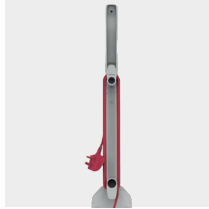

افصل الجهاز من التيار ولف سلك الكهرباء دون شد حول الخطاطيف.




ستدور الفرشاة الدوارة في المياه وسوف تفصل تلقائيًا. تستغرق دورة التنظيف الذاتي 90 ثانية، وستتوقف تلقائيًا عندما تنتهي. لإيقاف دورة التنظيف الذاتي أثناء الدورة، اضغط على زر التنظيف الذاتي (SELF-CLEAN).




اضغط على زر التنظيف الذاتي (SELF-CLEAN) لتفعيل الدورة. سوف يضيئ مصباح إشارة التنظيف الذاتي.



أوقف الجهاز في درج الشطف/التخزين بين مرات الاستخدام لسحب المياه الزائدة وحماية الأرضية من التلف.

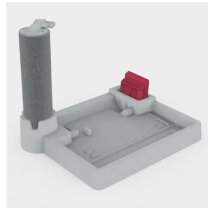

اترك الفلتر حتى يجف في مكان الشطف/التخزين لمدة 24 ساعة على الأقل أو حتى يجف تمامًا قبل إعادة تركيبه.

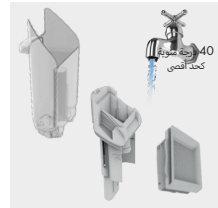

اشطف الخزان والعوامة والفلتر تحت المياه (بدرجة حرارة لا تتجاوز 40 درجة مئوية) لإزالة الأوساخ/الأثرية.

7: الصيانة

ملاحظة مهمة: أوقف تشغيل الجهاز وافصله دائماً قبل إجراء الصيانة أو فحوص استكشاف الأعطال وإصلاحها.

إفراغ وتنظيف خزان المياه المتسخة




ملاحظة مهمة: خزان المياه المتسخة مزود بعوامة. عندما يمتلئ خزان المياه المتسخة، ستغلق العوامة وظيفة الشفط الموجودة في الجهاز. وعندما يحدث ذلك ستزيد ضوضاء محرك الجهاز، وسوف يضيئ مصباح الإشارة الذي يطلب إفراغ المياه المتسخة (EMPTY DIRTY WATER). فور أن يضيئ الزر أو تبدأ العوامة في العمل، تحقق مما إذا كان خزان المياه المتسخة ممتلئاً أم لا، وأفقره إذا لزم الأمر.



اسحب الفلتر من الأسطة
الموجودة على جانبيه لخلعه.




أمسك غطاء خزان المياه المتسخة من أعلى واسحبه لأعلى لخلعه.

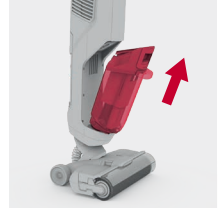

اضغط لأسفل على زر تحرير خزان
المياه المتسخة واسحبه لخلعه.




لإعادة التركيب، أمل خزان المياه
المتسخة، واجعل الجهة الأمامية
للخزان محاذية لموضعه في
الجهاز. ادفع إلى الخلف حتى
يثبت في موضعه بصوت نقرة.

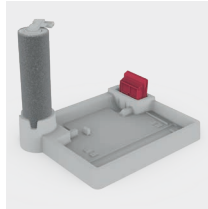

اترك الفلتر حتى يجف في مكان
الشفط/التخزين لمدة 24 ساعة
على الأقل أو حتى يجف تماماً قبل
إعادة تركيبه.



اشطف الخزان والعوامة والفلتر
تحت المياه (بدرجة حرارة لا
تجاوز 40 درجة مئوية) لإزالة
الأوساخ/الأتربة.

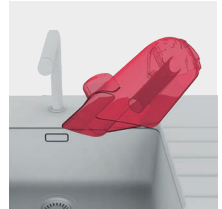

أفقر خزان المياه المتسخة في
حوض أو مرحاض.



1. BOOST (التعزيز)

للمناطق شديدة الاتساخ.

2. WASH (الغسيل)

يضيئ عند الضغط على أصبع التشغيل وإطلاق المياه/محلول التنظيف.

3. ADD WATER (أضف مياه)

يضيئ للإشارة عند الحاجة إلى إعادة ملء خزان المياه/محلول التنظيف.

4. BRUSH ROLL (الفرشاة الدوارة)

يضيئ عند إعاقة الفرشاة الدوارة أو عدم تركيب الفرشاة أو غطاها بالشكل الصحيح.

5. EMPTY DIRTY WATER (أفقر المياه المتسخة)

يضيئ ويومض عند امتلاء خزان المياه المتسخة والحاجة إلى تفريغه.

6. SELF-CLEAN (التنظيف الذاتي)

سيتم التشغيل فقط عند الوقوف في وعاء الشطف/التخزين. يضيء ويومض عند التشغيل، بمجرد التشغيل، يتم تفعيل وضع التنظيف تلقائيًا ويبدأ في دورة تنظيف تستمر لمدة 90 ثانية لإزالة أي أوساخ أو رواسب متبقية من الفرشاة في رأس الجهاز والخرطوم.




للحصول على أفضل النتائج، ضع المياه/محلول التنظيف في الشوط المتجه للأمام، واترك الأصبع أثناء الشوط الراجع للخلف لشطف المياه/محلول التنظيف، لمزيد من التجفيف النهائي، نظف بعد ذلك بشوط جاف دون الضغط على أصبع التشغيل.



اضغط على الأصبع الموجود في المقبض لإطلاق المياه ومحلول التنظيف. سوف يضيئ مصباح الغسيل (WASH) في الشاشة الرقمية.



اضغط على زر التشغيل/الإيقاف لتشغيل الجهاز.

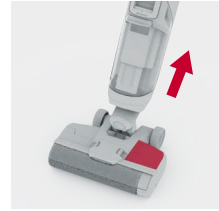

ضع قدمك على قاعدة الجهاز واسحب المقبض إلى الخلف لإزالة الجهاز.



لتنظيف الحواف بالشكل الأمثل، شغل الجهاز في خط مواز للحواف.



لا تقاطع الأوساخ بالشكل الأمثل من خطوط ملاط الأرضية العميق، ضع الفرشاة الدوارة فوق الملامط وحركها فوق الخط.



لتنظيف المناطق شديدة الاتساخ، قم بتفعيل وضع التعزيز + boost. سيظهر وضع التعزيز على شاشة العرض.

ملاحظة مهمة: سيضيئ مصباح الإشارة إلى إضافة المياه (ADD WATER) عند حاجة خزان المياه/محلل التنظيف إلى إعادة الملء أثناء الاستخدام.



لإعادة تركيب الخزان، حاذِ قاعدته مع الجهاز وادفعه إلى الخلف حتى يثبت في موضعه بصوت نقرة.



اضغط على غطاء الخزان بقوة لإغلاقه.



اسحب غطاء الخزان لفتحه واملأه بالمياه (بدرجة حرارة لا تتجاوز 40 درجة مئوية) وبالمحلول حتى العلامات الموجودة على الخزان.




اضغط على زر تحرير خزان المياه/محلل التنظيف واسحب الخزان لخلعه من الجهة الخلفية للجهاز.

التشغيل

ملاحظة مهمة: خزان المياه المتسخة مزود بعوامة. عندما يمتلئ خزان المياه المتسخة، ستغلق العوامة وظيفة الشفط الموجودة في الجهاز. وعندما يحدث ذلك ستزيد وضوء محرك الجهاز، وسوف يضيئ مصباح الإشارة الذي يطلب إفراغ المياه المتسخة (EMPTY DIRTY WATER). فور أن يضيئ الزر أو تبدأ العوامة في العمل، تحقق مما إذا كان خزان المياه المتسخة ممتلئاً أم لا، وأفرغه إذا لزم الأمر.



اربط السلك في خطاف السلك بحيث لا يتعرض السلك للسحب أو الاشتباك أو يتعثر به الجهاز أثناء الاستخدام.

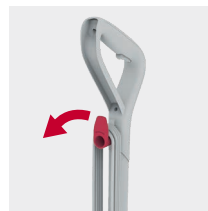

أدر خطاف التحرير السريع للسلك لتحرير سلك الكهرباء.



أخرج الجهاز من درج الشفط / التخزين.
ملاحظة: لن تعمل أزرار التحكم الموجودة في المقبض أثناء وجود الجهاز بوضعية قائمة في درج الشفط / التخزين.

تُرجى قراءة قسم "معلومات السلامة العامة" في البداية قبل الاستخدام

ملاحظة مهمة: تحقق من ملائمة استخدام الجهاز من الشركة المصنعة للأرضيات واختبره على مساحة صغيرة غير ظاهرة من الأرضية قبل استخدامه. وفي حال عدم حدوث أي تلف، استمر في التنظيف. هذا الجهاز غير مناسب للاستخدام على الأرضيات الحساسة للمياه.

عند استخدام الجهاز، يجب دائمًا الالتزام باحتياطات السلامة الأساسية.

توخّ الحذر من الإفراط في تشبيع الأرضية بالمياه. أنه عملية التنظيف دائمًا بشوط جاف (دون الضغط على أصبح التشغيل). بالنسبة للمناطق كثيفة الاتساخ، قد يكون من الضروري تكرار عملية التنظيف.

لا تستخدم سوى محاليل تنظيف HOOVER للأرضيات. قد يتسبب استخدام محاليل تنظيف أخرى في زيادة الرغبة وسيؤدي إلى إبطال ضمان جهازك.

ينبغي ملء خزان المياه النظيفة/محلول التنظيف بالمياه الدافئة فقط (بدرجة حرارة لا تتجاوز 40 درجة مئوية). فقد يؤدي ملء خزان المياه/محلول التنظيف بمياه ساخنة/مغلقة إلى إتلاف الجهاز وإبطال الضمان.

أفرغ خزان المياه المتسخة واشطفه واتركه ليحفظ في الهواء قبل تخزينه. لا تترك المياه/محلول التنظيف في الخزانات لفترة طويلة. يمكن كمية بسيطة من المياه/محلول التنظيف في الخزان لفترات قصيرة بين مرات التنظيف إذا كان الجهاز يُستخدم بانتظام.


ضع الجهاز دائمًا في وضعية قائمة في درج الشطف/التخزين عند عدم استخدامه.

للتخزين لفترات طويلة، يجب خلع الفرشاة الدوارة والفلانر وتنظيفها وتجفيفها وتخزينها في درج الشطف/التخزين.


التجميع



أوقف الجهاز في درج الشطف/التخزين بين مرات الاستخدام لسحب المياه الزائدة وحماية الأرضية من التلف.

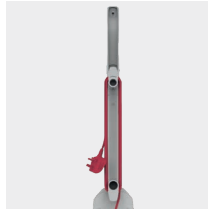

لّف سلك الكهرباء دون شدّه حول خطافات التحرير السريع للسلك.

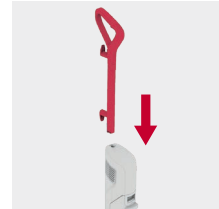


أدخل المقبض في الجسم الرئيسي للجهاز حتى يستقر في موضعه بصوت نقرة.

1. لا تستخدم الجهاز في مناطق داخلية مغلقة، وحافظ على الإضاءة الجيدة للمنطقة التي تنظفها.
2. أبقِ الأصابع والشعر والملابس الفضفاضة بعيدًا عن الأجزاء المتحركة في الجهاز وفتحاته أثناء الاستخدام.
3. اختبر ملائمة الجهاز للأرضية قبل استخدامه.
4. هذا الجهاز غير مناسب لتنظيف الدرج.
5. هذا الجهاز غير مخصص للاستخدام من قبل الأشخاص (بما في ذلك الأطفال) الذين يعانون من قصور جسدي أو حسي أو عقلي، أو نقص في الخبرة والمعرفة، إلا إذا تم تقديم الإشراف أو التوجيه لهم بشأن استخدام الجهاز من قبل شخص مسؤول عن سلامتهم.
6. يجب مراقبة الأطفال للتأكد من عدم استخدامهم للجهاز كلعبة.
7. لا يجوز استخدام سوى محلول التنظيف الموصى به من HOOVER في هذا الجهاز. وقد يؤدي استخدام محلول تنظيف آخر إلى إتالال الضمان.
8. لا تترك الجهاز متصلاً بالكهرباء دون إشراف.
9. لا تستخدم الجهاز إذا تعرض للسقوط أو التلف أو الغمر في المياه أو إذا تُرك في الهواء الطلق.
10. لا يجوز تشغيل الجهاز فوق سلك الكهرباء ولا يجوز استخدامه في حال تلف السلك أو القابس. في حالة تلف سلك الكهرباء، يجب استبداله بمعرفة شخص مؤهل لتجنب التعرض للخطر.
11. لا تستخدم الجهاز للالتقاط أي مواد قابلة للاشتعال أو الاحتراق (سائل الولاة، البنزين، الكيروسين، وما إلى ذلك) أو تستخدم الجهاز في منطقة بها أبخرة أو سوائل قابلة للانفجار.
12. لا تُمسك القابس أو تستخدم الجهاز ويدك مبللتين.
13. ولا تسحب الجهاز أو تحمله من سلك الكهرباء.
14. لا يجوز استخدام الجهاز لشطف الفم الساخن أو أعقاب السجائر أو الثقاب أو الأعراض المحترقة الساخنة، ولا استخدامه في منطقة قد تكون فيها سوائل ضارة (مثل الكلور والمبيض ومنظف أنابيب الصرف المحتوي على الأمونيا).
15. لا يجوز استخدام سلك الكهرباء كمقبض لتحريك الجهاز، ولا جذب السلك حول الأركان أو الحواف الحادة، ولا إغلاق الأبواب عليه.
16. لا تفصل الجهاز من الكهرباء بجذب سلك الكهرباء.
17. لا تحمل الجهاز أثناء عمله.
18. لا تحاول إزالة الانسدادات باستخدام أدوات حادة، إذ قد يؤدي ذلك إلى إتلاف الجهاز. وأزل الانسدادات وفقاً للتعليمات الواردة في هذا الدليل فقط.
19. لا تستخدم الجهاز بجهد كهربائي غير مناسب، فقد يؤدي ذلك إلى تلف الجهاز أو تعرض المستخدم للإصابة. وستجد الجهد الكهربائي المناسب مودوًا على ملصق التصنيف.
20. لا تقصّ في تشيع الأرضيات بالسوائل. أنه عملية التنظيف دائماً بشروط جاف.
21. لا يجوز استخدام الجهاز على سطح تالف أو غير مستوٍ أو مجهز بشكل غير صحيح.
22. يُرجى الرجوع إلى توصيات العناية الصادرة من الشركة المصنعة قبل استخدام الجهاز ومحلول التنظيف. اختبر كل الأرضيات قبل استخدام الجهاز عليها بالكامل، ويمكن تشغيل الجهاز فوق قطعة صغيرة مخفية، وفي حال عدم ظهور تلف أو تغير في اللون يمكنك الاستمرار في التنظيف. هذا الجهاز غير مناسب للاستخدام على الأرضيات الحساسة للمياه.
23. لا يجوز ملء خزان المياه النظيفة إلا بمياه دافئة (لا تتجاوز درجة حرارتها 40 درجة مئوية). فقد يؤدي ملء خزان المياه النظيفة بمياه ساخنة أو مغلية إلى إتلاف الجهاز وإبطال الضمان.
24. نظف الأرضيات دائماً بالمكنسة الكهربائية جيداً قبل استخدام الجهاز.
25. استبدل بالمصهر الموجود في المقبس دائماً مصهراً موافقاً للمعايير البريطانية بقوة 13 أمبير.
26. افصل الجهاز دائماً من مصدر الكهرباء قبل إجراء أي صيانة.
27. افحص دائماً الجهاز وقاعدة الجهاز والفرشاة الدوارة وتأكد من عدم وجود أي تلف أو أوساخ أو أتربة فيها قبل الاستخدام.
28. تجب حماية سلك الكهرباء دائماً من الأسطح الساخنة واللهب المكشوف.
29. يجب إيقاف تشغيل جميع أزرار التحكم في الجهاز قبل فصل سلك الكهرباء أو توصيله. بعد الاستخدام، لف سلك الكهرباء دائماً حول مشابك السلك المزود بها الجهاز.
30. أبقِ سلك الكهرباء دائماً بعيداً عن الفرشاة الدوارة أثناء استخدام الجهاز.
31. لا يجوز استخدام سوى أسلاك تمديد بقوة 13 أمبير معتمدة من المفوضية الأوروبية/مطابقة لمعايير المملكة المتحدة (CE/UKCA)، فقد تؤدي الأسلاك غير المعتمدة إلى فرط السخونة. يجب توخي الحذر عند ترتيب سلك التمديد لأن ذلك قد يسبب التعثر.
32. لا تستخدم الجهاز إلا بعدما تكون جميع خزانات المياه والفلاتر في موضعها الصحيح.
33. أبقِ جميع الفتحات خالية ونظيفة من الركام إذ قد يؤثر ذلك على تدفق الهواء/الشطف/شطف المياه.
34. استخدم الجهاز دائماً في وضعية قائمة. لحماية المحرك من التلف بفعل المياه المتسخة، لا تُمسك الجهاز مقلوباً أبداً أو مُلقى على جانبه.
35. يجب تخزين الجهاز في مكان بارد وجاف. قبل تخزين الجهاز، يُرجى التأكد من تفريغ جميع خزانات المياه والمرشحات جيداً وجفافها.

يُرجى الاحتفاظ بالتعليمات للرجوع إليها مستقبلاً.

- 1 المقبض
- 2 تشغيل/إيقاف تشغيل الطاقة
- 3 زر التعزيز
- 4 زر وضع التنظيف الذاتي
- 5 لوحة عرض الوظائف
- 6 الوحدة الرئيسية
- 7 زر تحرير خزان المياه المتسخة
- 8 فلتر (مخفي)
- 9 خزان المياه المتسخة
- 10 أزرار تحرير غطاء الفرشاة الدوارة
- 11 غطاء الفرشاة الدوارة
- 12 لسان تحرير الفرشاة الدوارة
- 13 الفرشاة الدوارة
- 14 أصبع التشغيل
- 15 مشبك السلك
- 16 خطاف التحرير السريع للسلك
- زر تحرير
- 17 خزان المياه النظيفة/محلول التنظيف
- 18 خزان المياه النظيفة/محلول التنظيف
- 19 درج الشطف/التخزين
- 20 محلول 250 مل

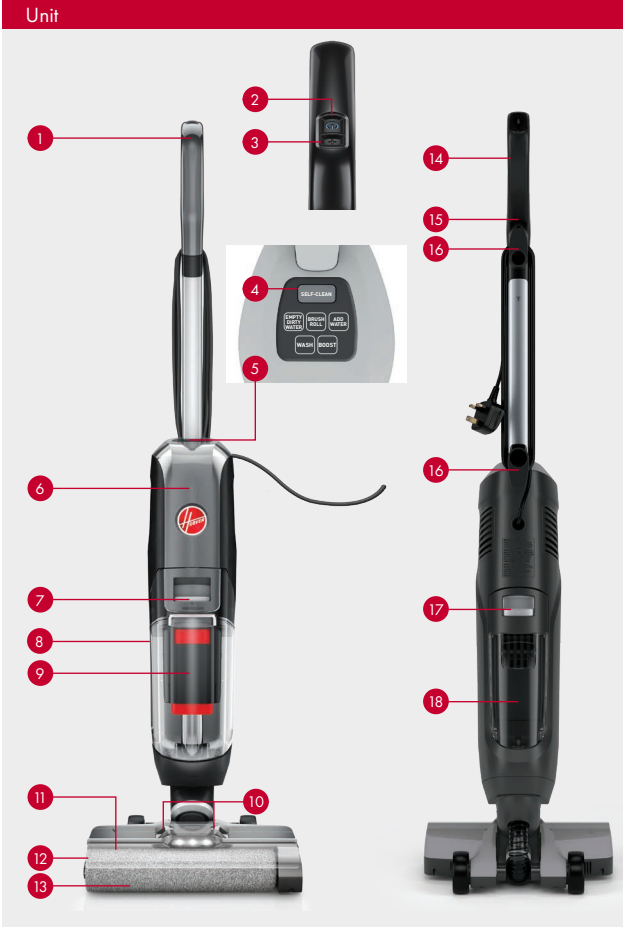

الملحقات





Streamline

دليل المستخدم

CDHF-SLME
Hoover.ae
Hoover.sa