



**ONE  
PWR**  
SYSTEM

**CORDLESS**

## **SPOTLESS GO**

Cordless Spot Washer

User Guide



CLCW-MSME

[hoover-mea.com](http://hoover-mea.com)

## 2 IMPORTANT SAFETY INFORMATION

**This machine is intended for household use only and NOT for commercial or industrial use.**

**PLEASE KEEP INSTRUCTIONS FOR FURTHER USE AND USE ONLY AS INSTRUCTED IN THIS GUIDE.**

- Don't leave the charger plugged in when unattended.
- Don't use the machine if it is faulty or has been dropped, damaged or left outdoors.
- Don't use the machine to pick up any flammable or combustible materials (lighter fluid, petrol, kerosene etc.) or use the machine in an area with explosive vapours or liquid.
- Don't use the machine to pick up hot coals, cigarette butts, matches or smoking hot burning items or use in an area where there may be harmful fluids (chlorine, bleach and ammonia drain cleaner).
- Don't handle the charger, battery or use the machine with wet hands.
- Don't unplug the charger by pulling on the power cord.
- Don't use the charger if the charger cord or plug is damaged.
- Don't attempt to remove blockages with sharp objects as this may cause damage to the machine.
- Don't use the machine with the incorrect battery or charger as this may result in damage or injury to the user. The correct battery charger information is listed on the battery pack ratings label.
- Don't charge the battery outdoors, or leave the charger connected to the mains when not in use.
- Don't use the machine with a damaged battery. If the battery is damaged return the machine, battery and charger to the point of purchase.
- Don't carry the machine while it's switched on.
- Only Hoover ONEPWR batteries (BV15020ME/BV15030ME/BV15040ME) and charger (BV05100ME) should be used with this machine.
- Only Hoover ONEPWR recommended tools and accessories should be used with this machine.
- Refer to the floor/surface manufacturer's care recommendations before use.  
Test your flooring/surface - run the machine over a small hidden area, if no damage or discolouration occurs continue cleaning. Not suitable for use on water sensitive flooring.
- Always remove the battery from the machine before carrying out any maintenance or if storing unused for a long period of time.
- Keep all openings clear and free from debris as this may affect the airflow/suction.
- Turn off all controls on the machine before disconnecting or connecting the battery.
- Always protect the charger power cord from heated surfaces or near open flames.

# IMPORTANT SAFETY INFORMATION 3

- Store the machine in a cool, dry area. Before storing ensure all water/solution tanks and filters are thoroughly clean and dry.
- The machine can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the machine in a safe way and understand the hazards involved. Children shall not play with the machine. Cleaning and user maintenance shall not be made by children without supervision.
- Only use the machine indoors and keep the area you're cleaning well lit. Keep fingers, hair and loose clothing away from moving parts and openings whilst using the machine.
- Use only CE approved 13amp extension cords, non-approved extension cords may overheat. Care should be taken to arrange the extension cord as it can be a trip hazard.
- The water/solution tank should be filled with warm water (max 40°C) only. Filling the water/solution tank with hot or boiling water will damage the machine and invalidate the guarantee. Always use the machine with all water/solution tanks and filters in place.
- Only Hoover recommended solution should be used with the machine. Using other solutions may invalidate the guarantee.
- Always use the machine in an upright position. To prevent motor damage from dirty water, never hold the machine upside down or on its side. Always stand the machine on a stable, level surface.

## **BATTERY SAFETY PRECAUTIONS**

- Replace the battery with a Hoover ONEPWR battery only. Use of another battery may present a risk of fire or explosion.
- Do not attempt to disassemble the battery, remove any component projecting from the battery terminals and do not dispose of in a fire.  
The battery and charger have no user serviceable parts. Fire or injury may result.
- Prior to disposal, protect exposed terminals with heavy insulating tape to prevent shorting. The battery is to be disposed of safely at your local battery recycling centre.
- When the battery pack is not in use, keep it away from other metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- In case of battery leakages, avoid any contact with skin. Return the machine, battery and charger to the point of purchase.

# 4 GENERAL INFORMATION

## Service and Help

If you have any queries or concerns about using your Hoover spot washer, visit [hoover-mea.com](https://www.hoover-mea.com)

## Consumables

To purchase spares and accessories, please visit [hoover-mea.com](https://www.hoover-mea.com)

The use of genuine Hoover spare parts helps to maintain optimised performance and validates your guarantee.

## Technical Specifications

Weight (without battery pack)	2.9kg
Water/solution tank capacity	225ml
Dirty water tank capacity	295ml

Run time and charge time dependent on battery pack used.

Subject to technical change without notice.

© 2020 Techtronic Floor Care Technology Ltd

Waste electrical products should not be disposed of with household waste.

Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

This marking on the product(s) and/or accompanying documents means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling.

Please contact your local authority for further details of your nearest designated collection point.



# MACHINE OVERVIEW 5



- 1 Power ON/OFF
- 2 Carry handle
- 3 Dirty water tank release latch
- 4 Battery dock
- 5 Water/solution tank
- 6 Dirty water tank
- 7 Main unit
- 8 Wash tool
- 9 Hose
- 10 Multi-purpose attachment
- 11 Squeegee attachment
- 12 Pet attachment
- 13 ONEPWR Battery
- 14 ONEPWR Charger
- 15 250ml Multi-floor Solution

## Accessories



10



11



12



13



14



15

# 6 OPERATION


## Charging the battery

**IMPORTANT:** THIS MACHINE IS ONLY TO BE USED WITH HOOVER ONEPWR BATTERIES AND CHARGER. PLEASE READ THE SAFETY GUIDE BEFORE USE.

Before first use, ensure the battery is fully charged. Failure to fully charge the battery before first use may result in poor battery performance. The life expectancy of the battery will vary depending on the usage of the machine.



Slide the battery down on to the charger.

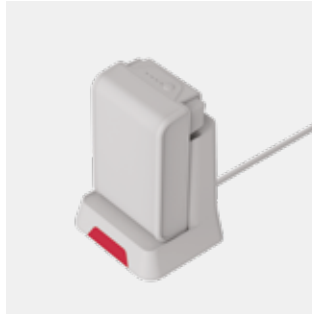

The charger light will flash white to show when the battery is charging. The light on the charger will stop flashing and go off when the battery is fully charged.




Once fully charged, slide the battery off the charger to remove.




To check the battery charge level press the battery symbol.

## Assembly

**WARNING:** The brushbar in the powered head constantly rotates when switched on. Never use the powered head on one spot for an extended period of time as the brushbar may damage the floor surface. Always turn the powered head brushbar off when cleaning hard floors. To prevent any damage being sustained, test on an inconspicuous area of the flooring first.

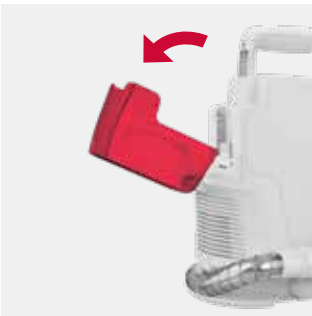

Pull to open the battery cover.

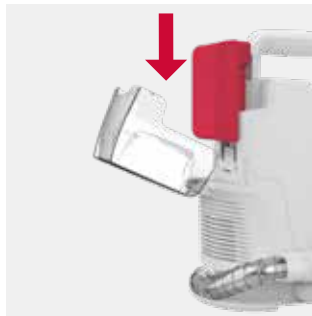

Holding the cover open, slide the battery into the machine until it clicks into place.



Close the battery cover.

# OPERATION 7

**IMPORTANT:** Before using the machine to clean dried-on stains and dirt, the flooring should be vacuumed thoroughly.

- Test for colourfastness - Wet a white absorbent cloth with the solution. In a small hidden area of your carpet/rugs/upholstery/hard floors, gently rub with the dampened cloth. Wait ten minutes and check for colour removal or bleed with white paper towel or cloth. Check all carpets/rugs/upholstery material before first use and if your carpet has more than one colour, check all colours.
- Test all carpets/rugs/upholstery/hard floors before use. Test the spot washer on a small hidden area. If no damage or pile distortion occurs continue cleaning.
- Move furniture out of the area to be cleaned. If the furniture cannot be moved, place aluminium foil or wax paper under the legs. This will prevent wood finishes from staining your carpet. Pin up furniture skirts and curtains.
- When using the spot washer, basic safety precautions should always be observed and don't over saturate your carpets/rugs/upholstery/hard floors.
- Only use Hoover ONEPWR Multi-floor solution. Using other solutions may cause excess foaming and will invalidate your guarantee.
- The water/solution tank should only be filled with warm water (max 40°C). Filling the water/solution tank with hot/boiling water will damage your washer and invalidate the guarantee.

## Filling the water/solution tank



Lift to remove the water/solution tank from the side of the machine.



Unscrew the cap and fill to the water and solution markers on the tank.



Replace the cap and push the tank down on to the machine until it clicks into place.



Press the on/off button to switch the washer on.

**IMPORTANT:** Your dirty water tank is fitted with a float. When the dirty water tank is full, the float will shut off the suction on the spot washer. You will be able to hear if this has happened as the motor noise on the washer will increase. Once the float is activated, empty the dirty water tank if full.

If the dirty water tank is not full then turn off your washer at the power switch and wait for the float to settle.


## 8 OPERATION

**IMPORTANT:** For heavily soiled areas, it may be necessary to repeat the cleaning process. Make criss-crossing strokes across the original pattern and overlap with each pass.

### Using the spot washer and tools



Lift the wash tool and hose out of the holder to release from the side of the machine.

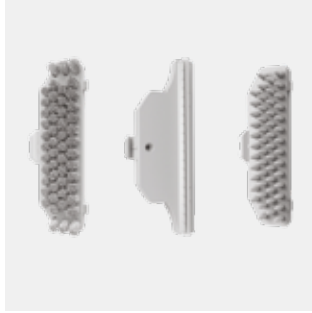

Select the desired tool attachment.



Hook the tabs on the selected attachment into the wash tool and clip into place.



Press the trigger on the handle to release water and solution.



Use the brush to agitate any stubborn stains.



Release the trigger to recover the water and solution.



# MAINTENANCE 9

**CAUTION:** Always switch off the machine and remove the battery before carrying out any maintenance or troubleshooting.

**IMPORTANT:** Empty and rinse out the water/solution tank and dirty water tank and leave to air dry before replacing. Do not leave solution stored in the tanks between uses.

## Emptying and cleaning the dirty water tank



Press the dirty water tank release latch and pull the tank to remove.



Lift the lid to remove from the dirty water tank.



Empty the dirty water over the sink. Rinse the dirty water tank and lid under water (max 40°C) to remove dirt/debris.



Replace the lid.



To re-fit, tilt the dirty water tank and line the front of the tank up onto spot washer. Push back until it clicks into place.

# 10 MAINTENANCE

**WARNING:** Always switch off the machine and remove the battery before carrying out any maintenance or troubleshooting.

## Cleaning the filter



Press the dirty water tank release latch and pull the tank to remove.



Remove any dirt and debris from the filter located underneath the dirty water tank.

**IMPORTANT:** Before using the machine to clean dried-on stains and dirt, the flooring should be vacuumed thoroughly. This will prevent a build up of dirt and debris in the hose and nozzle.

If the nozzle is fitted incorrectly, this will cause poor dirty water pick up.

## Cleaning the wash tool nozzle



Push the button on the wash tool to release the nozzle.




Rinse the nozzle under water to remove dirt/debris.



Refit the nozzle onto the wash tool.

## Cleaning and removing blockages in the hose

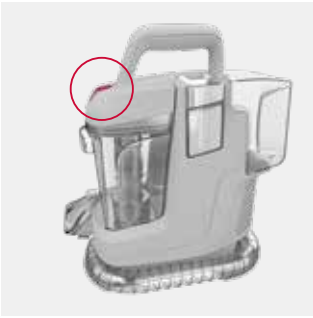

Press the dirty water tank release latch and pull the tank to remove.



Release the hose from the side of the washer.



Lie the washer on to its side and undo the 3 screws on the base.



Pull to remove the hose assembly from the base of the washer.



Rinse the hose under warm water (40°C) to remove any dirt and debris.

# 12 FAQs

## **Is there an accessory missing?**

Check the contents on the back of the box.

## **Why does the machine have no power?**

- The battery is not fitted correctly. See 'Inserting the battery'.
- The battery has no charge. See 'Charging the battery'.

## **Why won't the solution/water dispense?**

- Squeeze the trigger on the hose to release solution and water mix.
- Make sure the water/solution tank is fitted securely. See 'Filling the water/solution tank'.
- The water/solution tank valve may be stuck, hold the water/solution tank over the sink and press the valve underneath to release.
- The water/solution tank is empty. Refill the tank. See 'Filling the water/solution tank'.

## **Why won't the spot washer pick up?**

- The float in the dirty water tank may have been activated. Empty the dirty water tank and wait for the float to settle before re-starting your machine.
- Check the hose for blockages and clear. See 'Cleaning and removing blockages in the hose'.
- Check the nozzle for blockages and clear. See 'Cleaning the wash tool nozzle'.
- The dirty water tank may not be assembled correctly or the lid may not be pushed down securely. See 'Emptying and cleaning the dirty water tank'.
- Check the nozzle is correctly fitted. See 'Cleaning the wash tool nozzle'.
- Check the filter located under the dirty water tank for dirt and debris. See 'Cleaning the filter'.

هل هناك قطعة ملحقة مفقودة؟

تفقد المحتويات الموجودة على الجزء الخلفي من الصندوق.

ما سبب عدم وصول التيار الكهربائي إلى الجهاز؟

- عدم تركيب البطارية بشكل صحيح. راجع القسم "إدخال البطارية".
- البطارية فارغة من الشحن. راجع القسم "شحن البطارية".

ما سبب عدم إخراج المحلول/الماء؟

- اضغط على الزر الموجود على الخرطوم لإخراج خليط المحلول والماء.
- تأكد من تركيب خزان الماء/المحلول بشكل محكم. راجع "ملء خزان الماء/المحلول".
- ربما يكون صمام خزان الماء/المحلول ملتصقًا، احمل خزان الماء/المحلول فوق الحوض واضغط على الصمام الموجود أسفل لإخراج الماء.
- خزان الماء/المحلول فارغ. أعد ملء الخزان. راجع "ملء خزان الماء/المحلول".

ما سبب تعذر امتصاص جهاز تنظيف البقع للماء/المحلول؟

- قد يكون الجسم العائم في خزان الماء المتسخ في حالة نشطة. أفرغ خزان الماء المتسخ وانتظر حتى يستقر الجسم العائم قبل إعادة تشغيل الجهاز.
- افحص الفوهة للتأكد من خلوها من أي انسدادات وقم بإزالتها إن وُجدت. راجع "تنظيف وإزالة الانسدادات داخل الخرطوم".
- افحص الفوهة للتأكد من خلوها من أي انسدادات وقم بإزالتها إن وُجدت. راجع "تنظيف فوهة أداة الغسيل".
- ربما لم يتم تركيب خزان الماء المتسخ بشكل صحيح أو لم يتم تثبيت الغطاء بشكل محكم. راجع "إفراغ وتنظيف خزان الماء المتسخ".
- تأكد من تركيب الفوهة بشكل صحيح. راجع "تنظيف فوهة أداة الغسيل".
- افحص الفلتر الموجود أسفل خزان الماء المتسخ للتأكد من خلوه من الأوساخ والبقايا. راجع "تنظيف الفلتر".



ضع الجهاز على جانبه وفك البراغي الثلاثة من القاعدة.



حذر الخرطوم من جانب الجهاز.



اضغط على قفل تحرير خزان الماء المتسخ واسحب الخزان لإخراجه.



اغسل الخرطوم تحت الماء الجاري الدافئ (40 درجة سيلزيوس) لإزالة أي أوساخ وبقايا.



اسحب مجموعة الخرطوم لفصلها عن قاعدة الجهاز.

تحذير: يجب دومًا إيقاف تشغيل الجهاز وإخراج البطارية قبل إجراء أي أعمال صيانة أو استكشاف الأعطال وإصلاحها.

## تنظيف الفلتر



أزل أي أوساخ وبقايا من الفلتر الموجود أسفل خزان الماء المتسخ.



اضغط على قفل تحرير خزان الماء المتسخ واسحب الخزان لإخراجه.

معلومة مهمة: قبل استخدام الجهاز لتنظيف البقع والأوساخ الجافة، يجب تنظيف الأرضية بالمكنسة الكهربائية جيدًا. حيث يساعد ذلك في منع تراكم الأوساخ والبقايا بداخل الخرطوم والفوهة.

إذا لم يتم تركيب الفوهة على نحو صحيح، فسيؤدي ذلك إلى ضعف امتصاص الماء المتسخ.

## تنظيف فوهة أداة الغسيل



أعد تركيب الفوهة على أداة الغسيل.



اغسل الفوهة تحت الماء الجاري لإزالة الأوساخ/البقايا.



اضغط على الزر الموجود على أداة الغسيل لتحرير الفوهة.

## 9 الصيانة

تنبيه: يجب دومًا إيقاف تشغيل الجهاز وإخراج البطارية قبل إجراء أي أعمال صيانة أو استكشاف الأعطال وإصلاحها.

معلومة مهمة: قم بإفراغ وشطف خزان الماء/المحلول وخزان الماء المتسخ واركبهما يرفقان في الهواء قبل إعادتهما إلى الجهاز. لا تترك المحلول بداخل الخزانات بين مرات استعمال الجهاز.

### إفراغ وتنظيف خزان الماء المتسخ



ارفع الغطاء لخلعه من خزان الماء المتسخ.



اضغط على قفل تحرير خزان الماء المتسخ واسحب الخزان لإخراجه.



لإعادة التركيب، قم بإمالة خزان الماء المتسخ ومحاذاة الجزء الأمامي للخزان مع جهاز تنظيف البقع. اضغط عليه للخلف حتى يستقر في مكانه بإحكام.



أعد تركيب الغطاء.



أفرغ الماء المتسخ في الحوض. اغسل خزان الماء المتسخ والغطاء تحت الماء الجاري (بحد أقصى 40 درجة سيلزيوس) لإزالة الأوساخ/البقايا.




معلومة مهمة: بالنسبة للأجزاء شديدة الاتساخ، قد يتطلب الأمر تكرار عملية التنظيف. قم بإجراء حركات متقاطعة على النقش الأصلي مع جعل الحركات متداخلة مع بعضها بعضاً.

## استخدام جهاز تنظيف البقع والأدوات



اربط الأستة على الملحق المحدد بأداة الغسيل وثبتها في مكانها بإحكام.

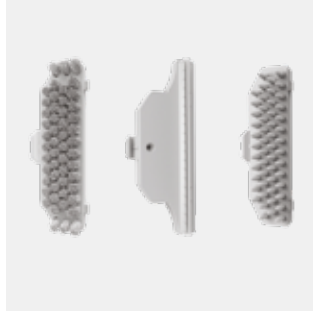

حدد ملحق الأداة المطلوبة.



ارفع أداة الغسيل والخرطوم إلى خارج الحامل لتحريرهما من جانب الجهاز.



حرر الزر لاستعادة الماء والمحلول.



استخدم الفرشاة لتسهيل إزالة أي بقع عنيدة.



اضغط على الزر الموجود على المقبض لإخراج المحلول والماء.

## 7 التشغيل

**معلومة مهمة:** قبل استخدام الجهاز لتنظيف البقع والأوساخ الجافة، يجب تنظيف الأرضية بالمكنسة الكهربائية جيداً.

- اختبار ثبات الألوان - بلل قطعة قماش بيضاء شديدة الامتصاص بالمحلول. استخدم قطعة القماش المبللة في فرك جزء صغير ومخفي من السجادة/المفرش/قماش التنجيد/الأرضيات الصلبة برفق. انتظر عشر دقائق وافحص اللون للتحقق من عدم إزالته أو تغيره باستخدام منشفة ورقية أو قطعة قماش بيضاء. افحص جميع السجاد/المفارش/أقمشة التنجيد قبل أول استخدام وإذا كانت السجادة بأكثر من لون واحد، فافحص جميع الألوان.
- اختبر جميع السجاد/المفارش/أقمشة التنجيد/الأرضيات الصلبة قبل الاستخدام. قم بتشغيل جهاز تنظيف البقع على جزء صغير مخفي. وإذا لم يحدث أي تلف أو تشوه للبلورات، فواصل التنظيف.
- انقل الأثاث خارج المنطقة التي سيتم تنظيفها. وإذا تعذر نقل الأثاث، فضع رقائق الألومنيوم أو ورق الشمع أسفل السيقان. حيث يحول ذلك دون إحداث الطبقة الخارجية للأرضيات الخشبية بقع على السجاد. ارفع الحاشية القماشية للأثاث والستائر.
- ينبغي دوماً اتباع احتياطات الأمان الأساسية عند استخدام جهاز تنظيف البقع، وعدم غمر السجاد/المفارش/أقمشة التنجيد/الأرضيات الصلبة.
- استخدم فقط محلول ONEPWR من هوفر لتنظيف الأرضيات المتعددة. فقد يؤدي استخدام المحاليل الأخرى إلى تكوين رغوة زائدة وإبطال الضمان.
- يجب ملء خزان الماء/المحلول فقط بالماء الدافئ (بعد أقصى 40 درجة سيلزيوس). حيث يؤدي ملء الخزان بالماء الساخن/المغلي إلى إتلاف الجهاز وإبطال الضمان.

### ملء خزان الماء/المحلول



أعد وضع الغطاء واضغط على الخزان لأسفل على الجهاز حتى يستقر في مكانه.



فك الغطاء واملاءً حتى تصل إلى علامات الماء والمحلول على الخزان.



ارفع خزان الماء/المحلول لإزالته من جانب الماكينة.


**معلومة مهمة:** خزان الماء المتسخ مجهز بجسم عائيم. فعندما يمتلئ الخزان عن آخره، يخلق هذا الجسم العائم وظيفة الشفط لجهاز تنظيف البقع. وسيكون يوسعك سماع صوت حال حدوث ذلك عندما ترتفع الضوضاء الصادرة عن محرك الجهاز. بمجرد تنشيط الجسم العائم، يجب إفراغ خزان الماء المتسخ إن كان ممتلئاً.

إذا لم يكن الخزان ممتلئاً فأوقف تشغيل الجهاز بواسطة مفتاح التشغيل وانتظر حتى يستقر الجسم العائم.



اضغط على زر التشغيل/الإيقاف لتشغيل جهاز التنظيف.

معلومة مهمة: يجب استخدام هذا الجهاز فقط مع بطاريات وشاحن ONEPWR من هوفر. الرجاء قراءة دليل السلامة قبل الاستخدام. قبل الاستخدام لأول مرة، تأكد من شحن البطارية بالكامل. قد يؤدي عدم شحن البطارية تمامًا قبل الاستخدام للمرة الأولى إلى ضعف أداء البطارية. ويتباين العمر الافتراضي للبطارية حسب استعمال الجهاز.

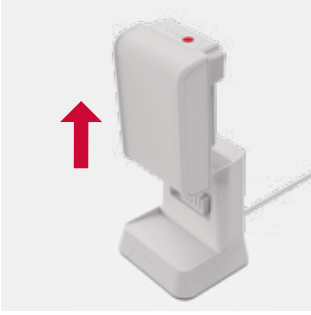


وبمجرد أن يتم شحنها بالكامل، حرك البطارية إلى خارج الشاحن لإخراجها.


لفحص مستوى شحن البطارية اضغط على رمز



البطارية.

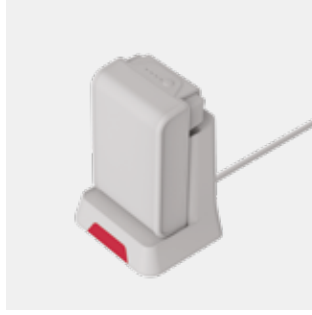

سيومض مصباح الشاحن بلون أبيض لإظهار أن البطارية قيد الشحن. ويتوقف المصباح الموجود على الشاحن عن الوميض وينطفئ عندما يتم شحن البطارية بالكامل.

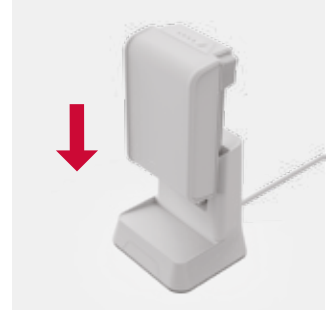

حرك البطارية للأسفل فوق الشاحن.

## التجميع


تحذير: يدور قضيب الفرشاة في الرأس الآلي بشكل مستمر أثناء تشغيل الجهاز. لا تستخدم الرأس الآلي في موضع واحد فوق أي سطح لفترة زمنية طويلة؛ لأن ذلك قد يتسبب في إتلاف سطح الأرضية. ويجب دائماً إيقاف تشغيل قضيب الفرشاة في الرأس الآلي عند تنظيف الأرضيات الصلبة. وللوقاية من حدوث أي أضرار، قم أولاً باختبار الجهاز على منطقة مخفية من الأرضية.



أغلق غطاء البطارية.



مع الاحتفاظ بالغطاء مفتوحًا، حرك البطارية إلى داخل الجهاز حتى تستقر في مكانها.

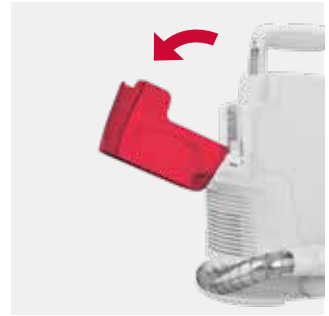

اسحب لفتح غطاء البطارية.

## 5 نظرة عامة على الجهاز



- 1 زر التشغيل/إيقاف التشغيل
- 2 مقبض حمل الجهاز
- 3 قفل تحرير خزان الماء المتسخ
- 4 مساحة البطارية
- 5 خزان الماء/المحلول
- 6 خزان الماء المتسخ
- 7 الوحدة الرئيسية
- 8 أداة الغسيل
- 9 الخرطوم
- 10 ملحق متعدد الأغراض
- 11 ملحق ممسحة مطاطية
- 12 ملحق للحيوانات الأليفة
- 13 بطارية ONEPWR
- 14 شاحن ONEPWR
- 15 محلول تنظيف الأرضيات المتعددة 250 مل

### Accessories



15



14



13



12



11



10

## الخدمة والمساعدة

إذا كانت لديك أي استفسارات أو مخاوف بشأن استخدام جهاز تنظيف البقع من هوفر، تفضل بزيارة الموقع [hoover-mea.com](http://hoover-mea.com)

## المستلزمات الاستهلاكية

لشراء قطع الغيار والملحقات، تفضل بزيارة موقعنا الإلكتروني: [hoover-mea.com](http://hoover-mea.com). إن استخدام قطع غيار هوفر الأصلية يساعد في الحفاظ على الأداء الأمثل وعلى سلامة ضمانك.

## المواصفات الفنية

الوزن (بدون حزمة البطارية)	2.9 كجم
سعة خزان الماء/المحلول	225 مل
سعة خزان الماء المتسخ	295 مل

يتوقف وقت التشغيل ووقت الشحن على حزمة البطارية المستخدمة. خاضع للتغيير الفني بدون إشعار.

© 2020 Techtronic Floor Care Technology Ltd

ينبغي ألا يتم التخلص من نفايات المنتجات الكهربائية عن طريق طرحها مع النفايات المنزلية. الرجاء إعادة تدويرها إن وجدت مراكز إعادة التدوير. راجع الأمر مع السلطة المحلية أو بائع التجزئة للحصول على النصائح المتعلقة بإعادة التدوير.

إن وجود هذه العلامة على المنتج (المنتجات) و/أو المستندات المصاحبة له يعني أن المعدات الكهربائية والإلكترونية المستعملة لا يجب الخلط بينها وبين النفايات المنزلية العامة. للحصول على المعالجة والاسترداد وإعادة التدوير بشكل صحيح، من فضلك خذ هذا المنتج (هذه المنتجات) إلى نقاط التجميع المخصصة حيث سيتم قبولها دون أي تكلفة. إن التخلص من هذا المنتج بشكل صحيح سيساعد في توفير الموارد الثمينة ومنع أي تأثيرات سلبية محتملة على صحة الإنسان والبيئة، والتي قد تنشأ نتيجة التعامل الخاطئ مع النفايات.

الرجاء الاتصال بالسلطة المحلية للحصول على مزيد من التفاصيل حول أقرب نقطة تجميع مخصصة لك.



### 3 معلومات السلامة المهمة

- قم بتخزين الجهاز في منطقة جافة وباردة. قبل تخزين الجهاز، يُرجى التأكد من أن جميع خزانات الماء/المحلول والفلاتر نظيفة وجافة تمامًا.
- يمكن استخدام هذا الجهاز بواسطة الأطفال الذين يبلغون من العمر 8 سنوات أو أكبر وكذلك بواسطة الأشخاص الذين يعانون من قصور جسدي أو حسي أو عقلي أو نقص الخبرة والمعرفة بشرط خضوعهم للإشراف وتوعيتهم بالإرشادات الخاصة باستخدام الجهاز بطريقة آمنة وأن يتفهموا المخاطر الكامنة. ينبغي ألا يعبث الأطفال بهذا الجهاز. ينبغي ألا يقوم الأطفال بالتنظيف أو بخطوات الصيانة التي يقوم بها المستخدم دون الإشراف عليهم.
- لا تستخدم هذا الجهاز إلا في أماكن داخلية وحافظ على الإضاءة الجيدة في المنطقة التي تقوم بتنظيفها. أبعِد أصابع اليد والشعر والملابس الفضفاضة بعيدًا عن الأجزاء المتحركة والفتحات أثناء استخدام الجهاز.
- لا تستخدم سوى أسلاك إطالة معتمدة من CE بمعايرة 13 أمبيرًا لأن أسلاك الإطالة غير المعتمدة قد تؤدي إلى زيادة السخونة. ينبغي توخي الحذر لوضع سلك الإطالة بحيث يتم تجنب خطر التعثر فيه.
- يجب ملء خزان الماء/المحلول بالماء الدافئ (بحد أقصى 40 درجة سيلزيوس) فقط. حيث يؤدي ملء الخزان بالماء الساخن أو المغلي إلى إتلاف الجهاز وإبطال الضمان. استخدم الجهاز دومًا مع وجود جميع خزانات الماء/المحلول والفلاتر في أماكنها.
- ينبغي عدم استخدام سوى المحلول الذي توصي شركة هوفر (Hoover) به مع هذا الجهاز. حيث قد يؤدي استخدام محاليل أخرى إلى إبطال الضمان.
- استخدم الجهاز دومًا في وضع قائم. للحيلولة دون تلف المحرك بسبب الماء المتسخ، لا تقلب الجهاز أبدًا رأسًا على عقب أو على جانبه. وأوقف الجهاز دومًا على سطح مستقر ومستوي.

#### التدابير الوقائية لسلامة البطارية

- لا تستبدل البطارية إلا ببطارية هوفر ONEPWR. فقد يؤدي استخدام بطارية أخرى إلى خطر نشوب حريق أو وقوع انفجار.
- لا تحاول تفكيك البطارية أو إزالة أي مكونات بارزة من أطراف التوصيل بها ولا تتخلص منها بإلقائها في النار.
- لا تشمل البطارية والشاحن على أجزاء يسمح للمستخدم بصيانتها. قد يؤدي ذلك إلى نشوب حريق أو وقوع إصابة.
- قبل التخلص من البطارية، احمِ أطراف التوصيل المكشوفة بشرائط عازل ثقيل لمنع حدوث تقاصر كهربائي. ويجب التخلص من البطارية بأمان في مركز إعادة تدوير البطاريات المحلي بمنطقتك.
- في حالة عدم استخدام حزمة البطارية، احتفظ بها بعيدًا عن الأجسام المعدنية الأخرى التي قد تؤدي إلى حدوث اتصال من طرف توصيل لآخر.
- فقد يؤدي حدوث دائرة قصيرة بين طرفي البطارية إلى الإصابة بحروق أو نشوب حريق.
- في حالة حدوث تسربات بالبطارية، تجنب ملامستها للجلد. وأعد الجهاز والبطارية والشاحن إلى نقطة الشراء.

صُنِعَ هذا الجهاز للاستخدام المنزلي فقط وليس للاستخدام التجاري أو الصناعي.

الرجاء الاحتفاظ بالتعليمات من أجل استخدامها بعد ذلك ولا تستخدم هذا الجهاز إلا حسب التعليمات الواردة في هذا الدليل.

- لا تترك الجهاز متصلًا بالشاحن من دون إشراف.
- لا تستخدم الجهاز إذا كان معيبًا أو في حالة سقوطه أرضًا أو تلفه أو تركه في أماكن خارجية.
- لا تستخدم الجهاز للاتقاط أي مواد قابلة للاشتعال أو قابلة للاحتراق (سائل الولاغات، البنزين، الكيروسين، وما إلى ذلك) أو تستخدمه في مكان تنتشر به الأبخرة أو السوائل القابلة للانفجار.
- لا تستخدم الجهاز في التقاط أعقاب جمرات الفحم المشتعلة أو أعقاب السجائر أو عيدان النقااب أو الأشياء المشتعلة التي ينبعث الدخان منها ولا تستخدمه في منطقة قد تكون بها سوائل ضارة (مثل الكلور ووسائل التبييض ومنقي الصرف من الأمونيا).
- لا تمسك الشاحن أو البطارية أو تستخدم الجهاز بيدين مبتلتين.
- لا تنزع الشاحن عن طريق سحبه من سلك التيار الكهربائي.
- لا تستخدم الشاحن إذا كان سلك أو قابس الشاحن تالفًا.
- لا تحاول إزالة الانسدادات باستخدام أجسام حادة لأن ذلك قد يؤدي إلى إتلاف الجهاز.
- لا تستخدم الجهاز مع جهد أو شاحن غير مناسب لأن ذلك قد يؤدي إلى إتلافه أو إصابة المستخدم. معلومات البطارية والشاحن الصحيحة مدرجة على ملصق التصنيف الموجود على حزمة البطارية.
- لا تشحن البطارية في أماكن خارجية مفتوحة أو تترك الشاحن متصلًا بمصدر التيار الكهربائي عند عدم استخدام الجهاز.
- لا تستخدم الجهاز إذا كانت البطارية تالفة. وفي هذه الحالة أعد الجهاز والبطارية والشاحن إلى نقطة الشراء.
- لا تحمل الجهاز بينما يكون قيد التشغيل.
- يجب فقط استخدام بطاريات ONEPWR (BV15020ME/BV15030ME/BV15040ME) وشاحن (BV05100ME) من هوفر مع هذا الجهاز.
- يجب ألا يتم استخدام سوى الأدوات والملحقات التي توصي Hoover ONEPWR بها مع هذا الجهاز.
- ارجع إلى توصيات العناية بالأرضيات/الأسطح التي توفرها الجهة المصنعة قبل الاستخدام.
- اختبر الأرضيات/الأسطح - شغّل الجهاز على منطقة صغيرة غير ملحوظة، وإذا لم يحدث أي تلف أو تغير للألوان فواصل التنظيف. الجهاز غير مناسب للاستخدام على الأرضيات الحساسة للماء.
- أخرج البطارية دومًا من الجهاز قبل إجراء أي أعمال صيانة أو في حالة تخزين الجهاز وعدم استخدامه لمدة طويلة.
- احتفظ بكل الفتحات خالية من الأوساخ؛ لأن ذلك قد يؤثر في تدفق الهواء/الشفط.
- أوقف تشغيل كل مفاتيح التحكم في الجهاز قبل فصل البطارية أو توصيلها.
- قم دائمًا بحماية سلك التيار الكهربائي الخاص بالشاحن من الأسطح الساخنة أو عند الاقتراب من ألسنة اللهب المكشوفة.



**ONE  
PWR**  
SYSTEM

**CORDLESS**

## **SPOTLESS GO**

جهاز تنظيف البقع اللاسلكي

دليل المستخدم



CLCW-MSME

[hoover-mea.com](http://hoover-mea.com)